




**HOTPLATE, BURNER HEADS & CAPS, PAN SUPPORTS**

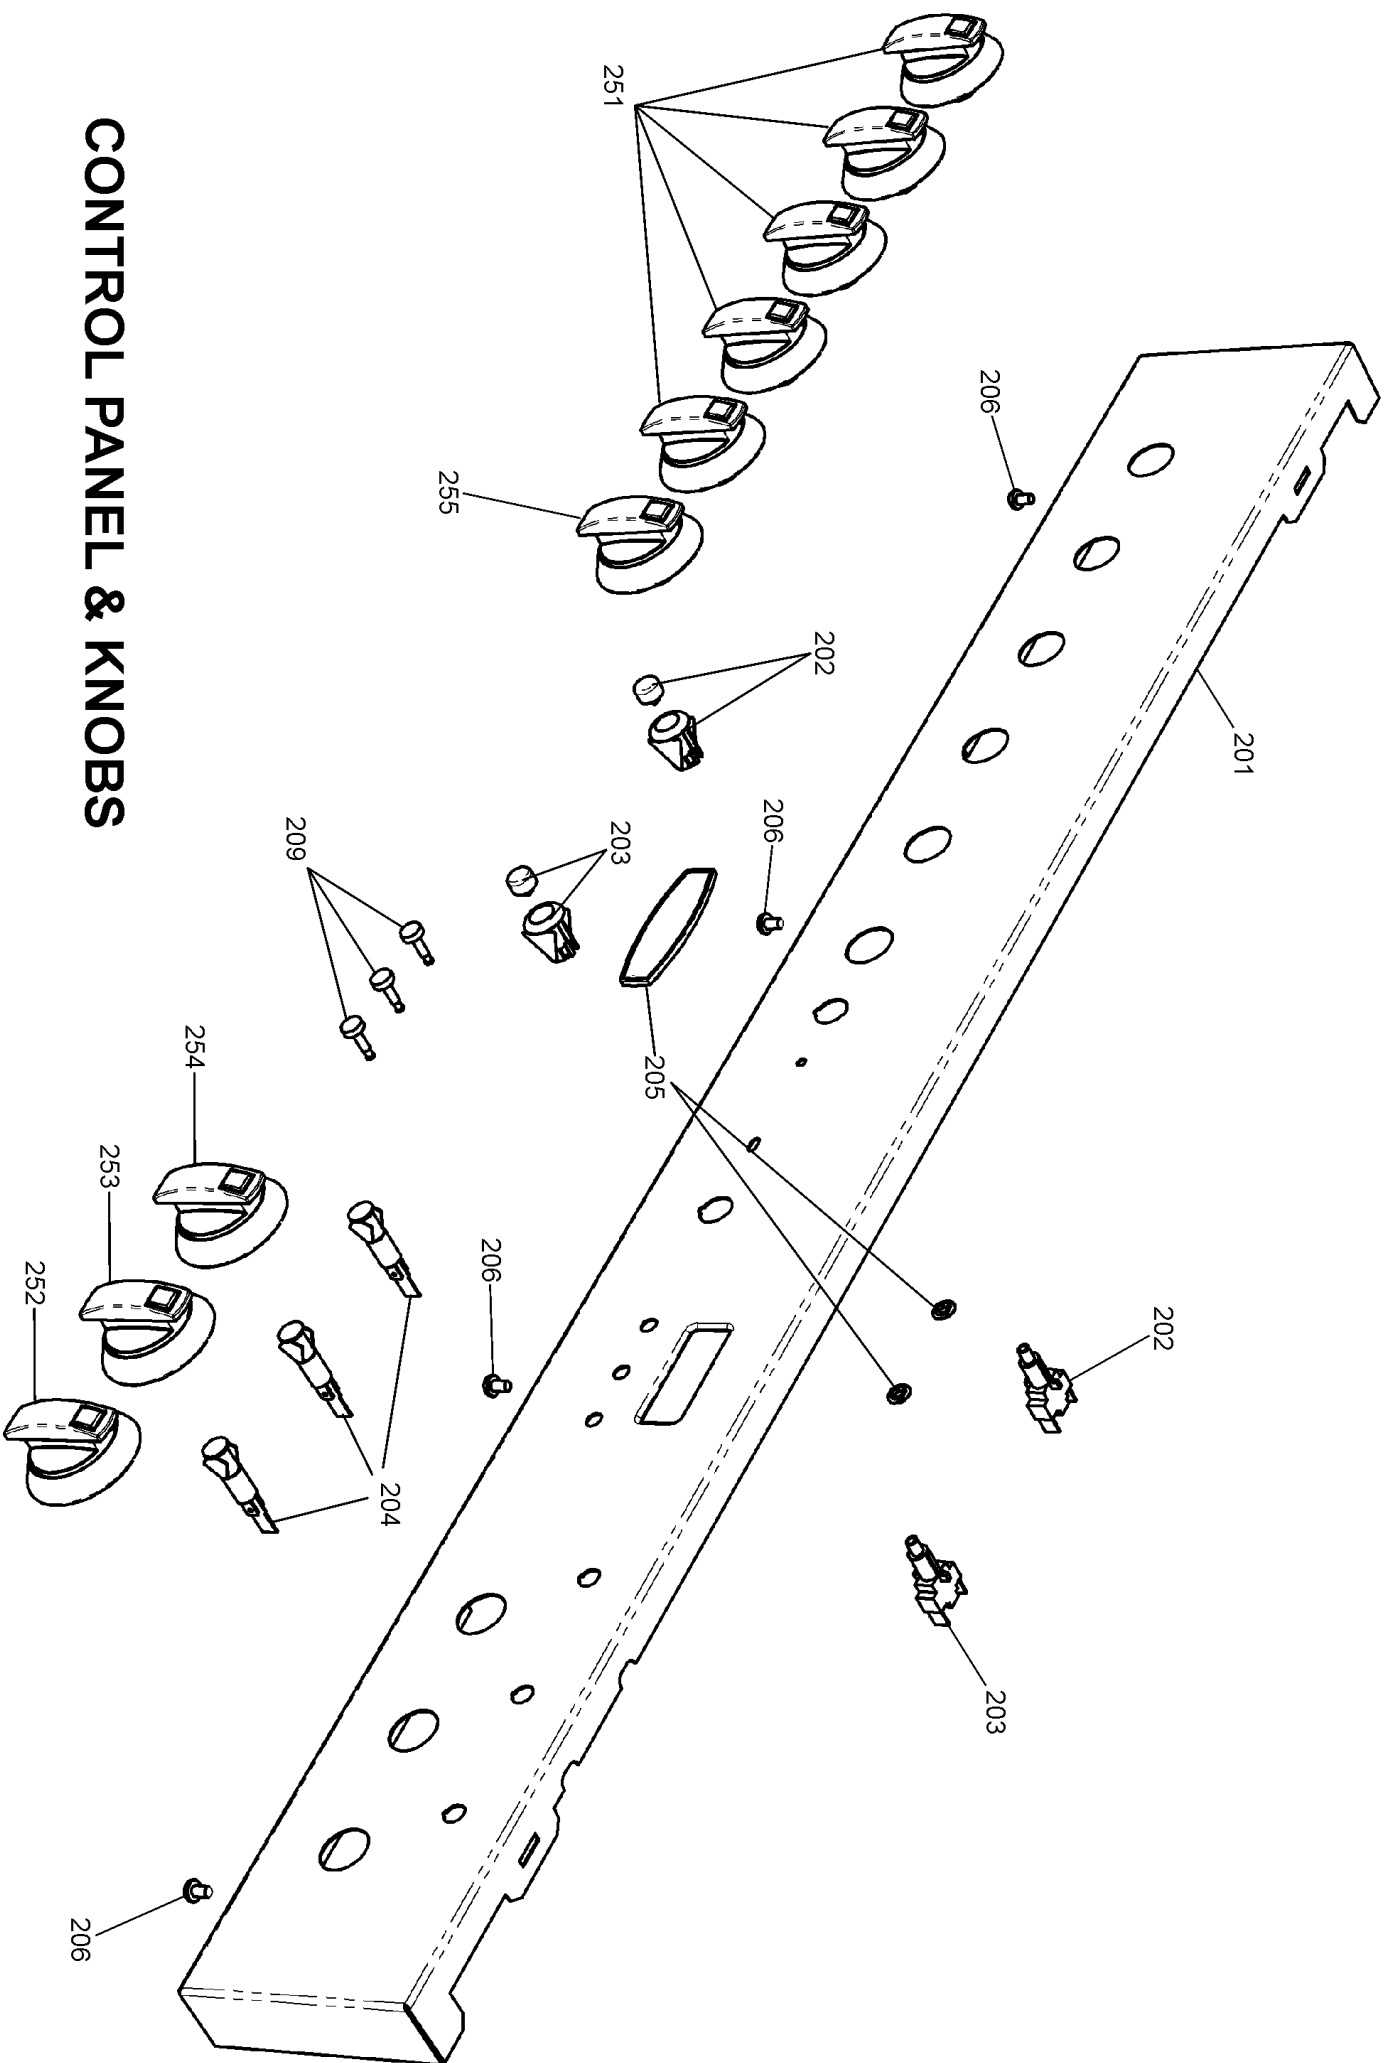


**CONTROL PANEL & KNOBS**

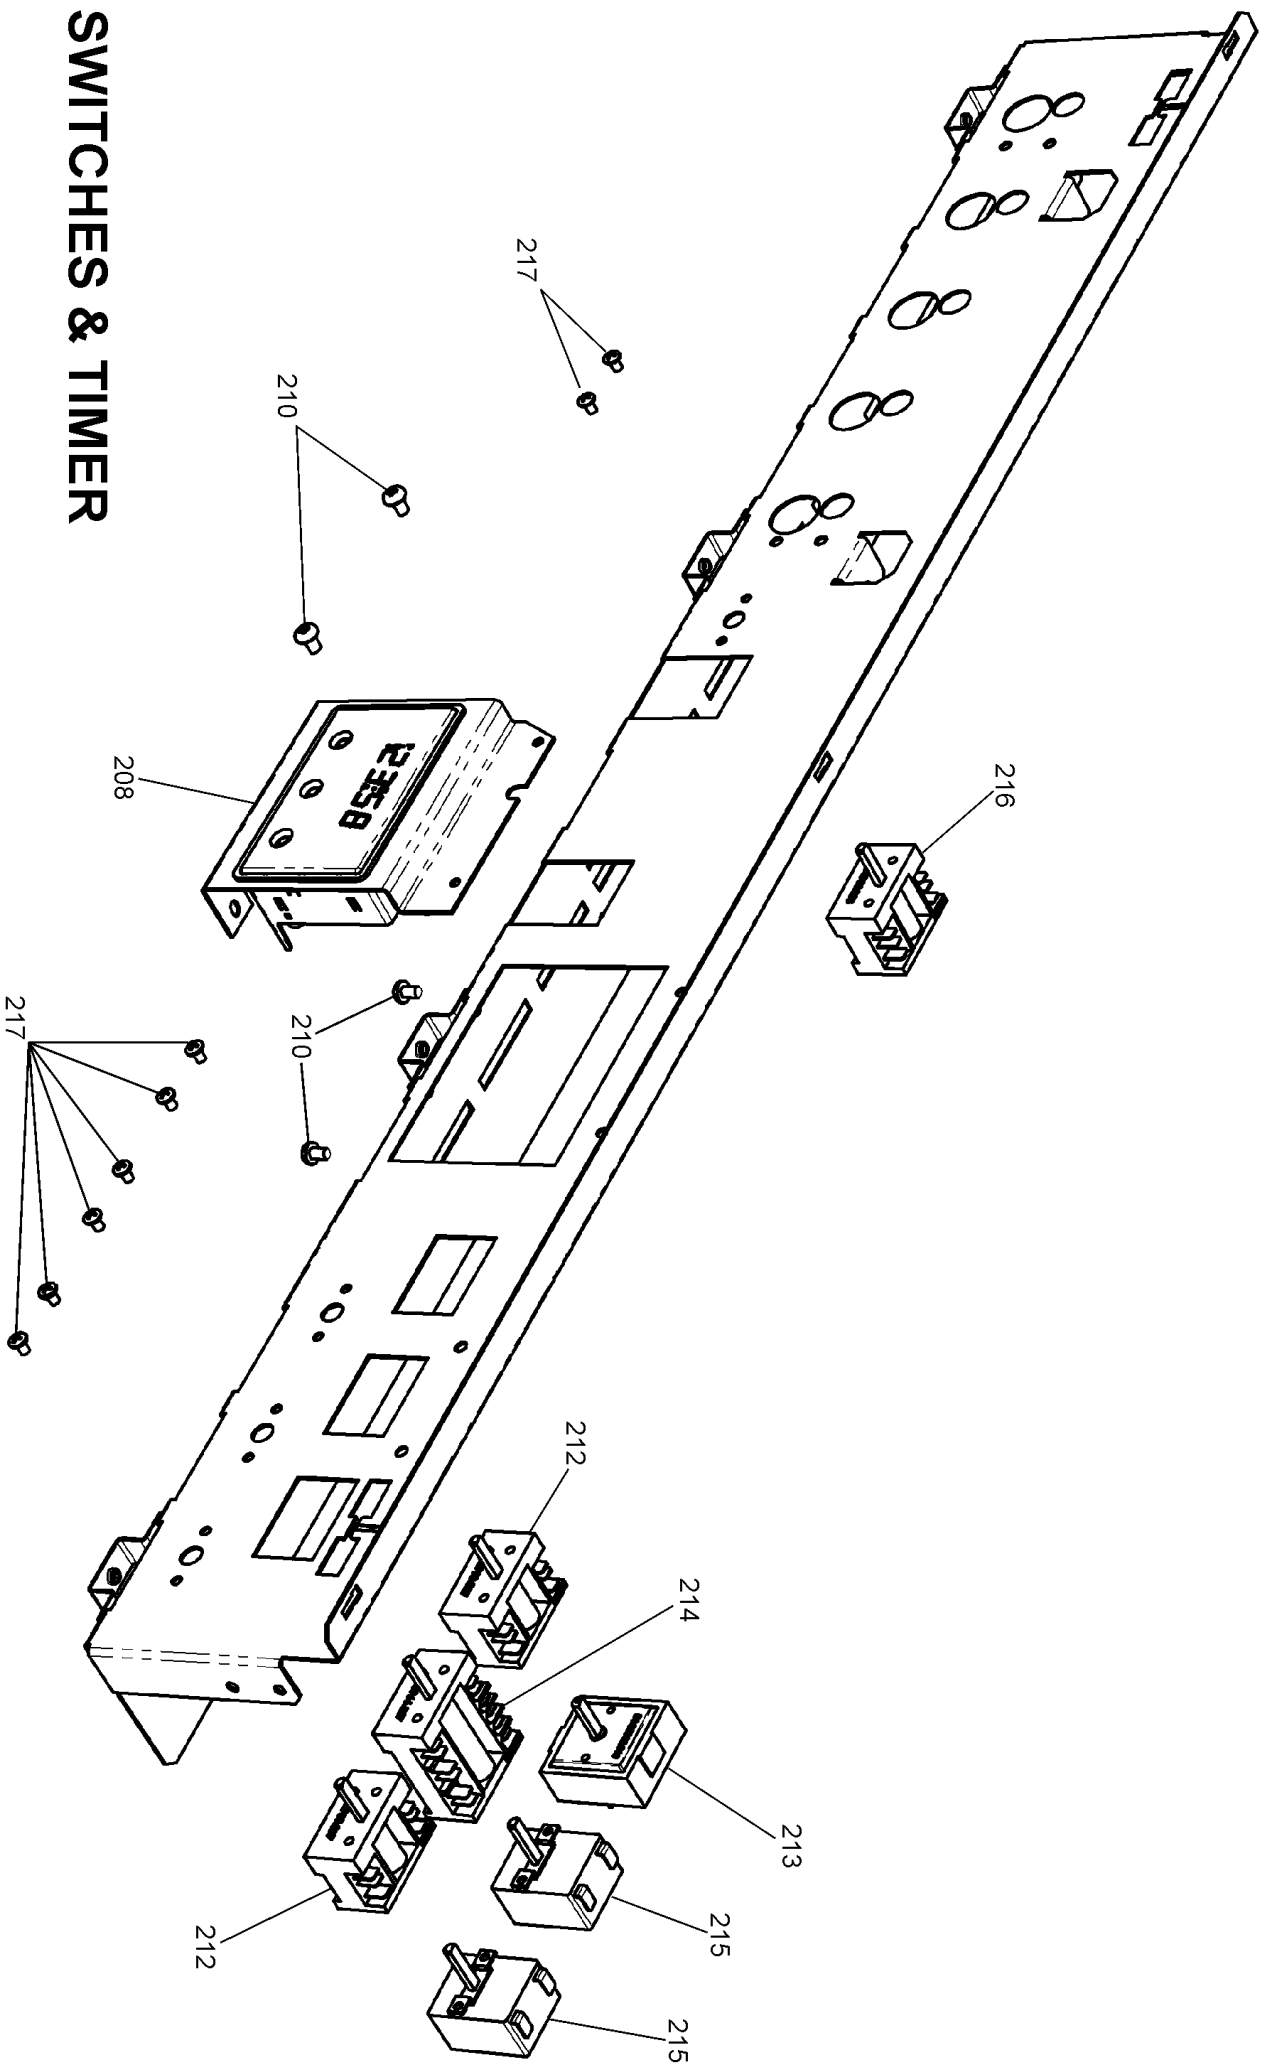

**SWITCHES & TIMER**

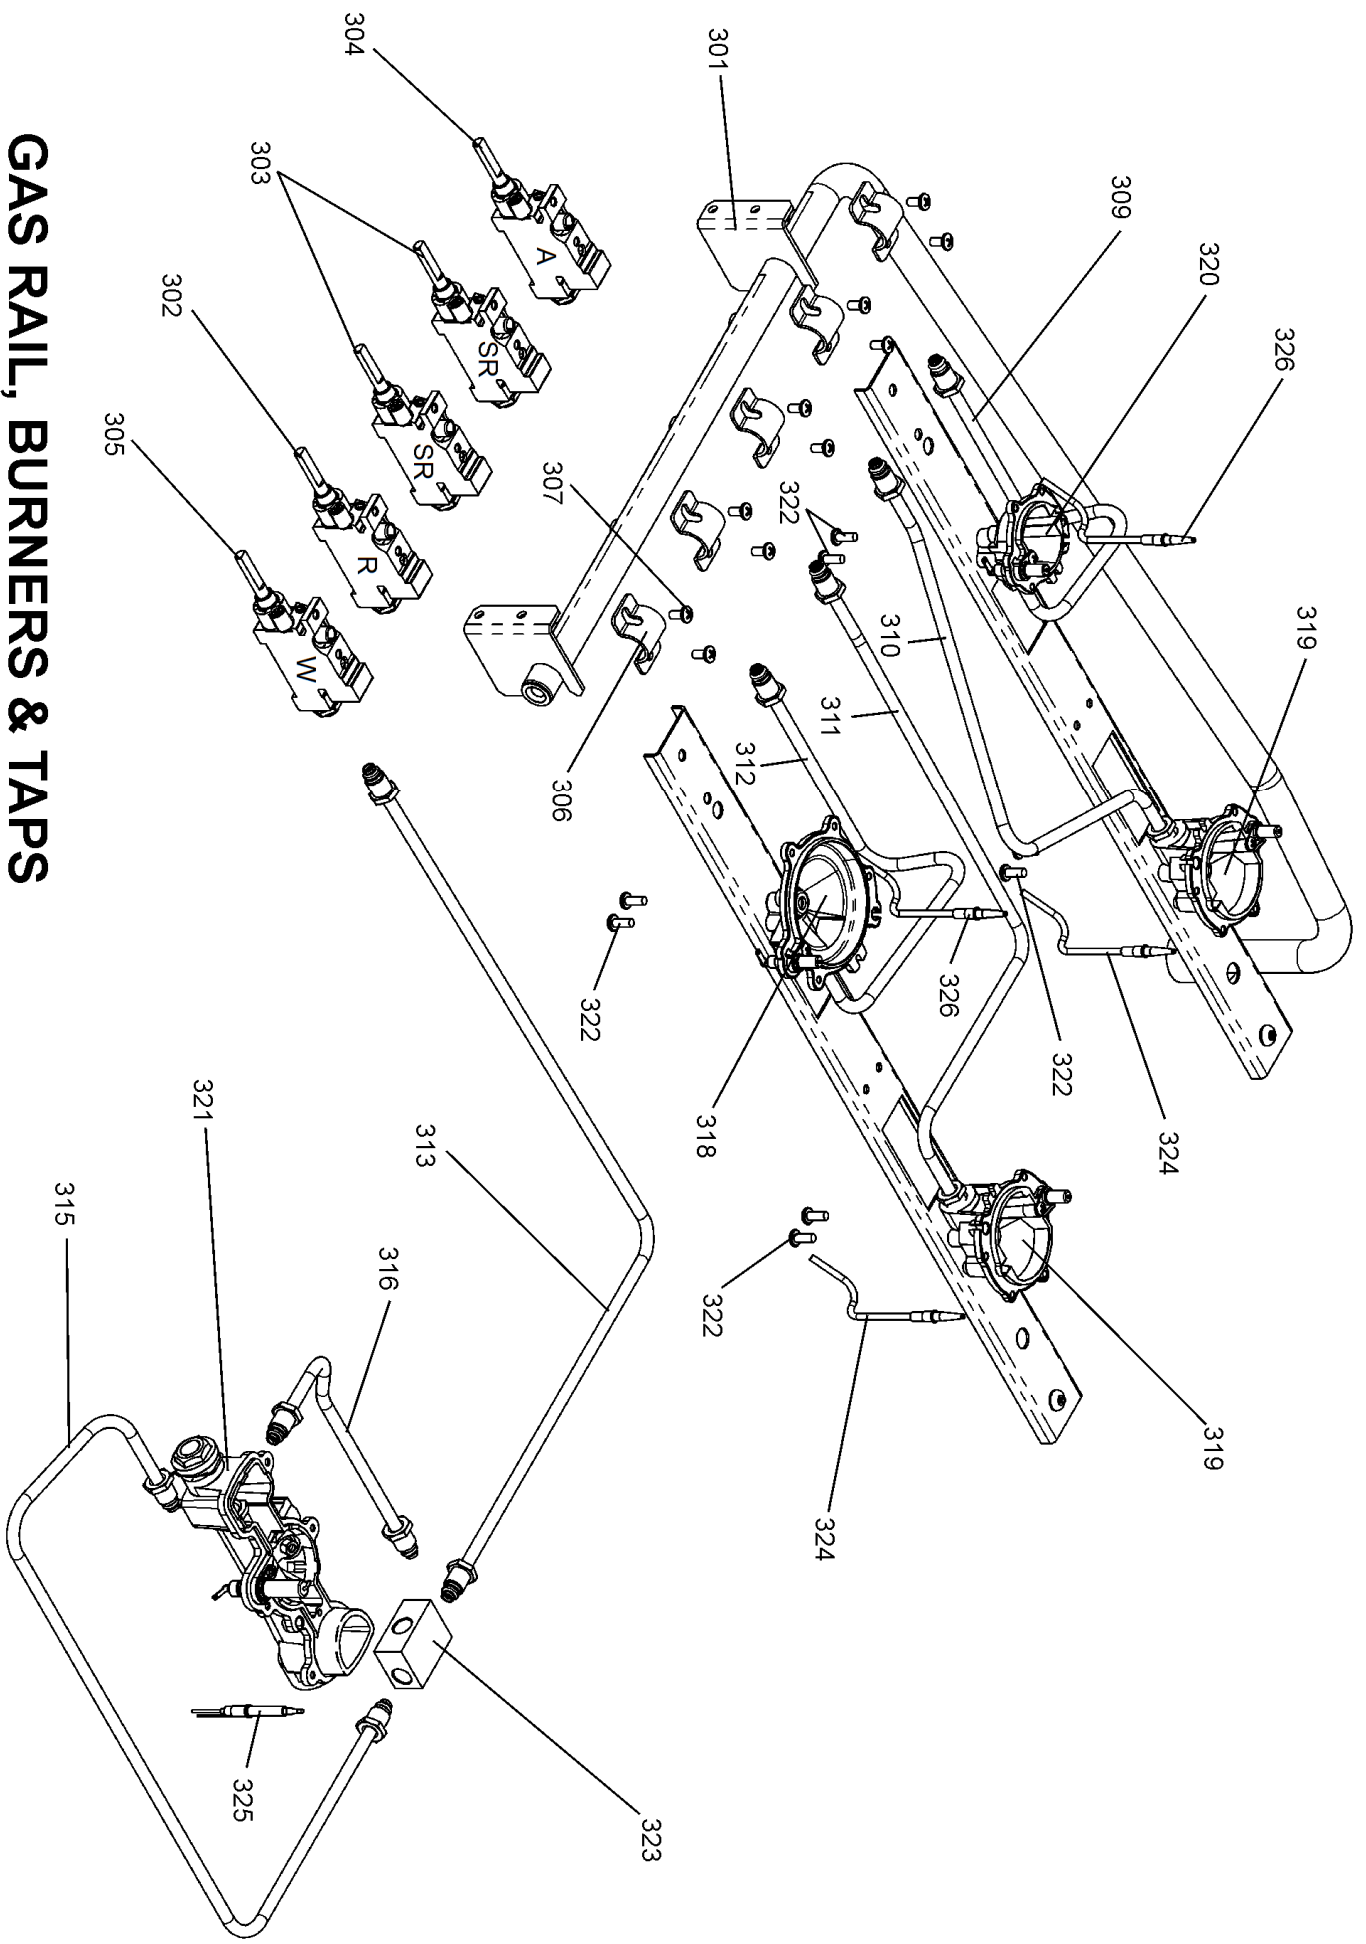


**GAS RAIL, BURNERS & TAPS**

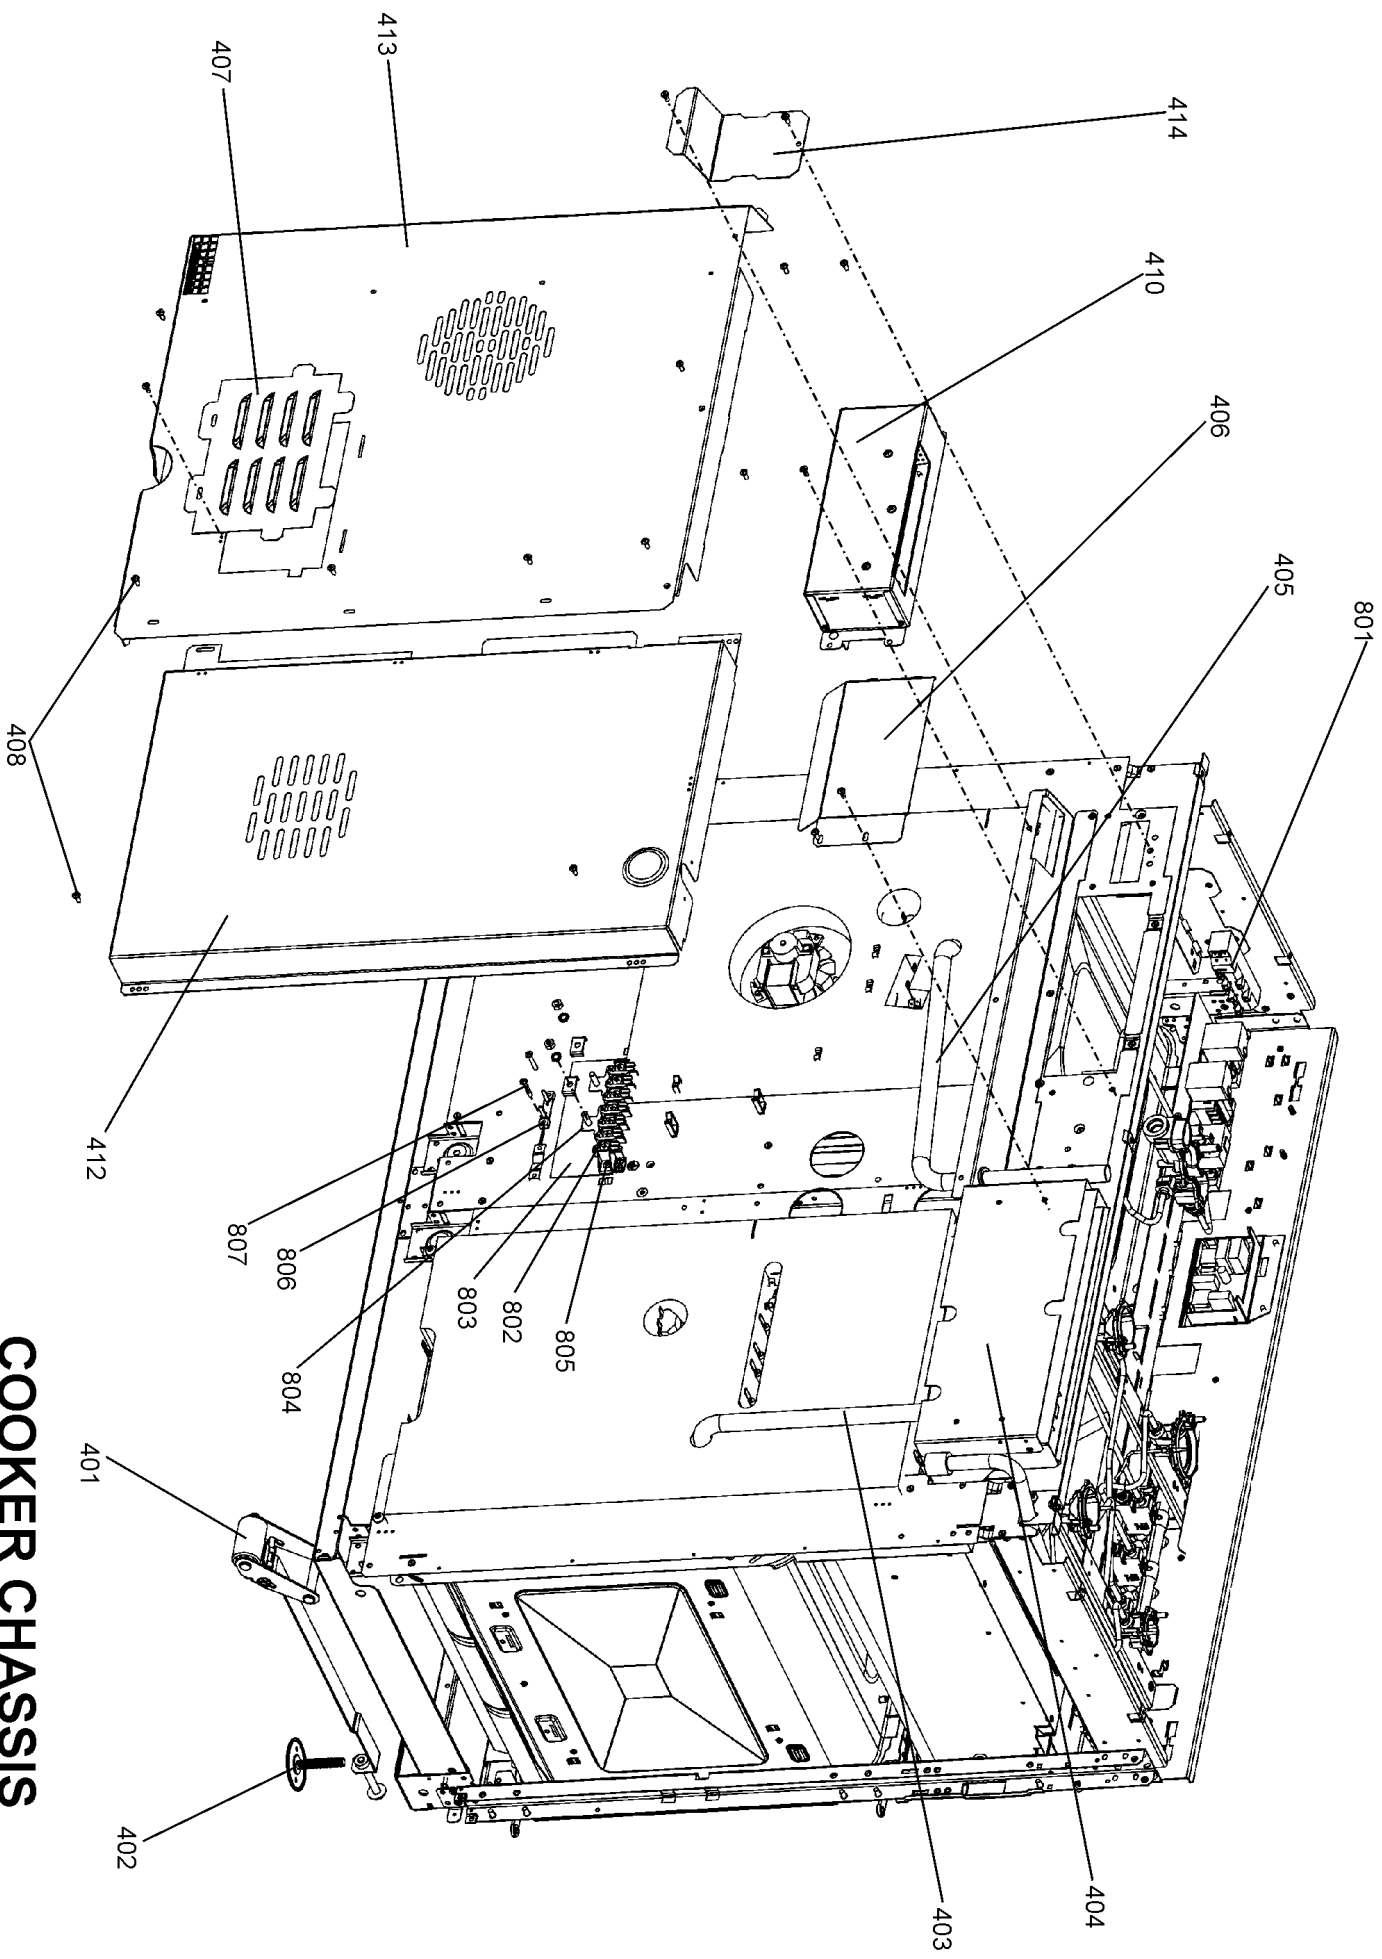


**COOKER CHASSIS**


# GRILL CHAMBER

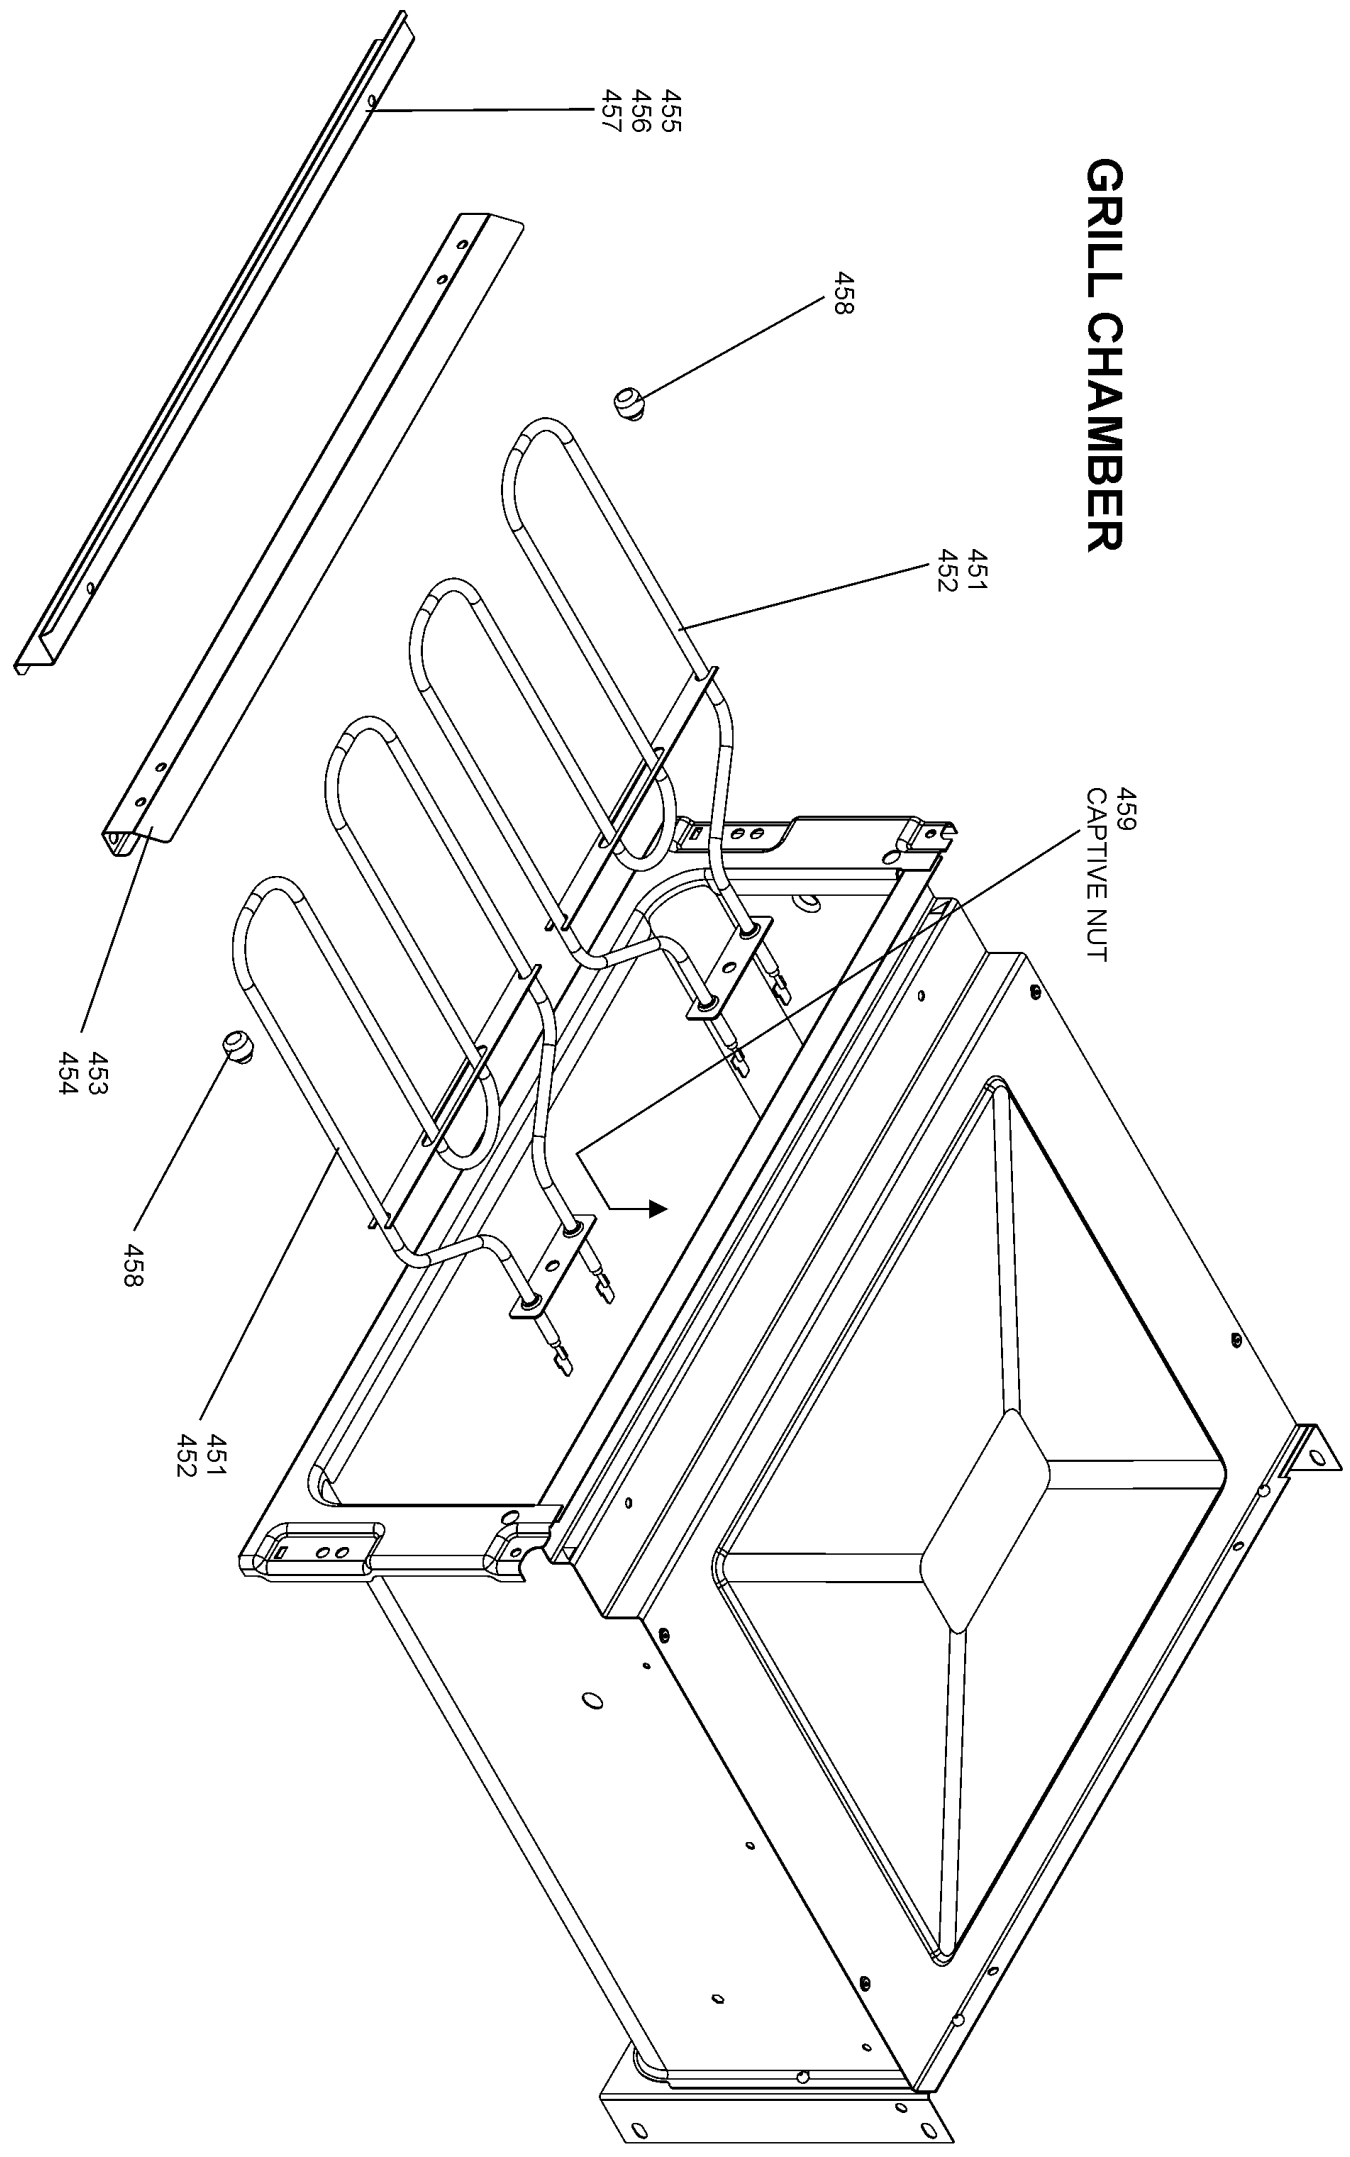




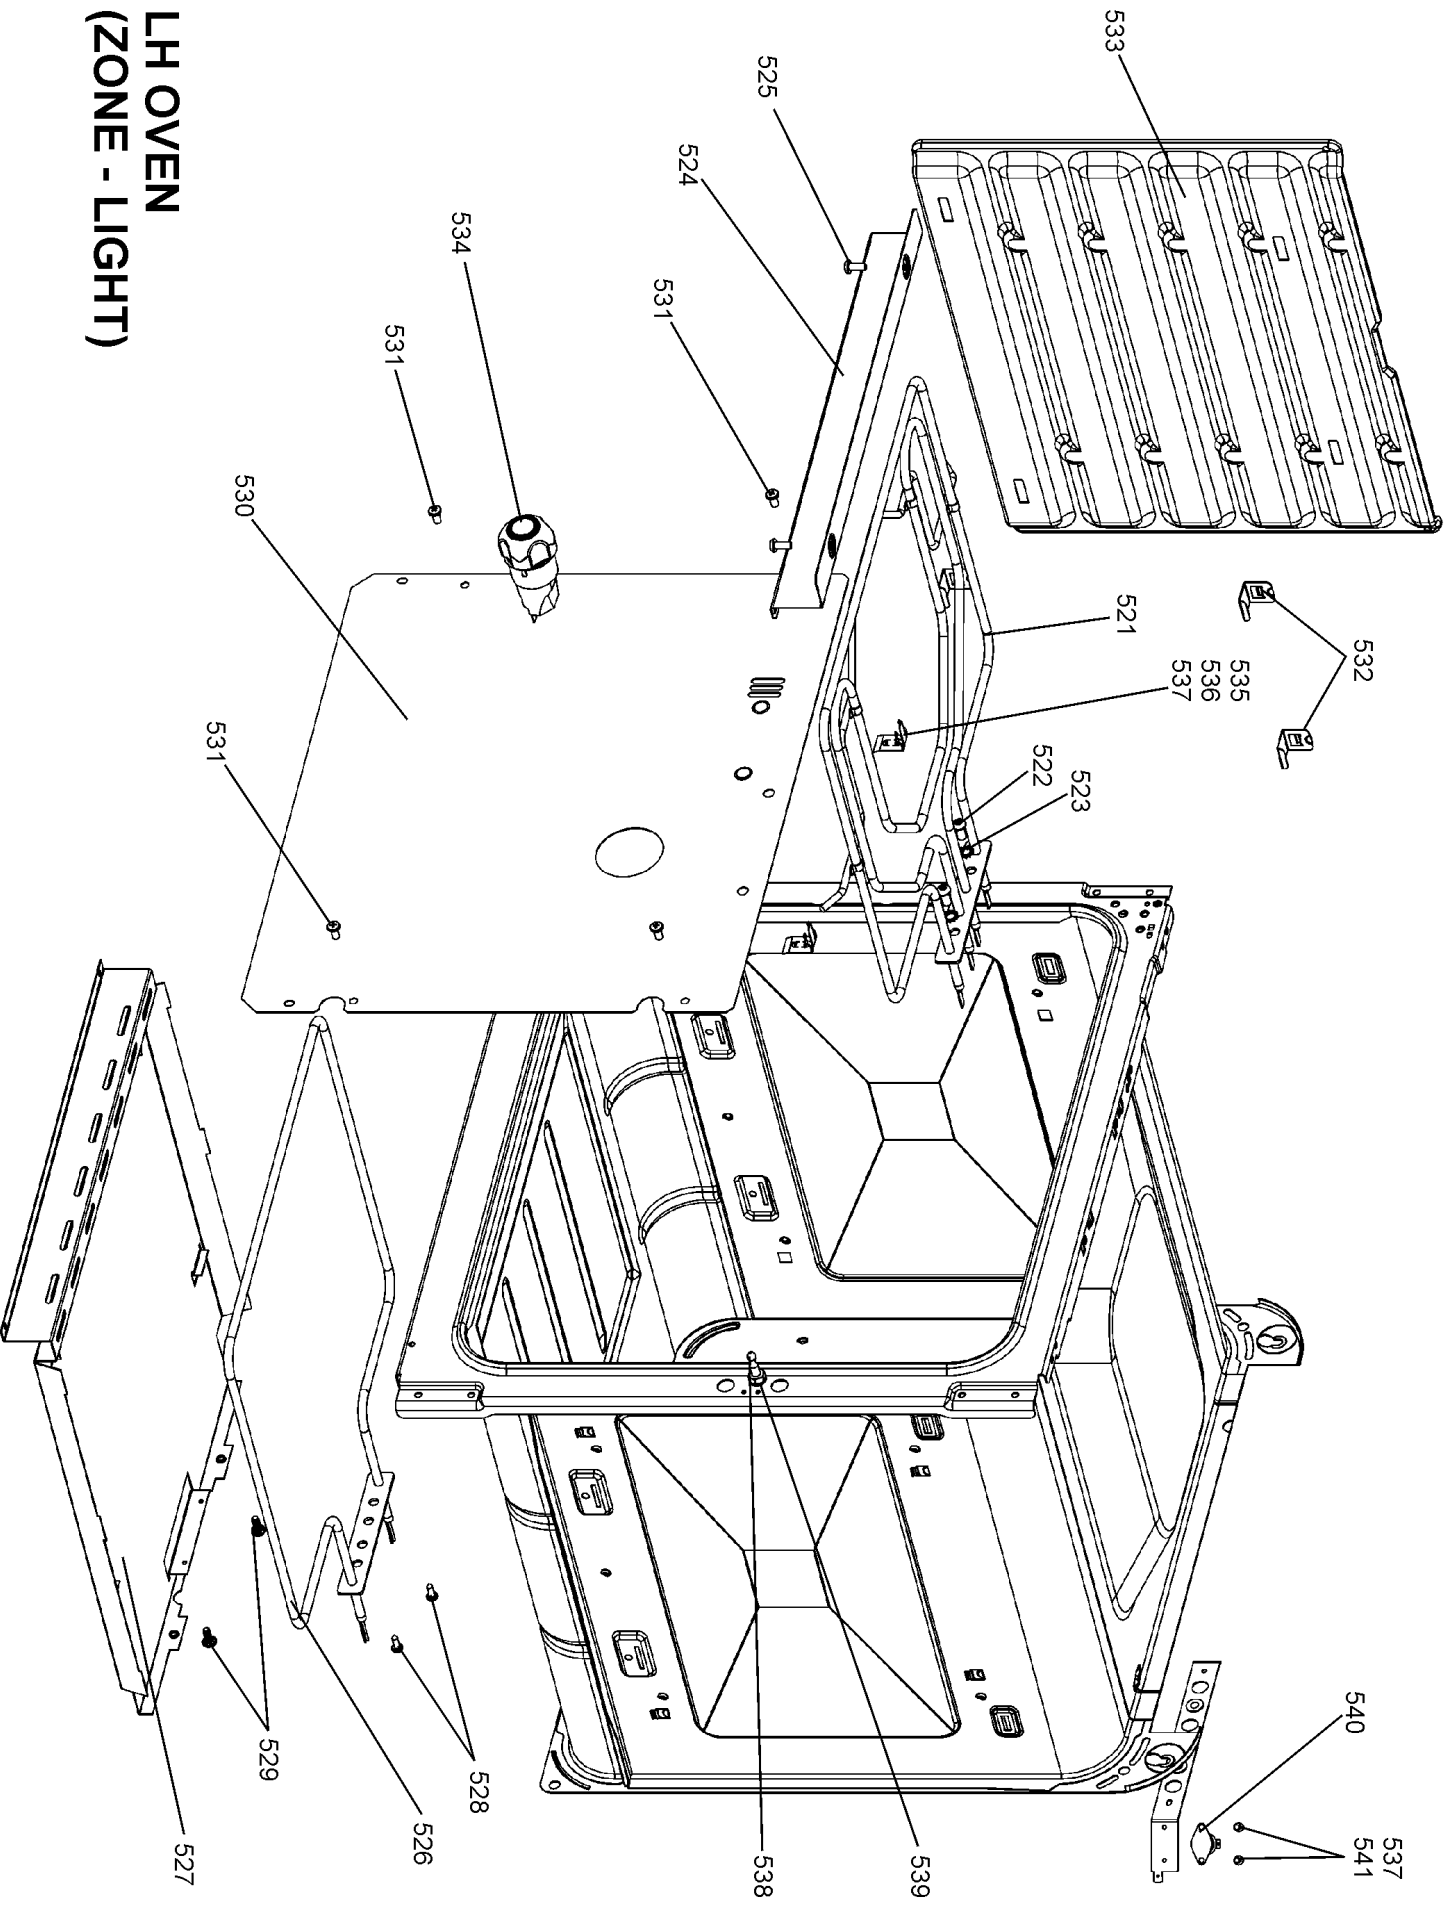


**LH OVEN  
(ZONE - LIGHT)**

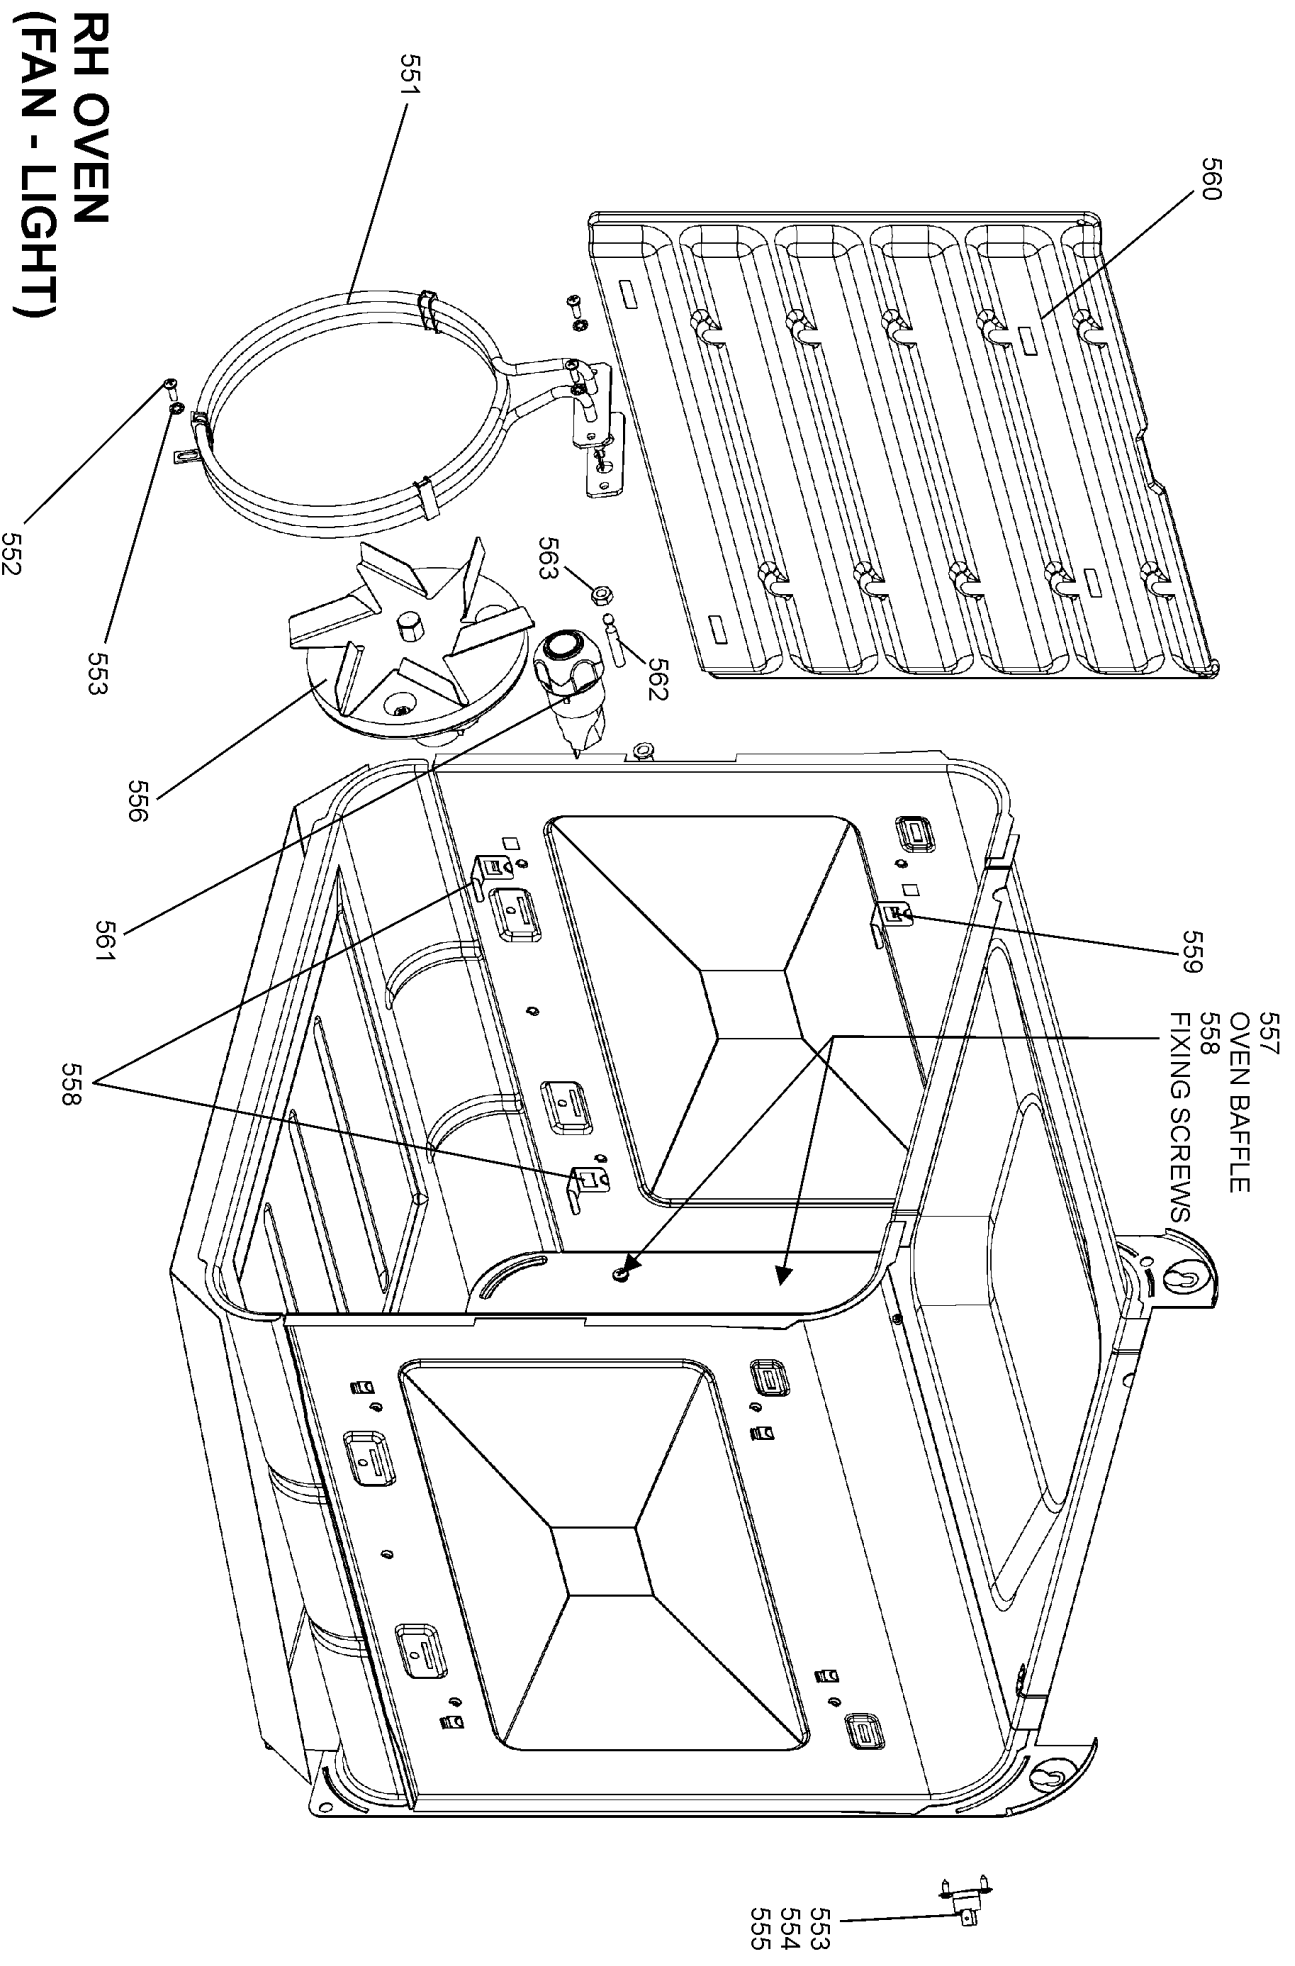

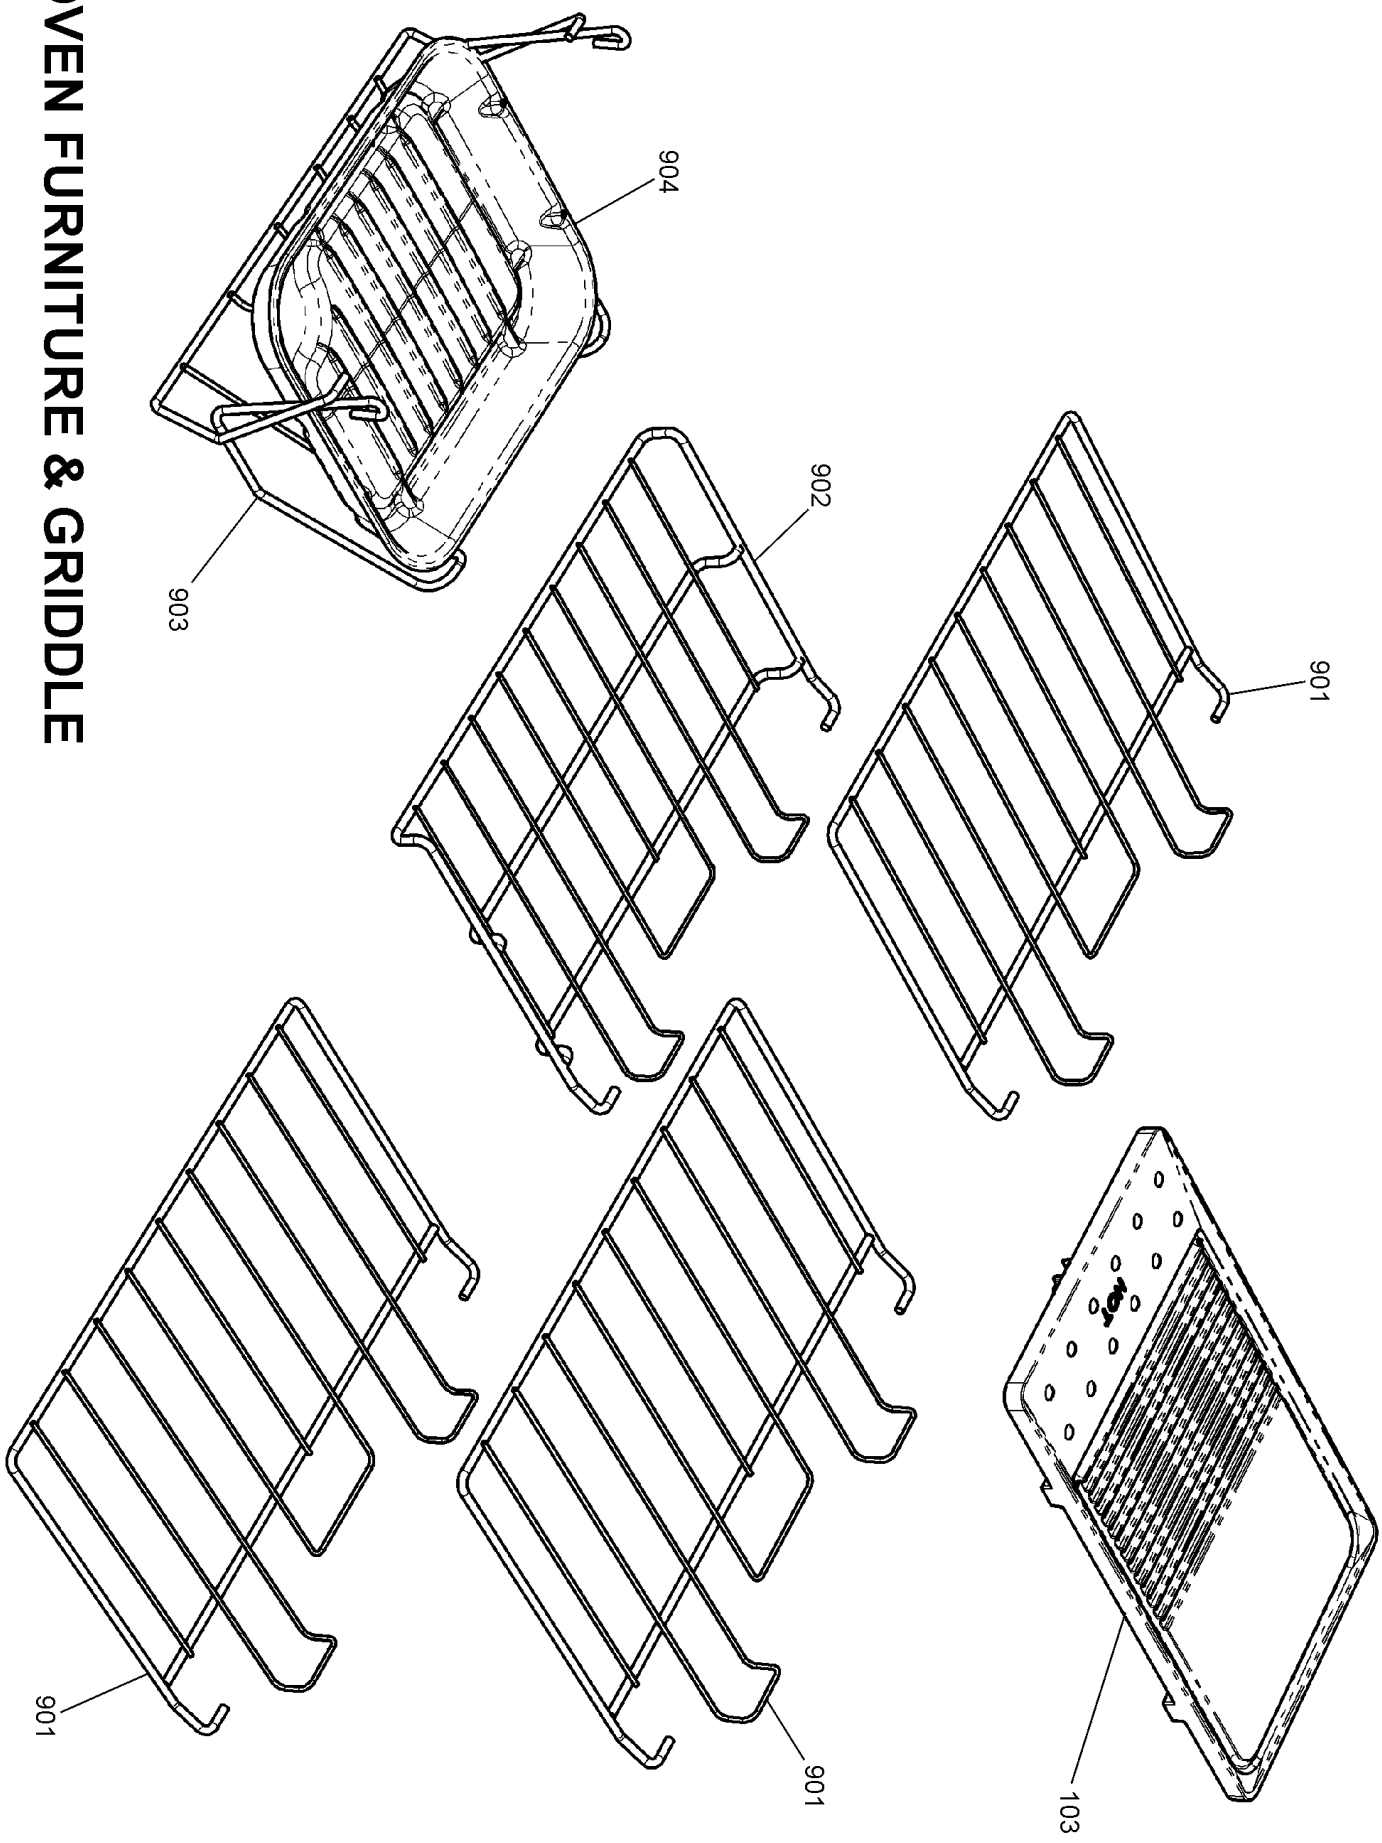



OVEN FURNITURE & GRIDDLE

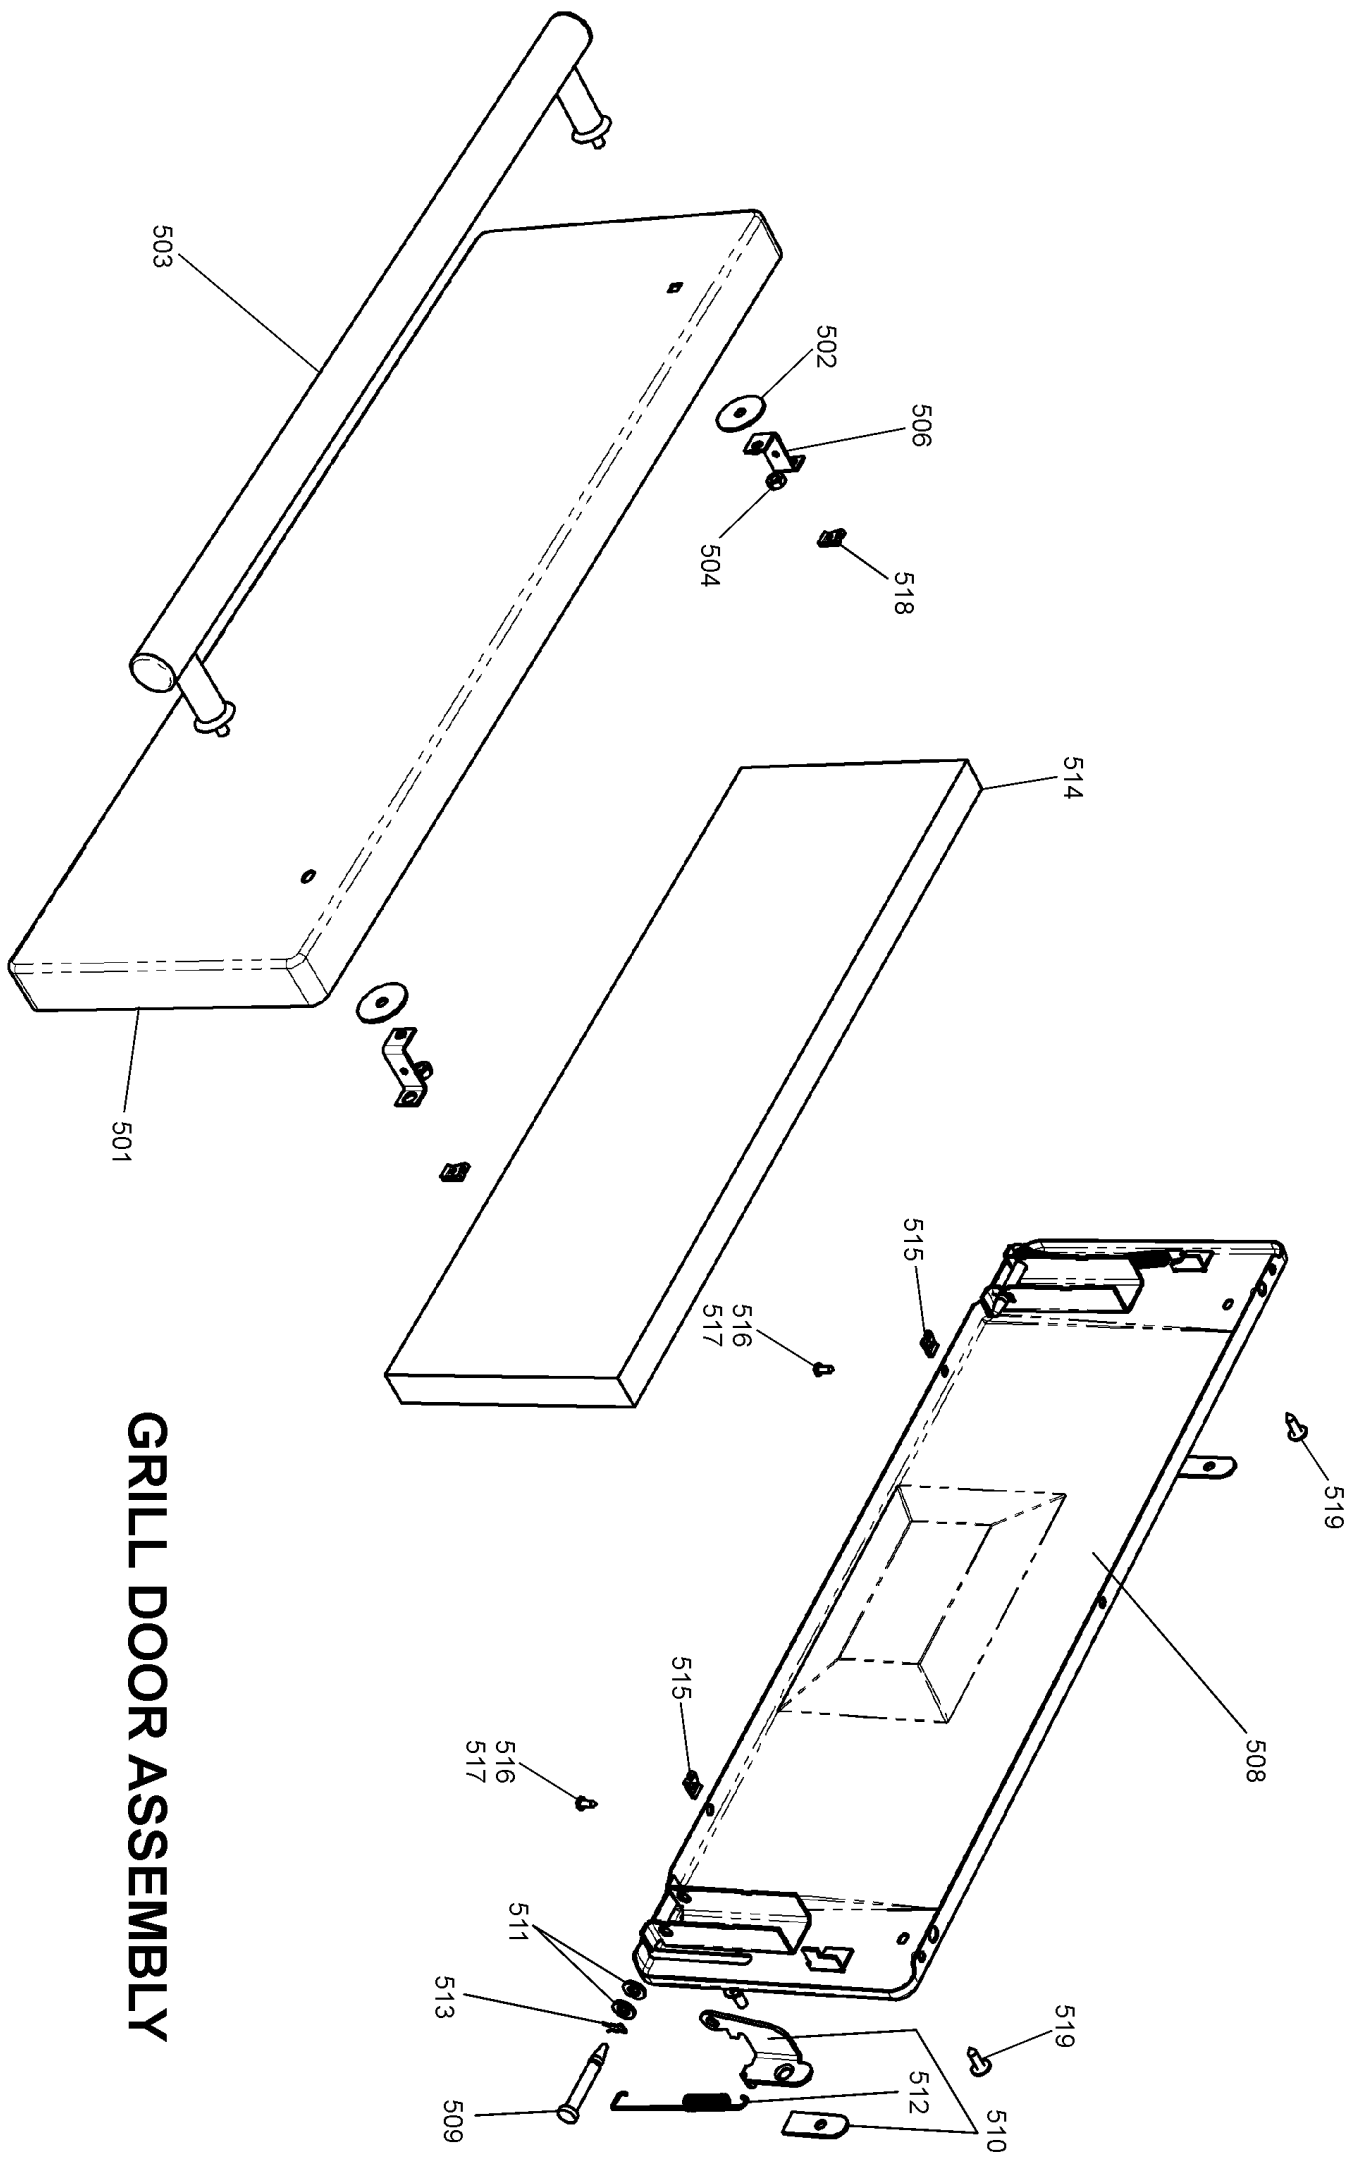

**GRILL DOOR ASSEMBLY**


LH OVEN DOOR

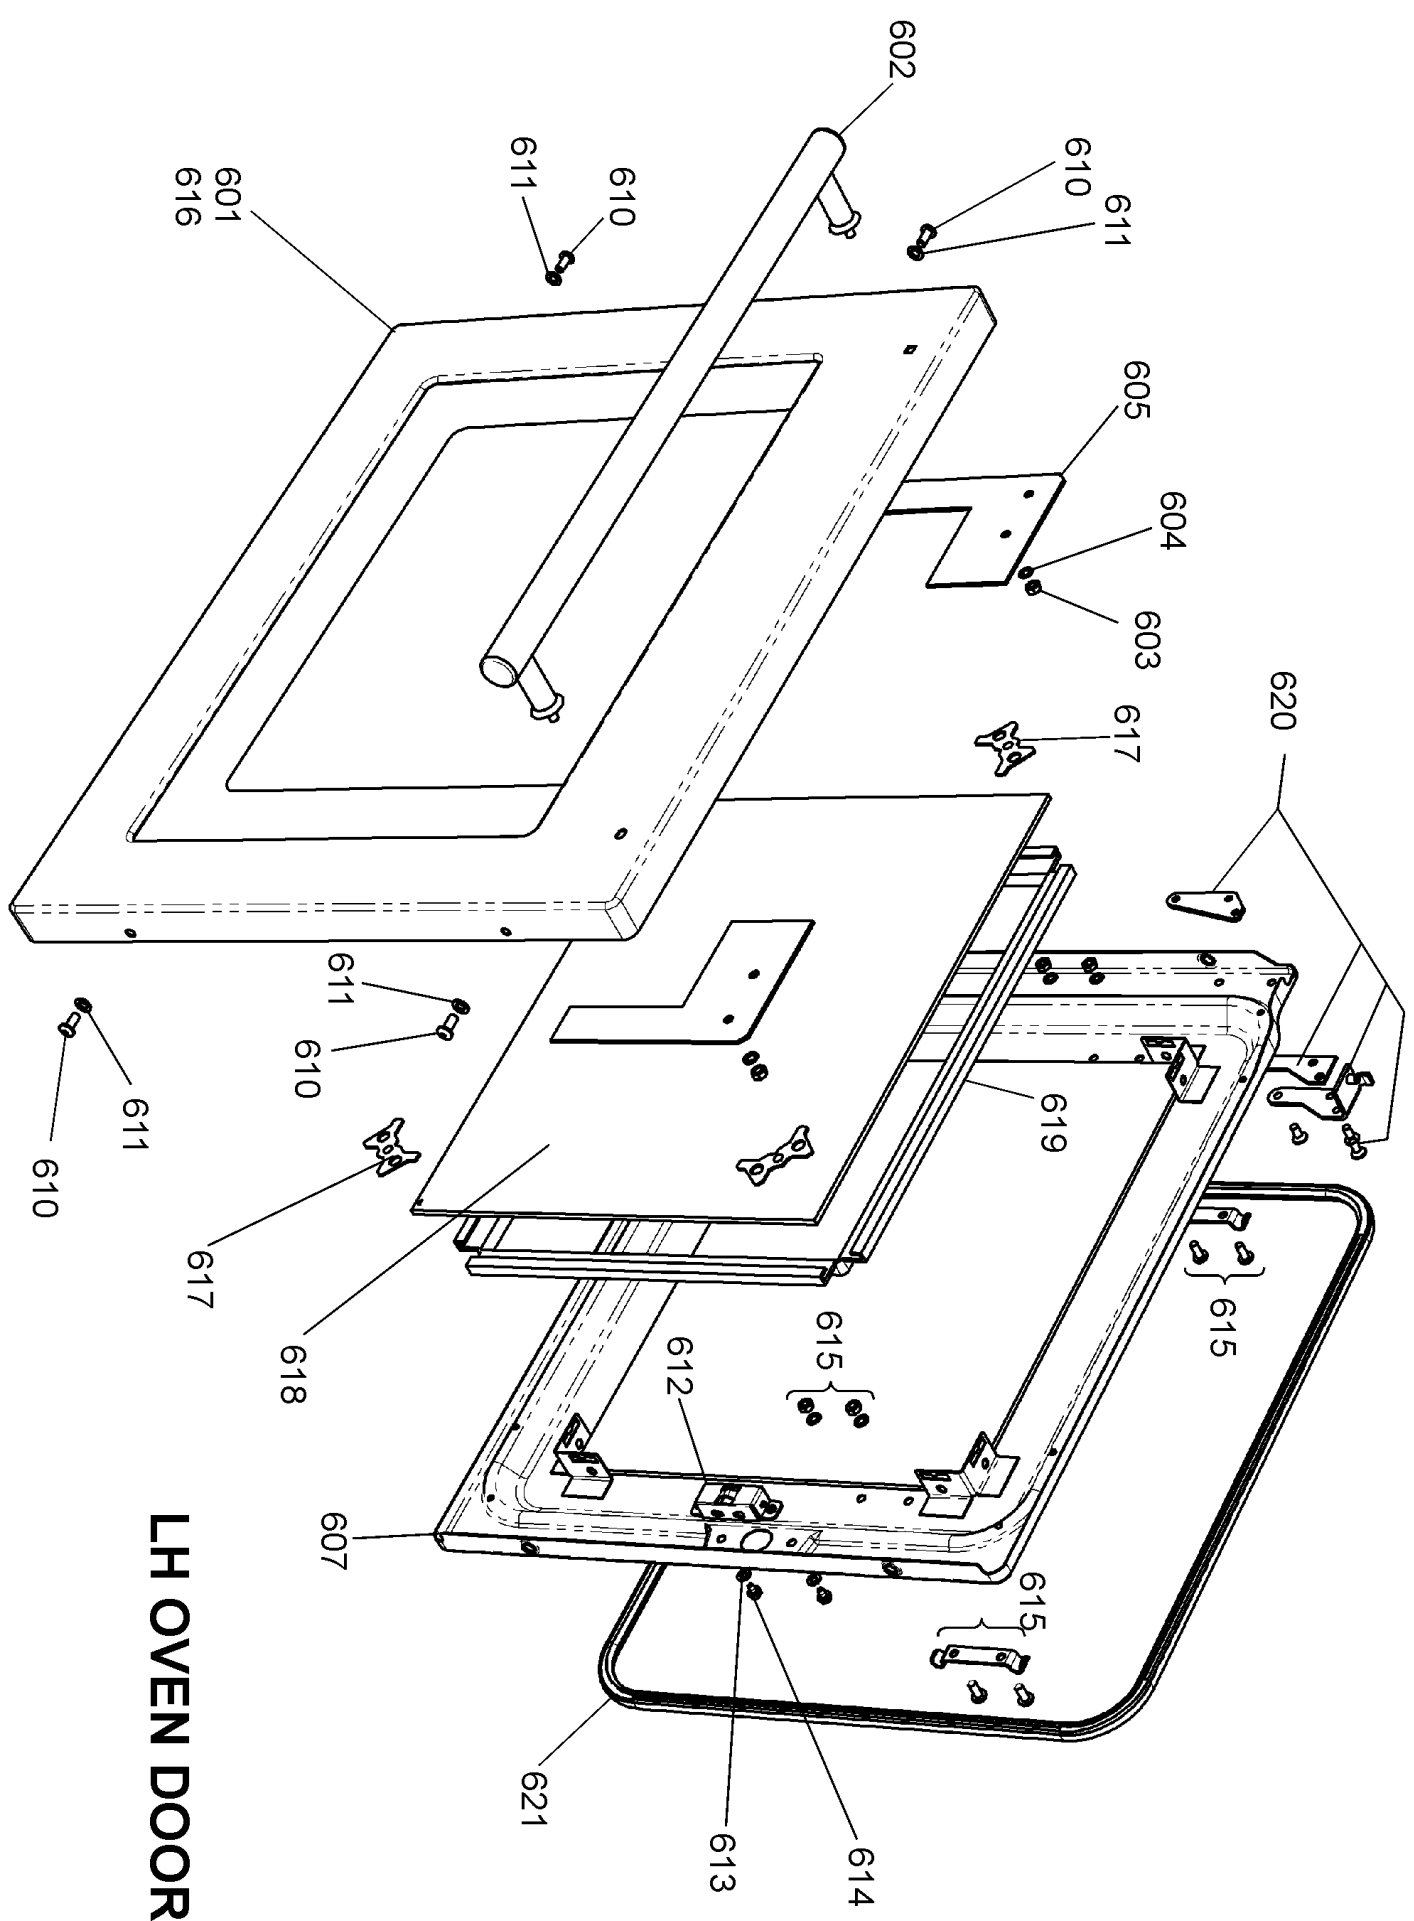

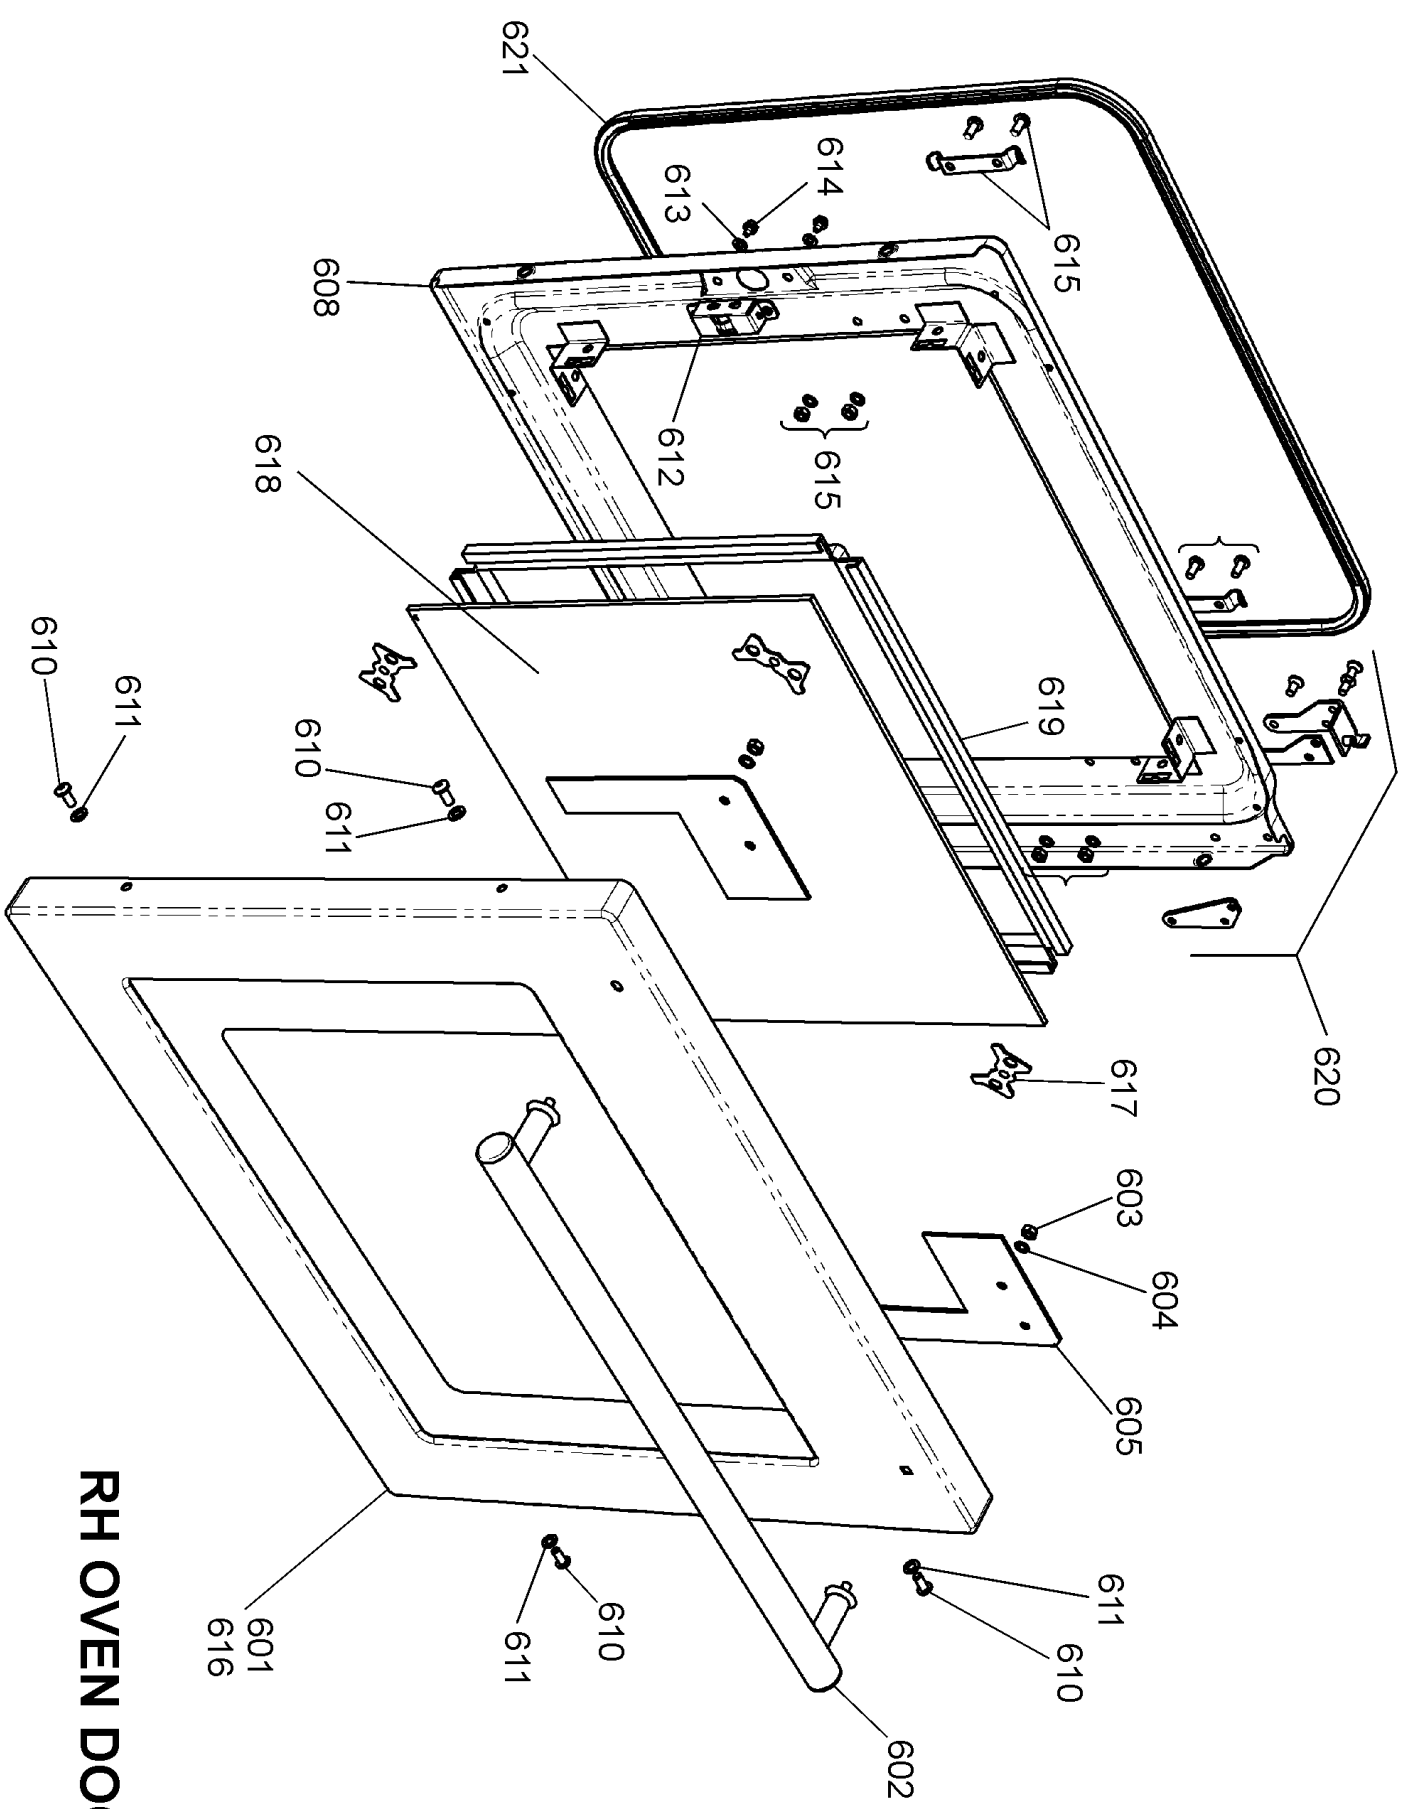


**RH OVEN DOOR**



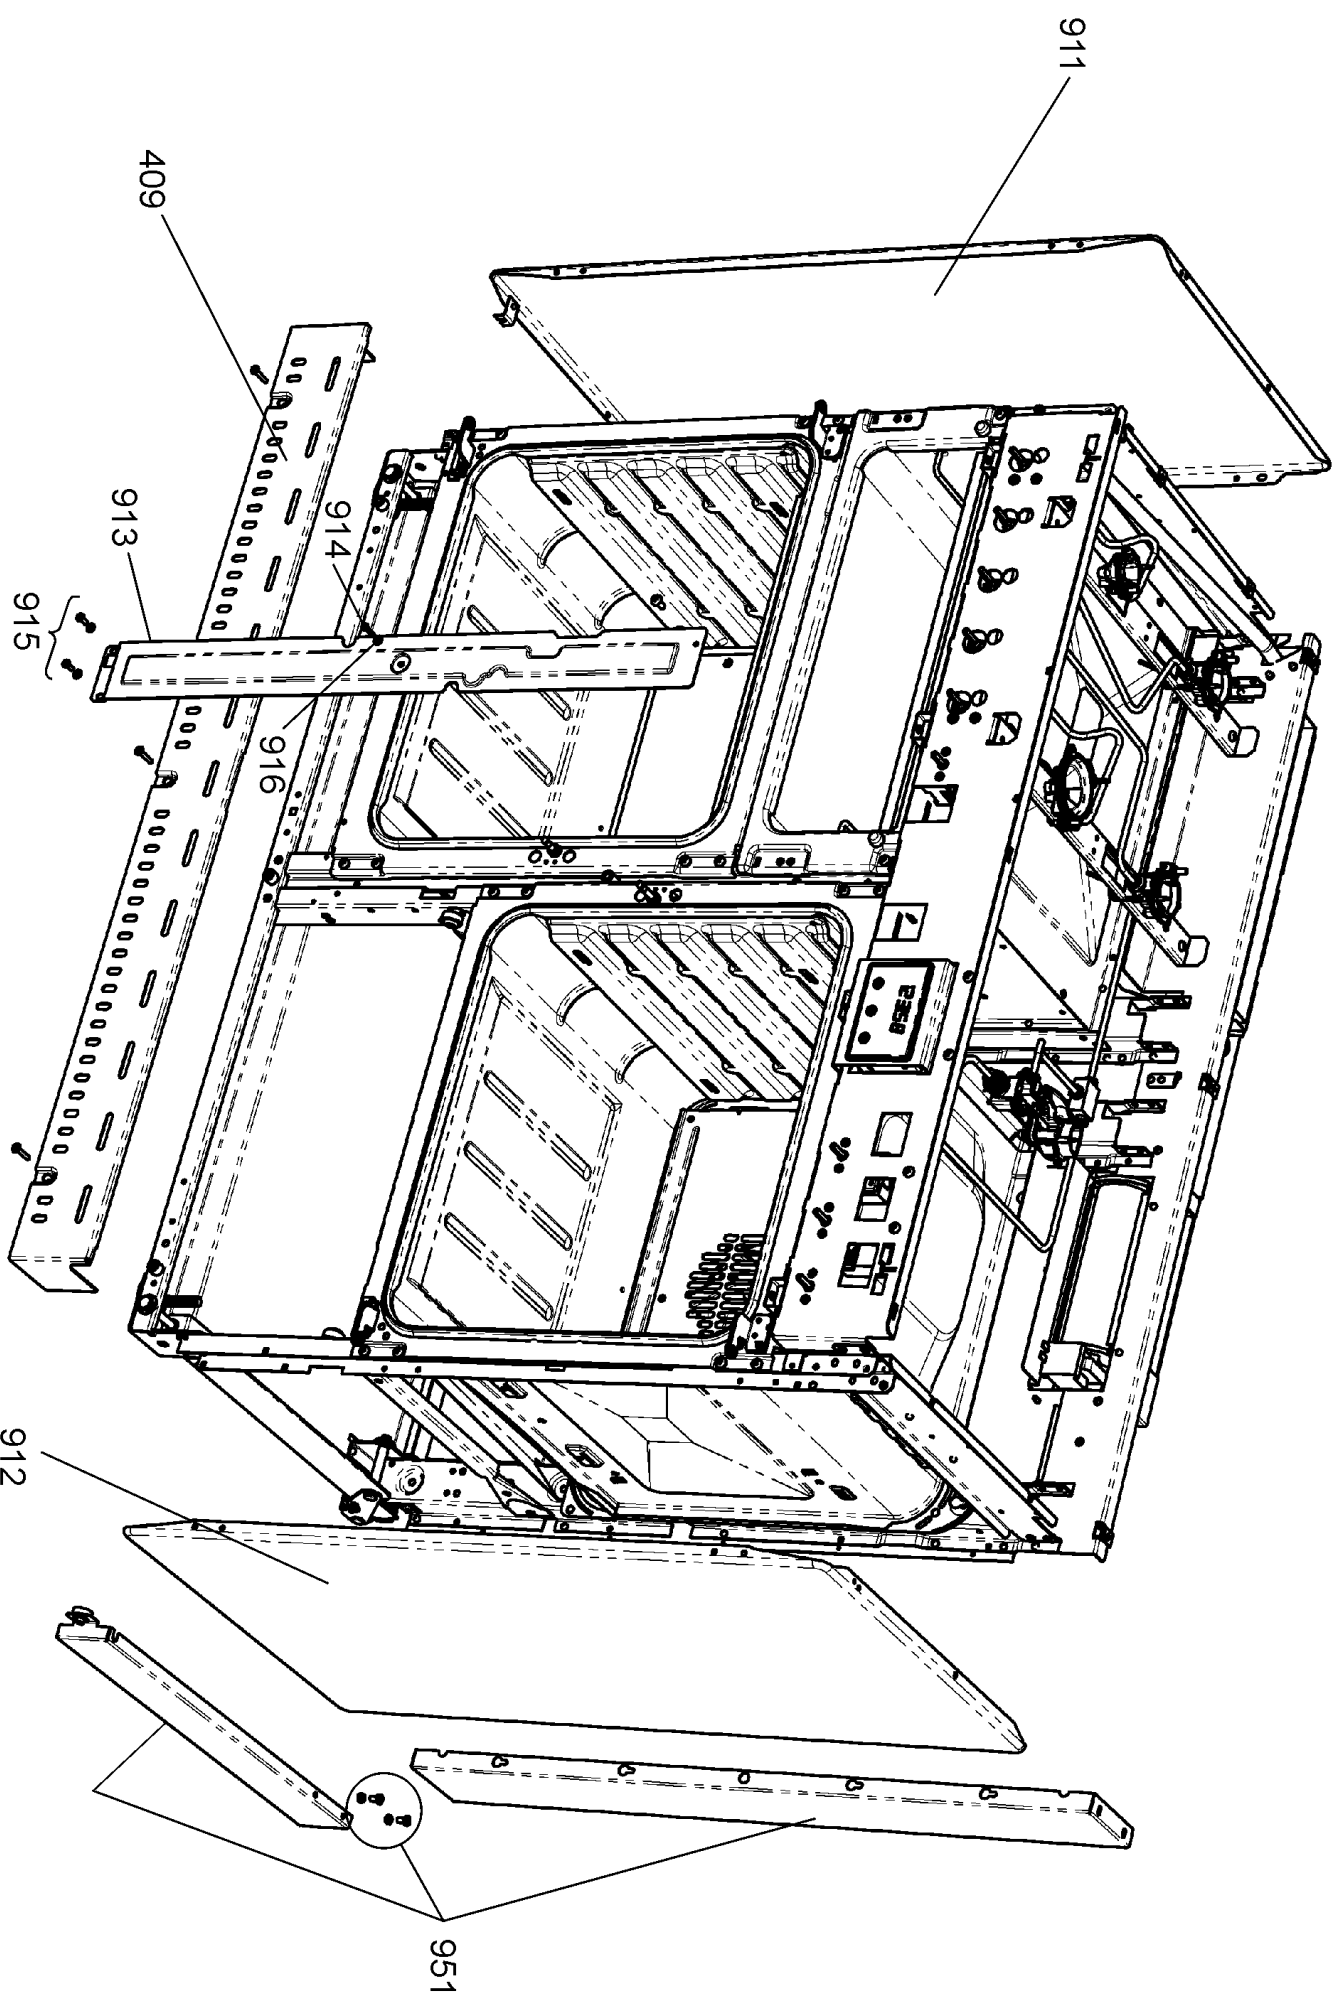



## ARLESTON 110 DF

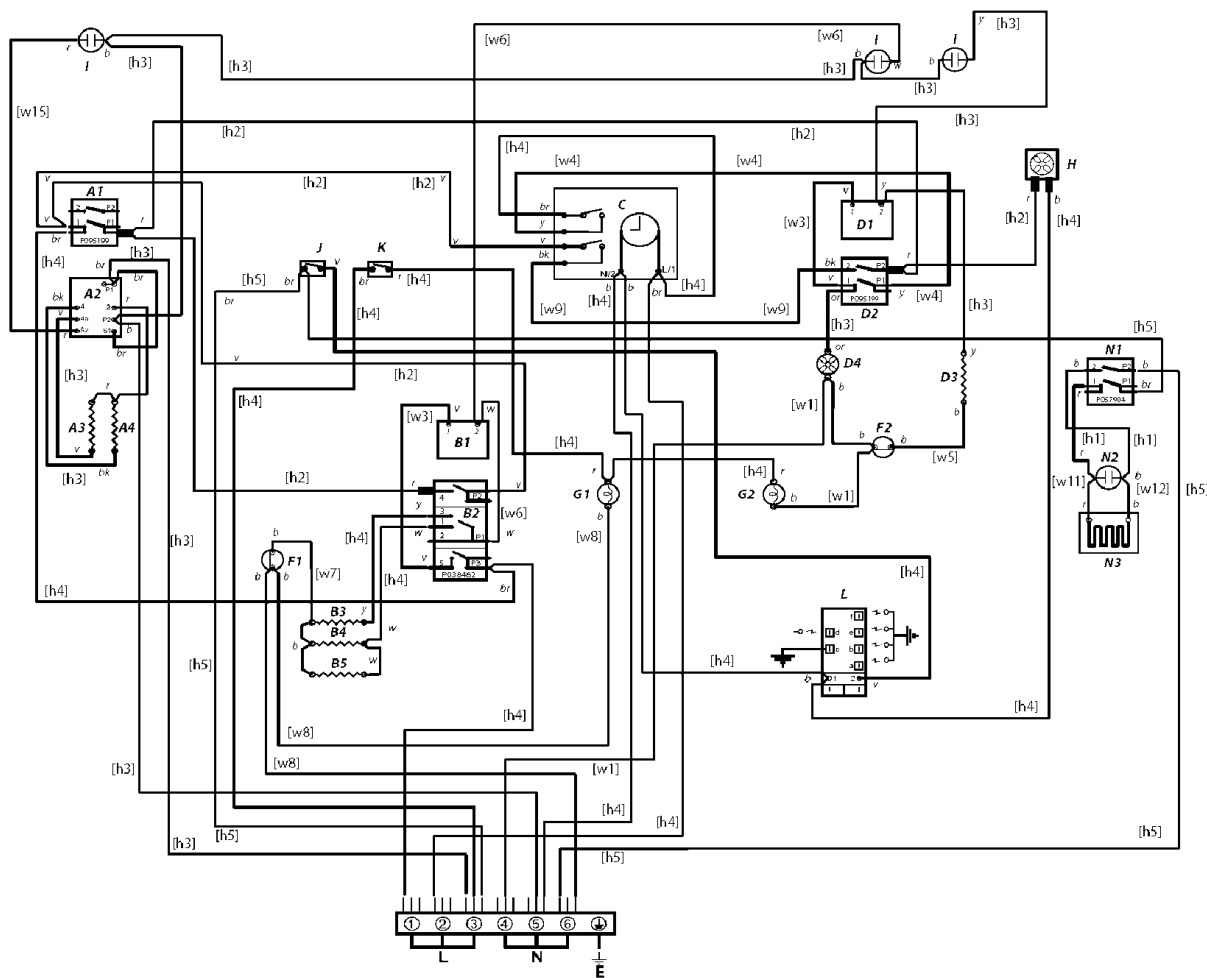

Arleston 110 DF

Ref Number	Part Number	Colour	Qty	Remarks
h1	P094631	r/b	1	<b>Harness</b> - Warmer Plate
w1	P025995	b	1	<b>Wire</b> - Neutral Link RH Oven
w2	P027672	g/y	1	<b>Wire</b> - (N1) Earth Link LH Oven
w3	P033086	v	2	<b>Wire</b> - LH and RH Thermostat to Front Switch Link
w4	P037438	y	1	<b>Wire</b> - Timer to RH Oven Front Switch - Cooling Fan Control
w5	P040066	b	1	<b>Wire</b> - RH Oven Element Cutout Link
w6	P095565	w	1	<b>Wire</b> - LH Oven Thermostat to Neon
w7	P043964	b	1	<b>Wire</b> - Neutral Link LH Oven Elements
w8	P043965	b	1	<b>Wire</b> - Neutral Link LH Oven
w9	P049233	bk	1	<b>Wire</b> - Clock to RH Oven Front Switch
w10	P049241	g/y	1	<b>Wire</b> - (N1) HT Earth Lead Spark gen to Cooker Frame
h6	P049296	Clear	1	<b>Harness (N1)</b> - HT Leads Spark Gen to Burner Heads
w11	P049650	b	1	<b>Wire</b> - Warmer Zone to Neon - Part of A027065
w12	P049651	r	1	<b>Wire</b> - Warmer Zone to Neon - Part of A027065
w13	P055374	g/y	2	<b>Wire</b> - (N1) Earth Link Grill Elements to Cooker Back
h2	P060876	r/v	1	<b>Harness</b> - Cooling Fan Front Switches
h3	P062353	br/y/or/v/b/bk	1	<b>Harness</b> - RH Oven /Grill
h4	P060908	w/y/br/b/r/v	1	<b>Harness</b> - LH Oven /Clock / Lights/ Neutrals / Spark Generator
h5	P062354	br/b	1	<b>Harness</b> - Ignition and Warmer Zone
w14	P094943	g/y	3	<b>Wire</b> - (N1) Earth Link Thermostat to Cooker Frame and Hob Frame
w15	P094951	r	1	<b>Wire</b> - Grill Front Switch to Neon
w16	P095450	g/y	1	<b>Wire</b> - (N1) Earth Link RH Oven

Code	Description
D1	Right - Hand Oven Thermostat
D2	Right - Hnad Oven Front Switch
D3	Right- Hand Oven Element
D4	Right - Hand Oven Fan
F1	Left Hand Oven Thermal Preset
F2	Right - Hand Oven Thermal Preset
G1	Left Hand Oven Light
G2	Right hand Oven Light
H	Cooling Fan
I	Neon Indicator
J	Ignition Switch
K	Oven Light Switch
L	Spark Generator
N1	Warmer Zone Front Switch
N2	Warmer Zone Indicator neon
N3	Warmer Zone Element

Code	Description
A1	Grill Front Switch
A2	Grill Energy Regulator
A3	Grill Elements -LH
A4	Grill Elements - RH
B1	Left-Hand Oven Thermostat
B2	Left-Hand Front Switch
B3	Left Hand Oven Top Inner Element
B4	Left Hand Oven Top Outer Element
B5	Left Hand Oven Bottom Element
C	Clock

Code	Colour
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
g/y	Green/Yellow
gr	Grey