





HOTPLATE, FACIA AND CONTROLS

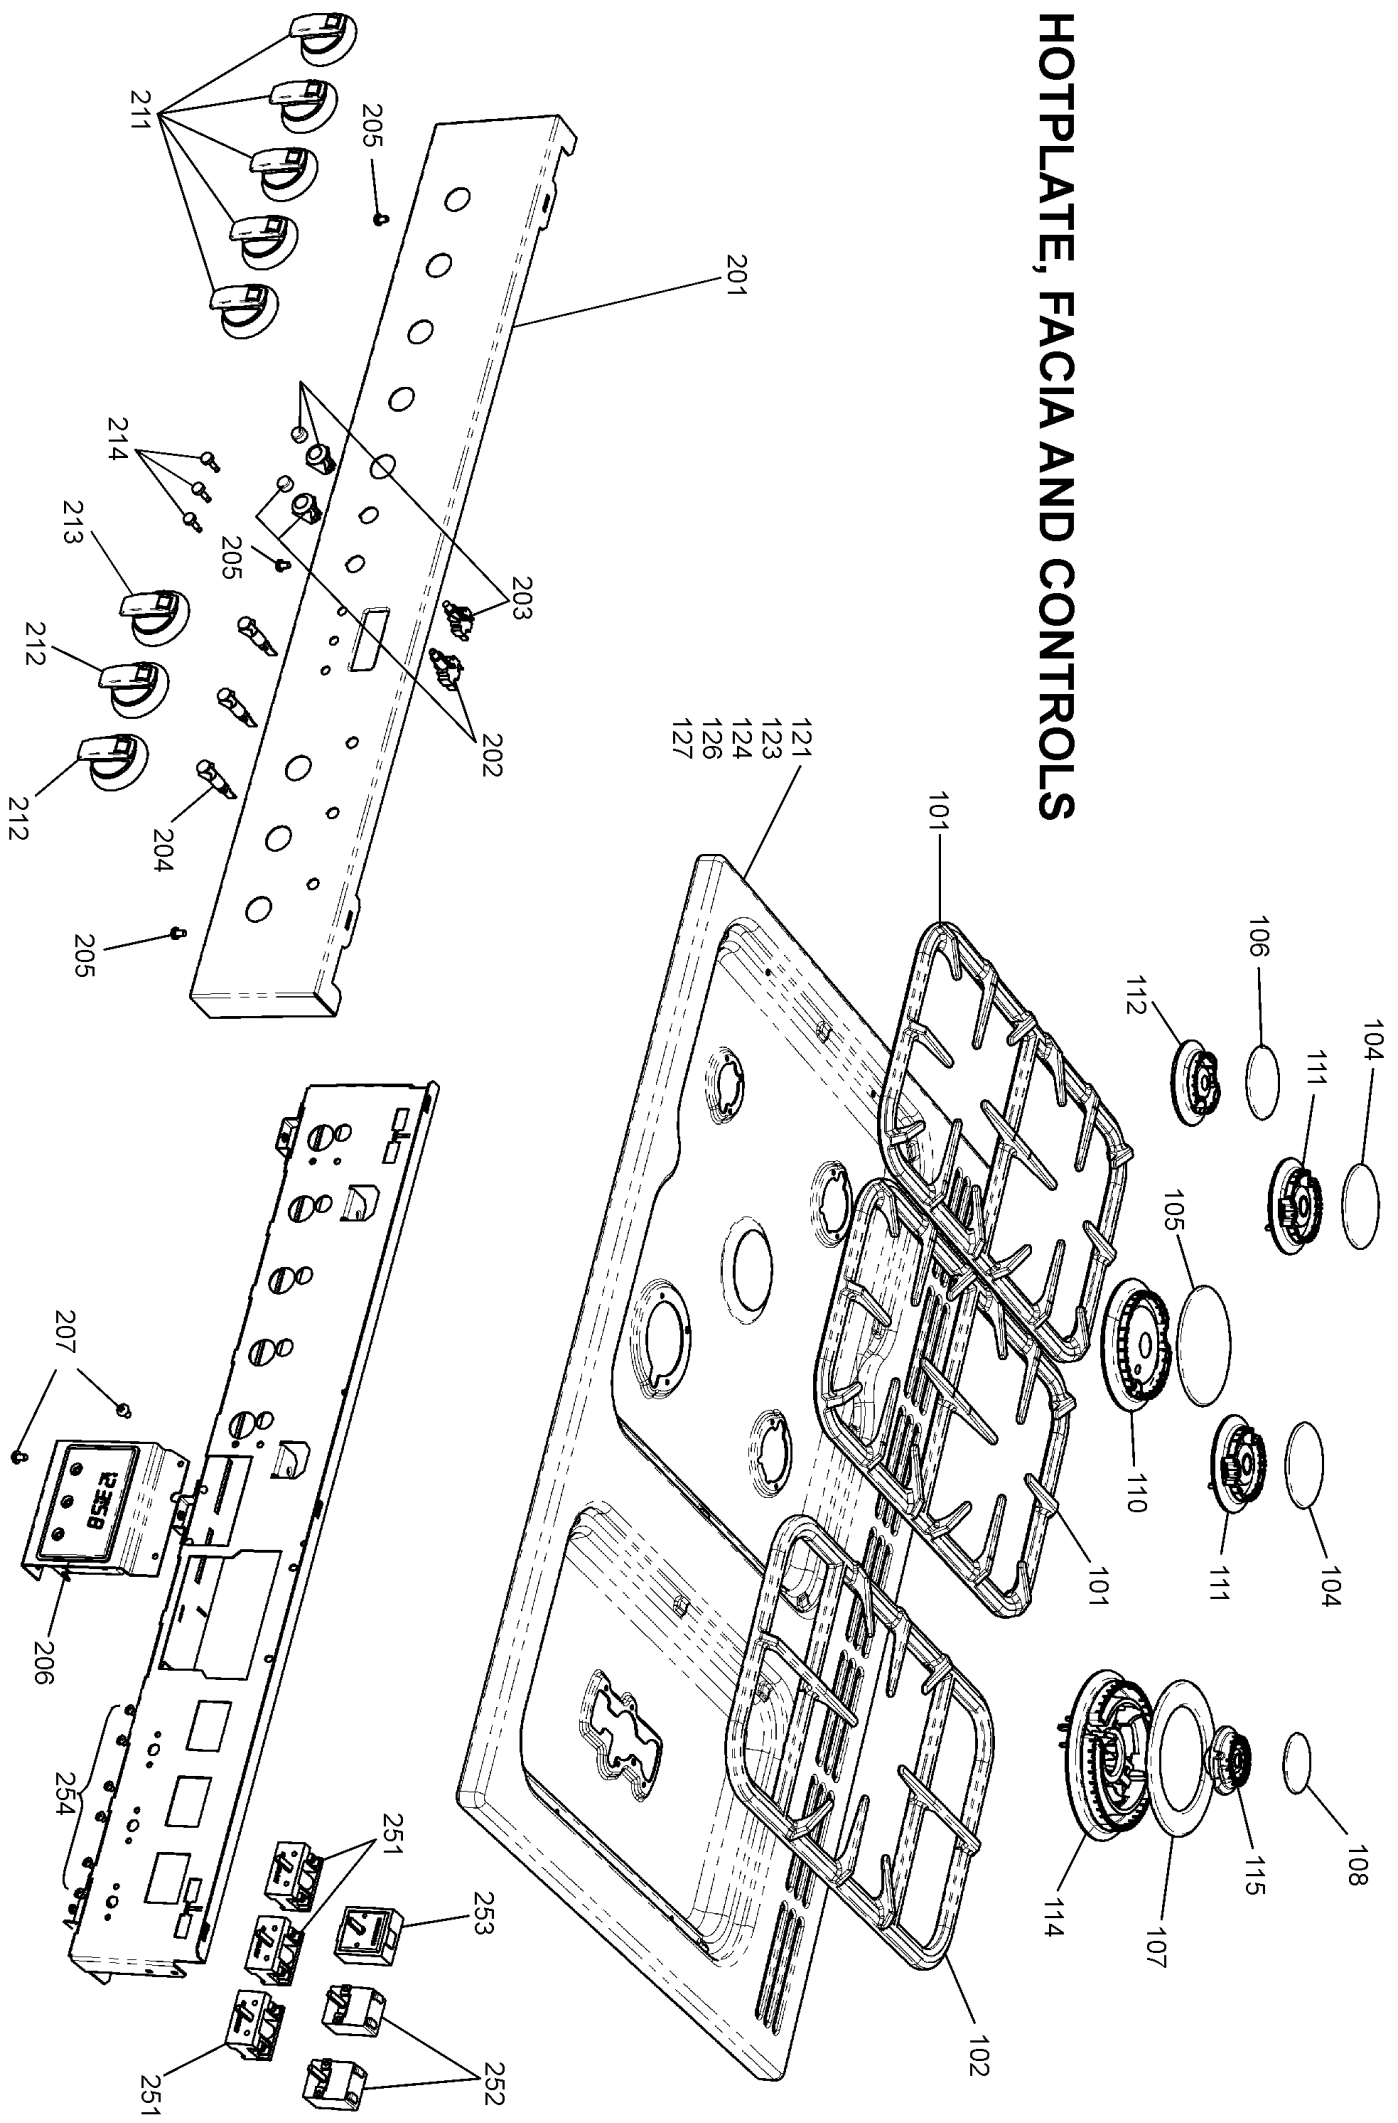


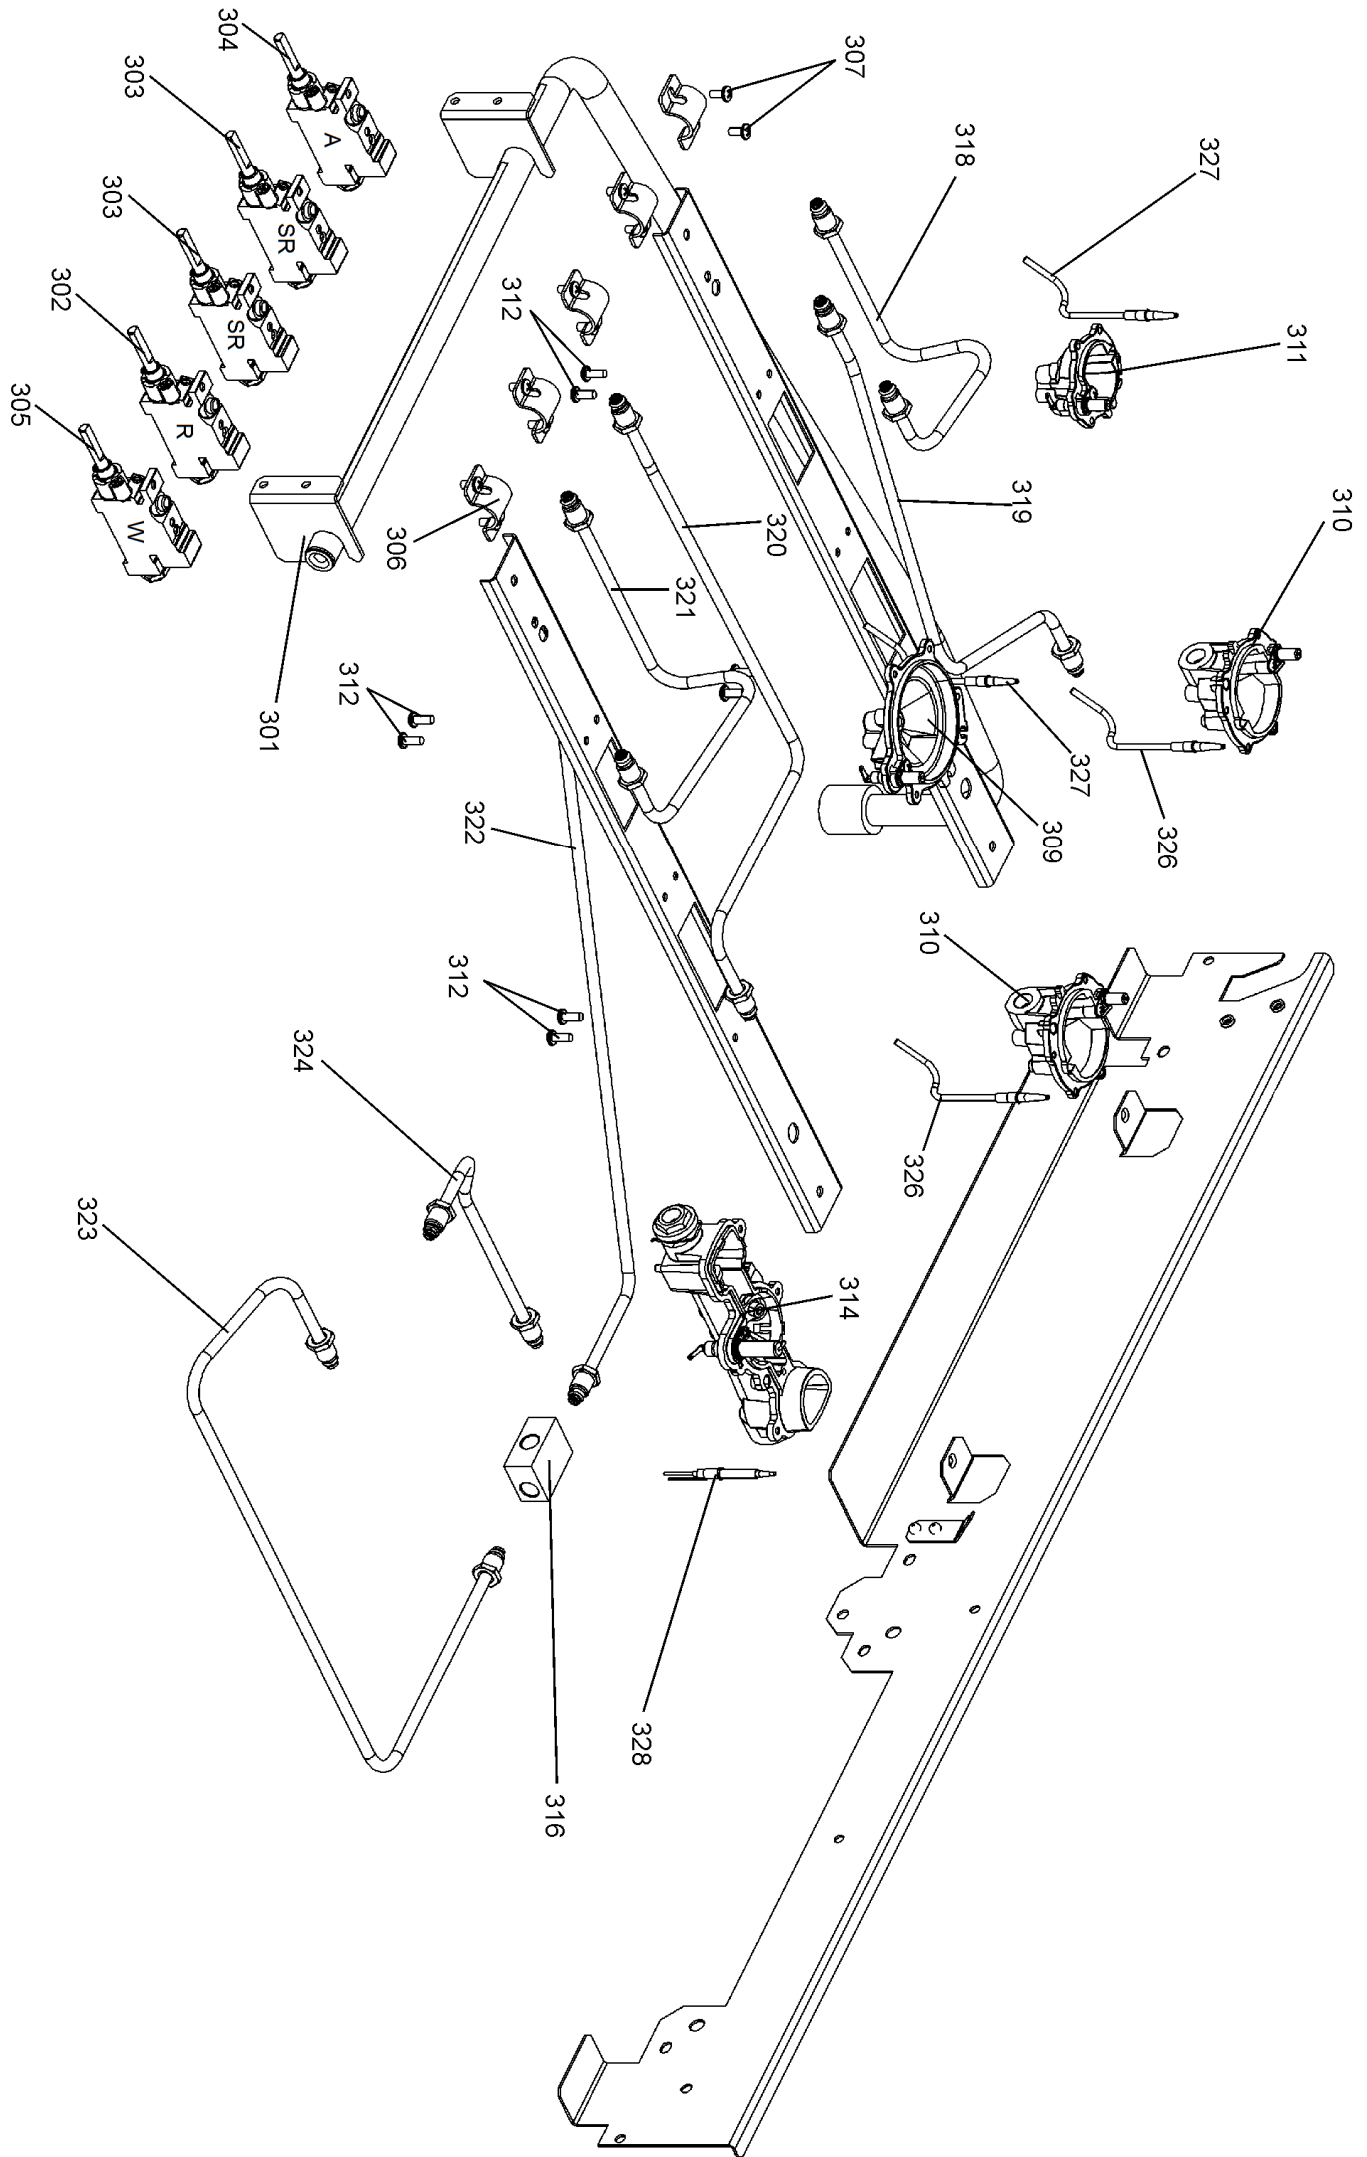

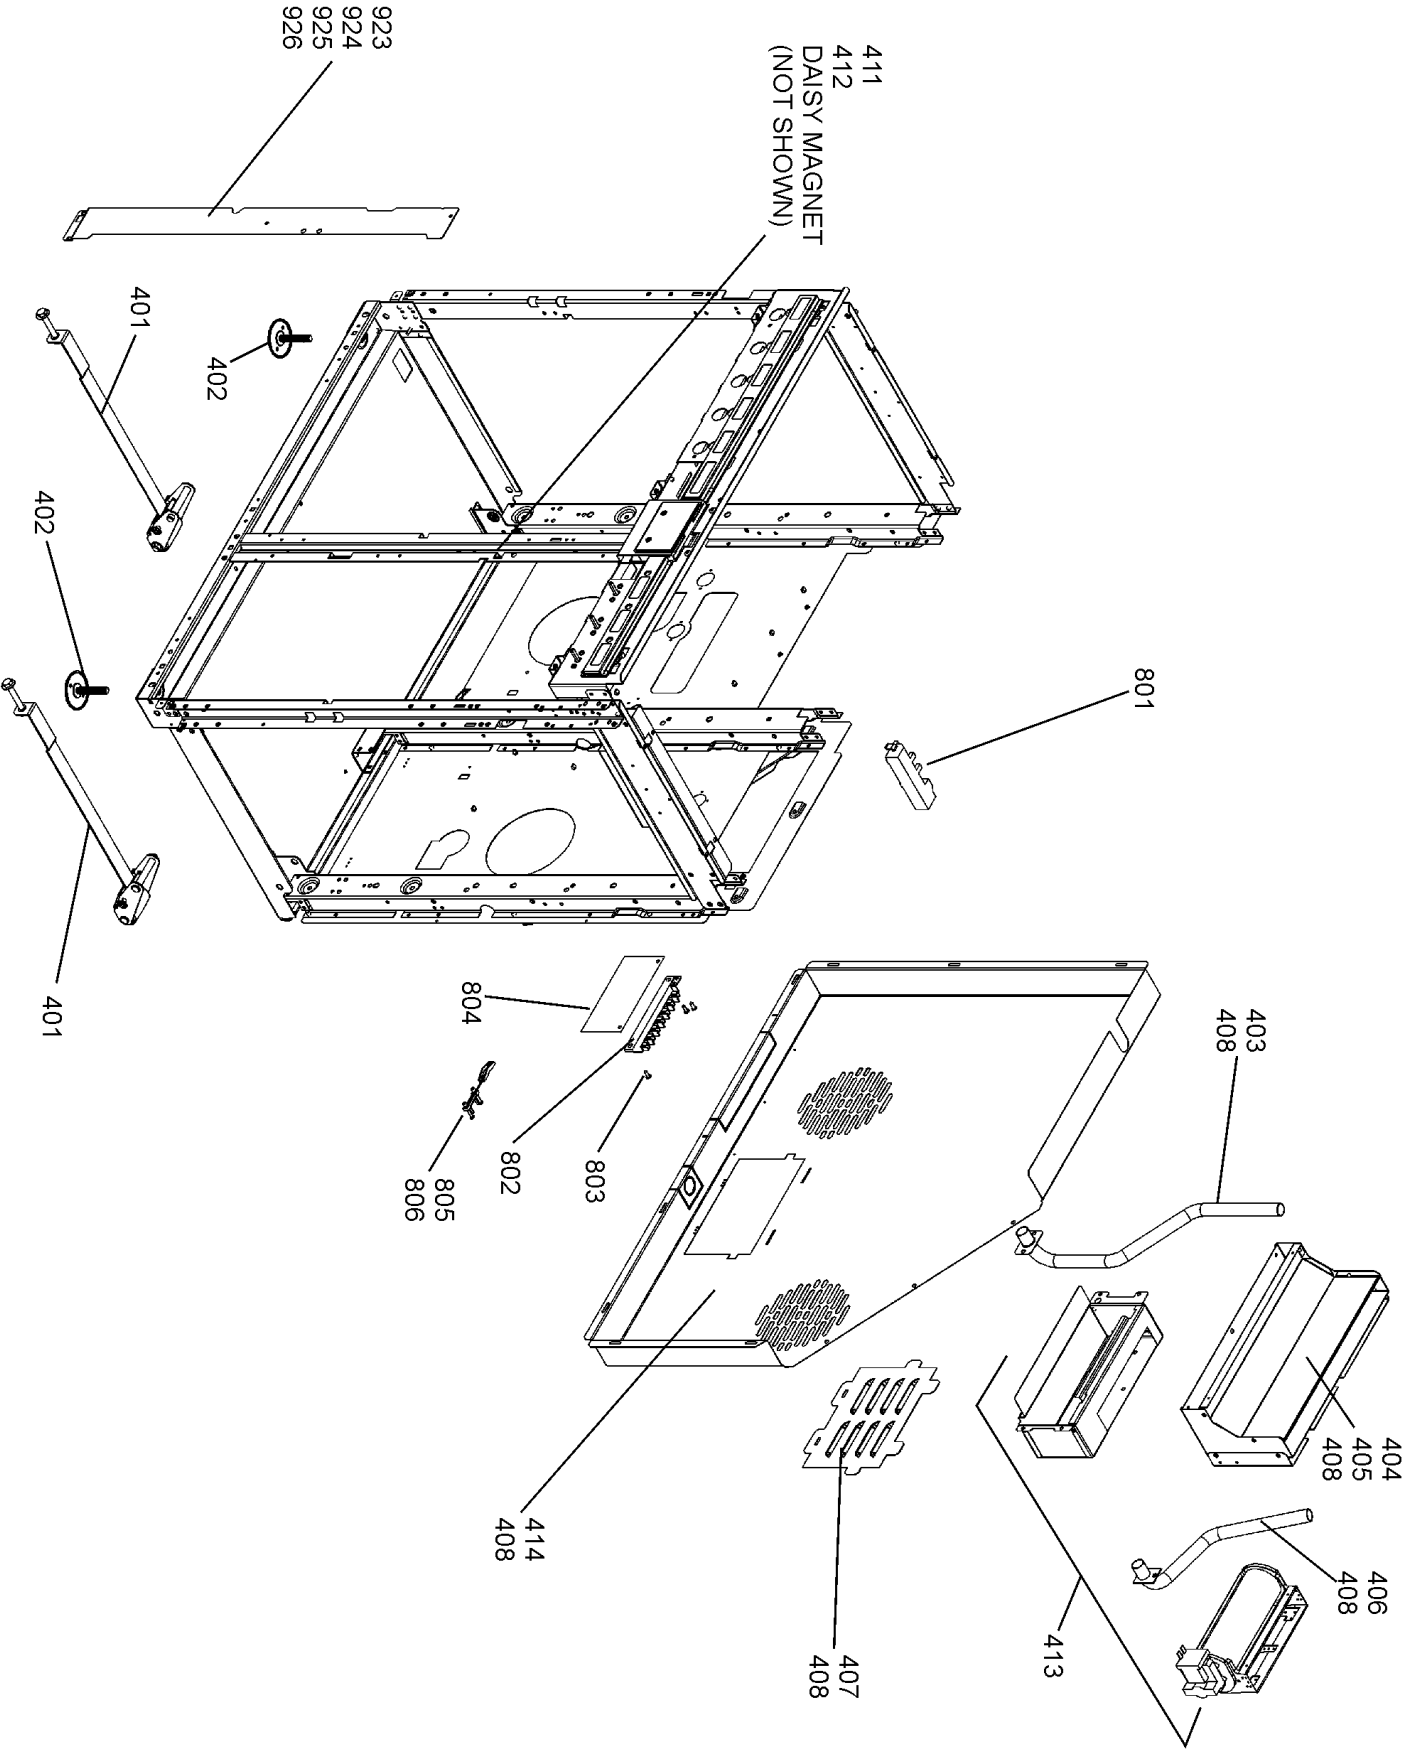


GRILL CHAMBER

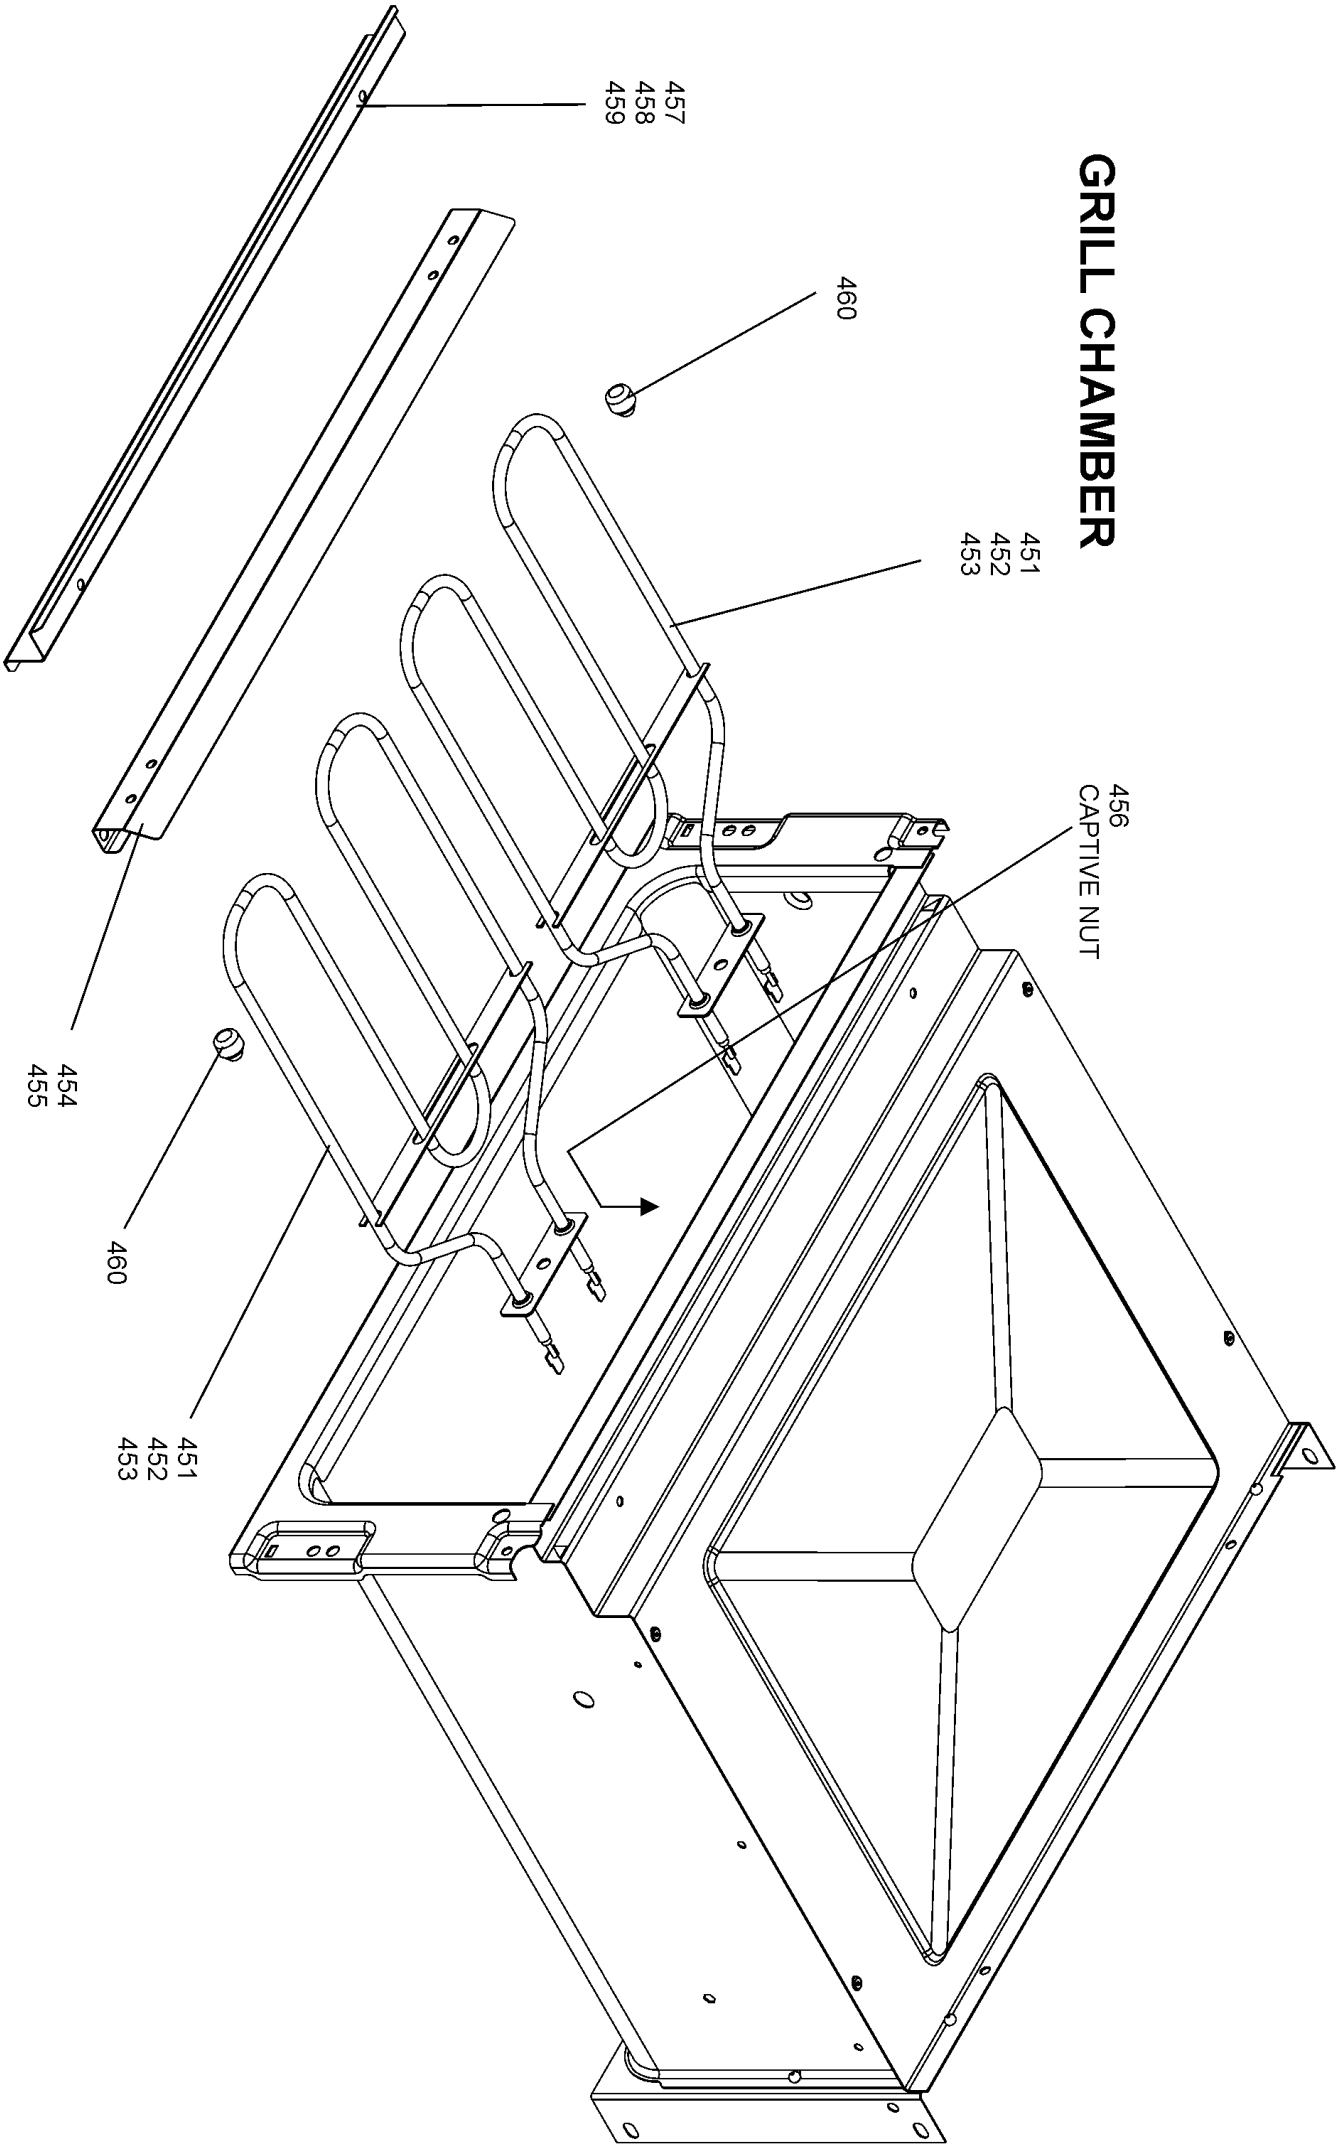


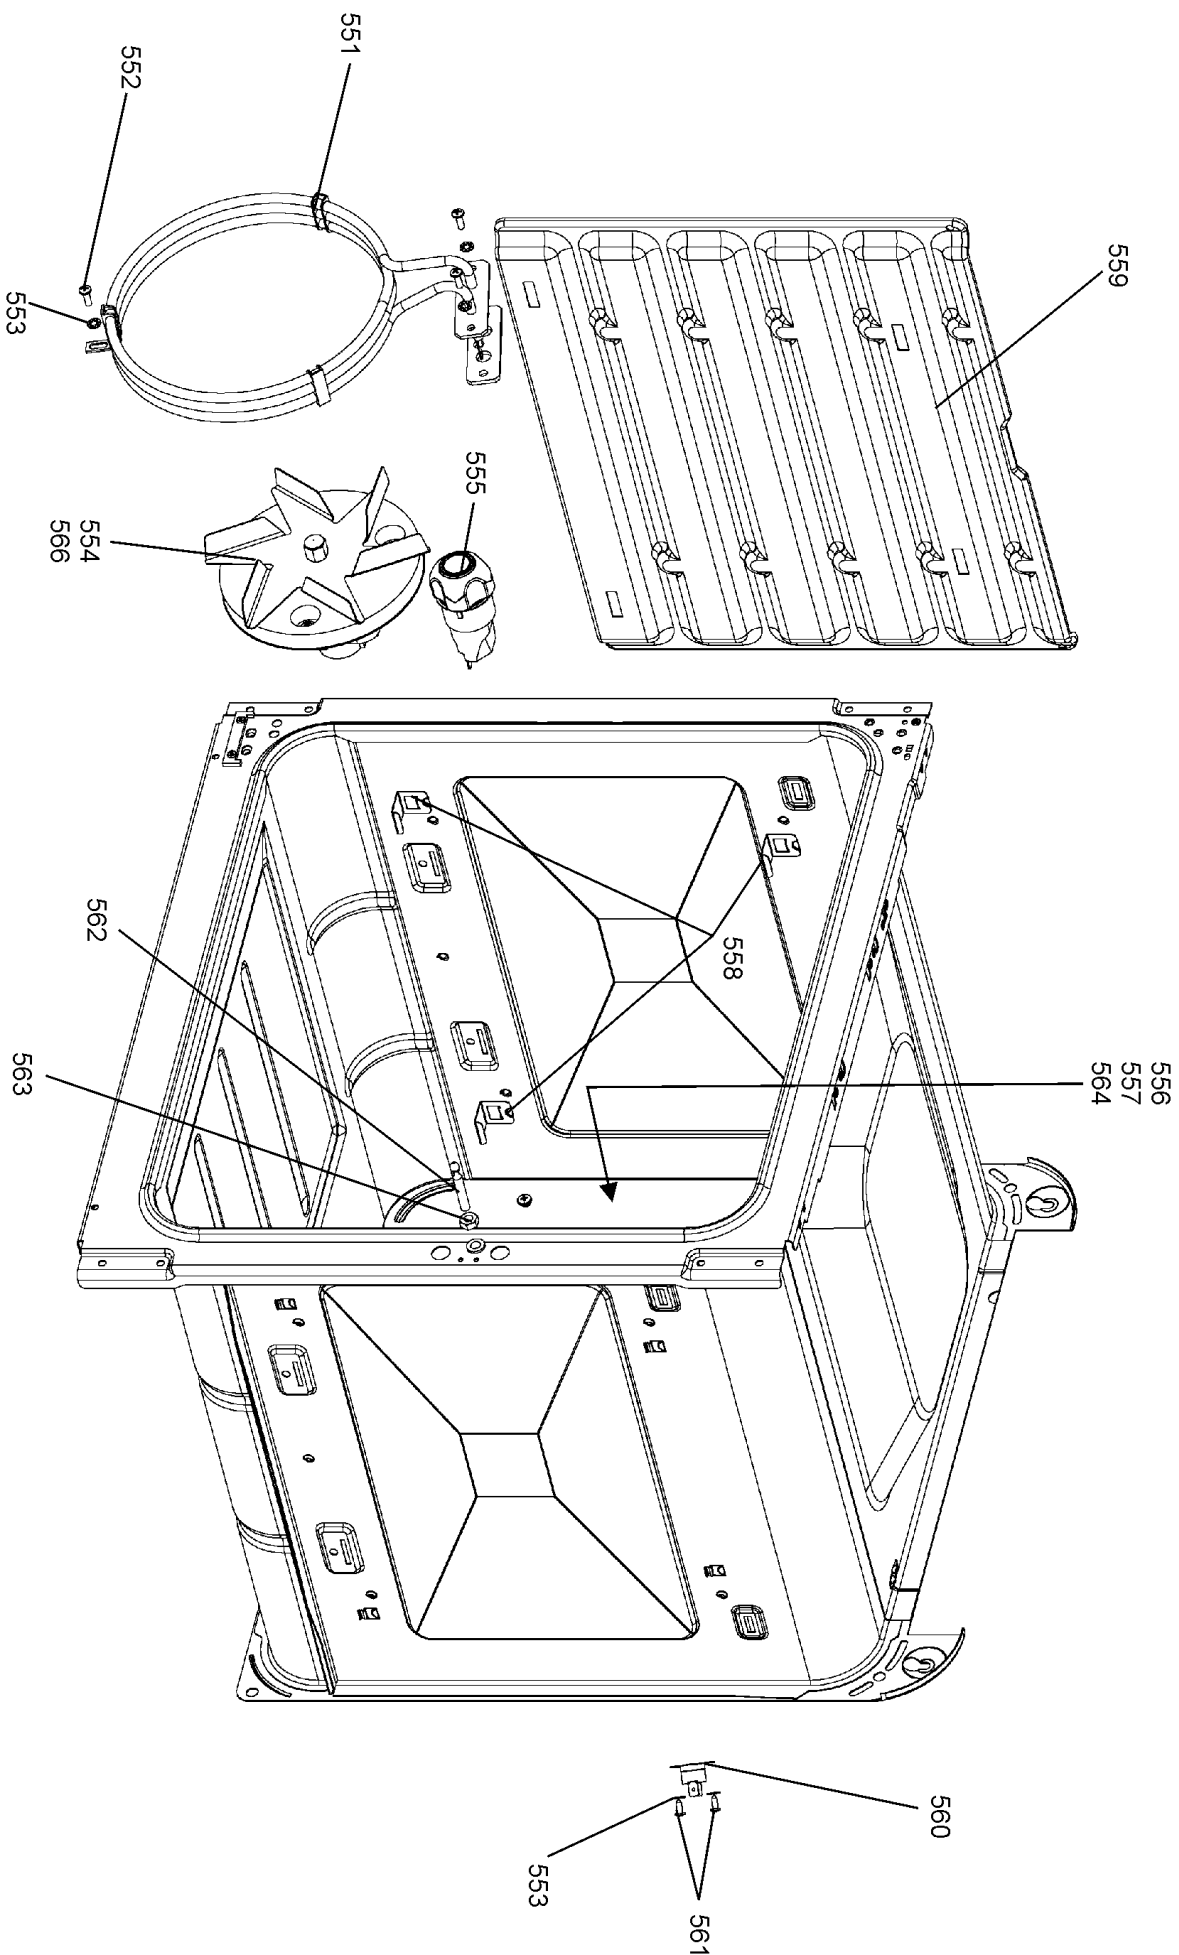


LH OVEN (FAN + LIGHT)
UP TO SERIAL NUMBER 181999

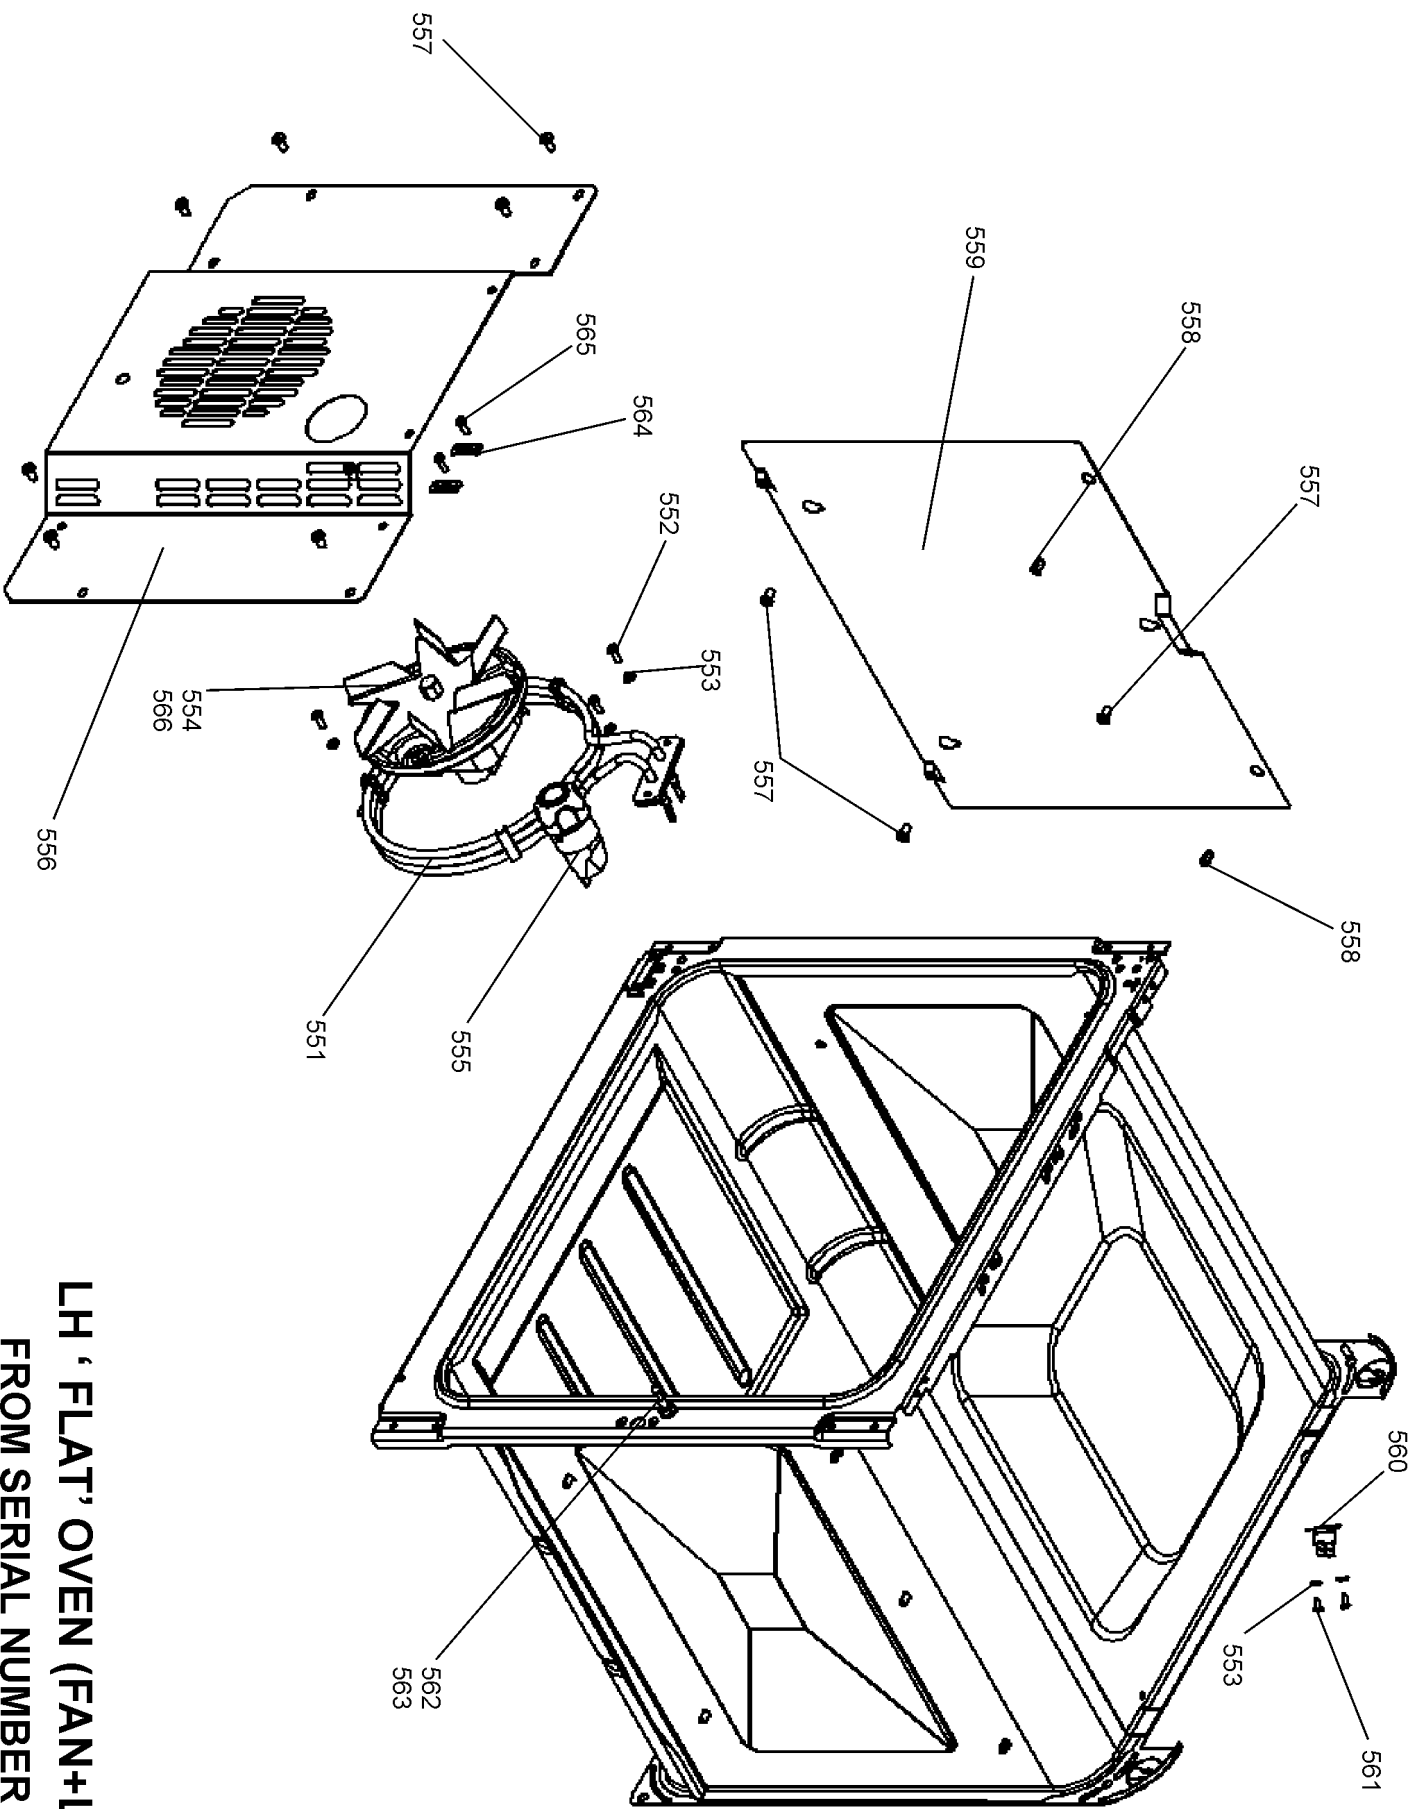


LH 'FLAT' OVEN (FAN+LIGHT)
FROM SERIAL NUMBER 182000

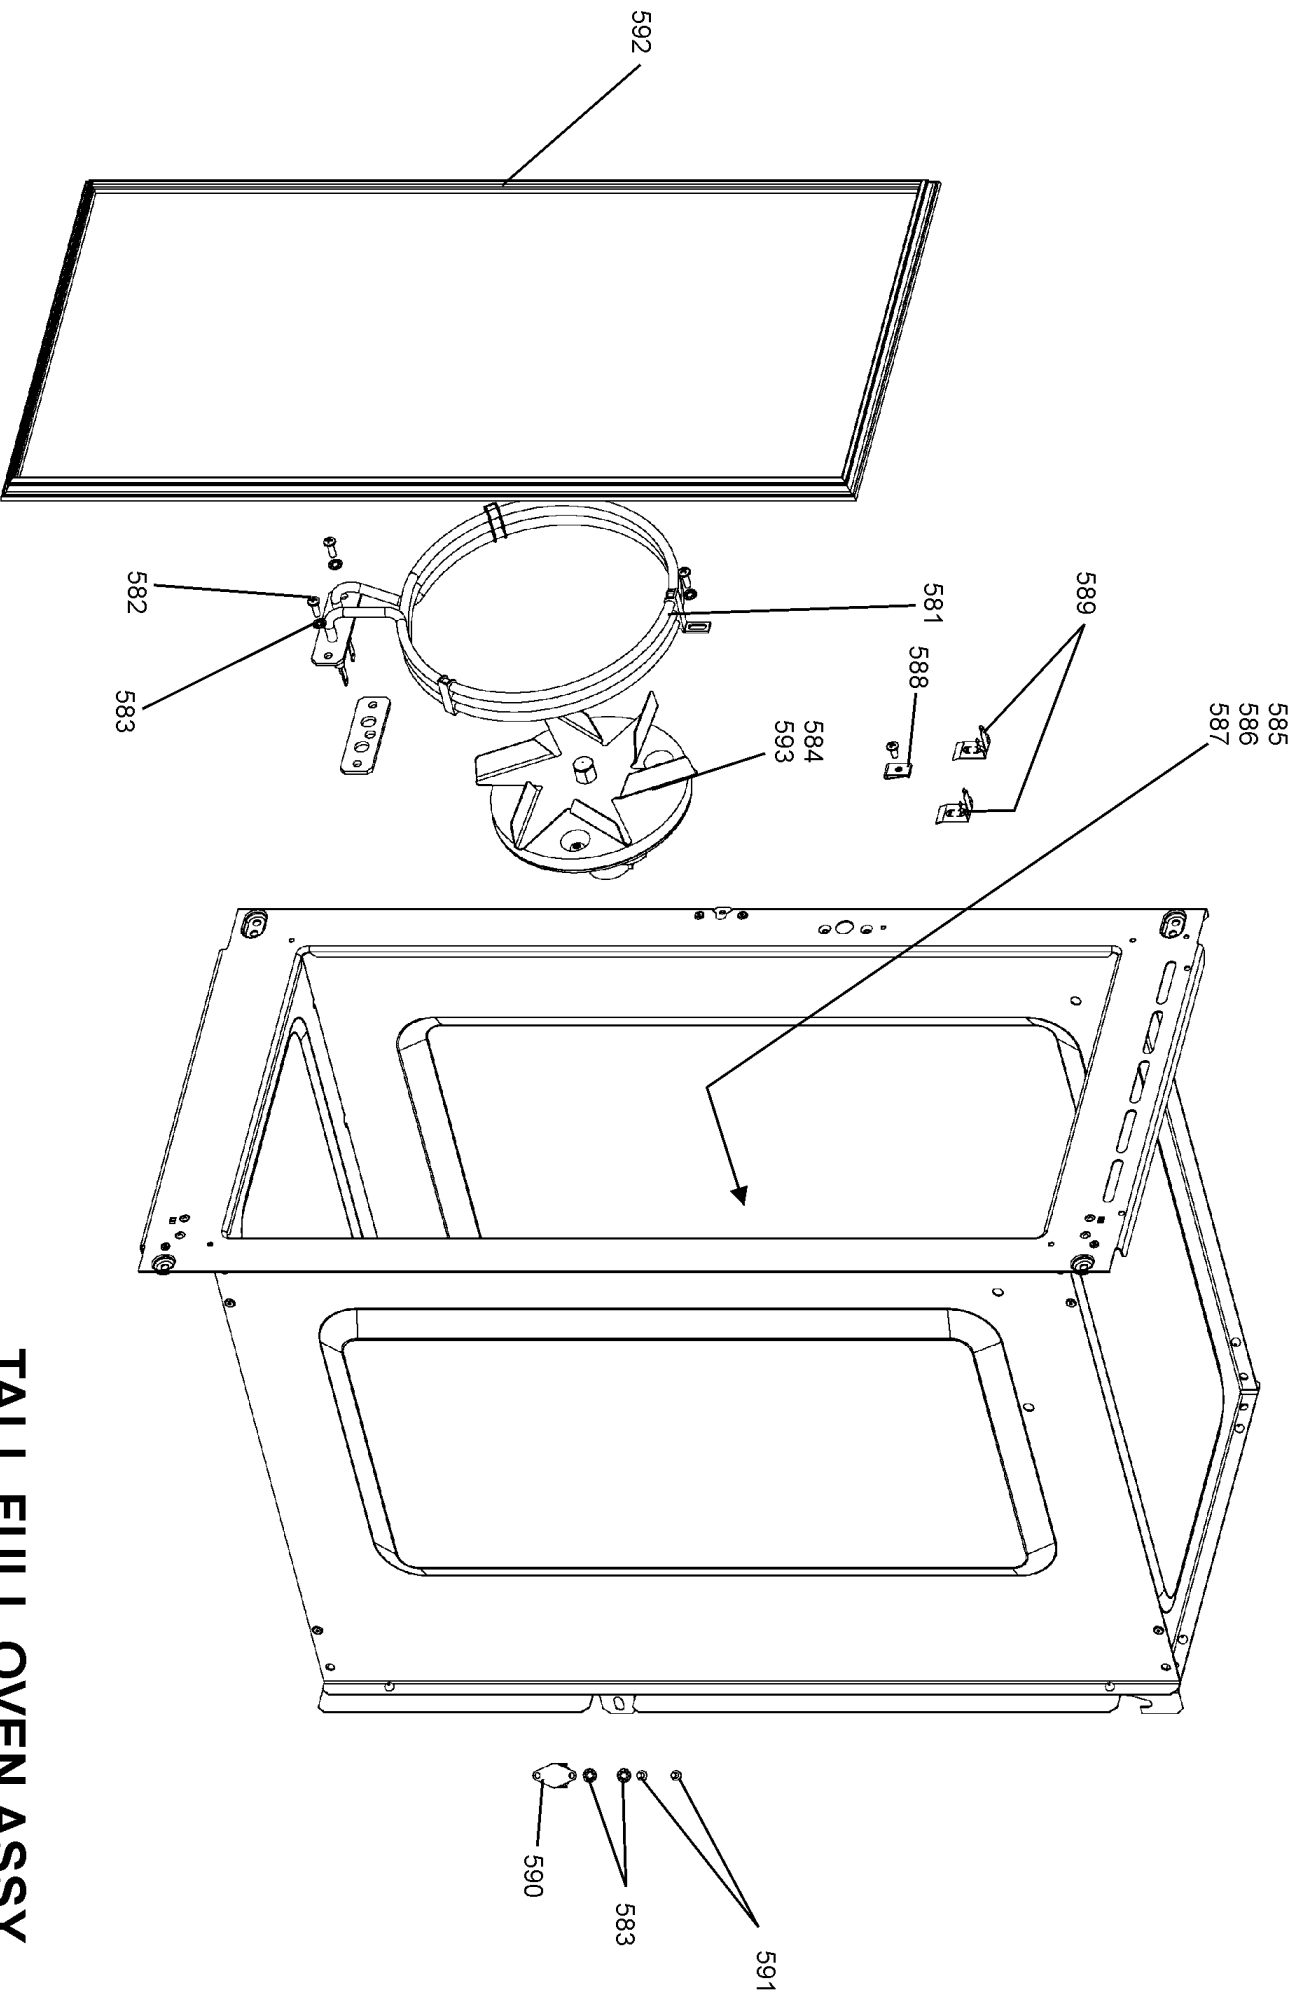



TALL FULL OVEN ASSY
UP TO SERIAL NUMBER 179999

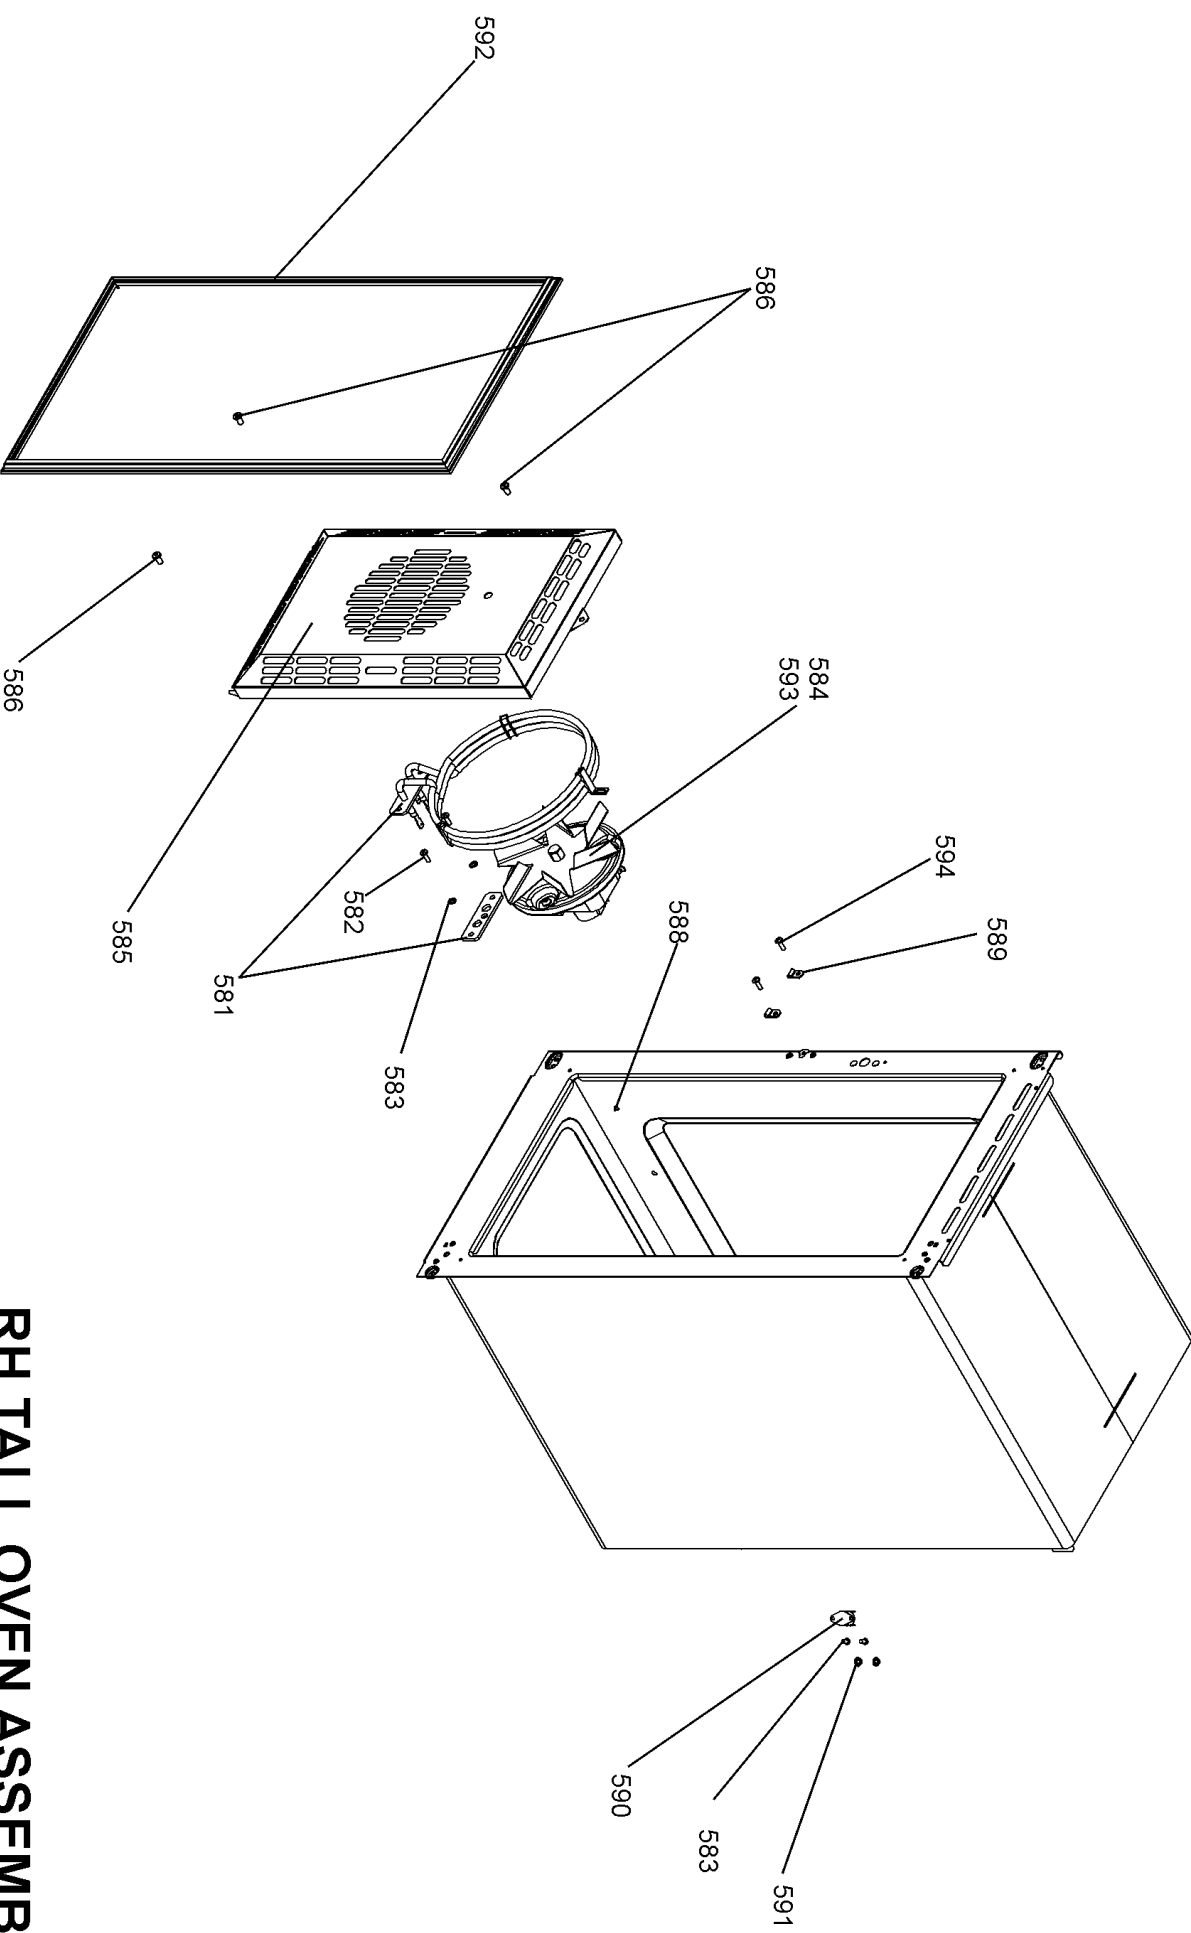


RH TALL OVEN ASSEMBLY
FROM SERIAL NUMBER 180000

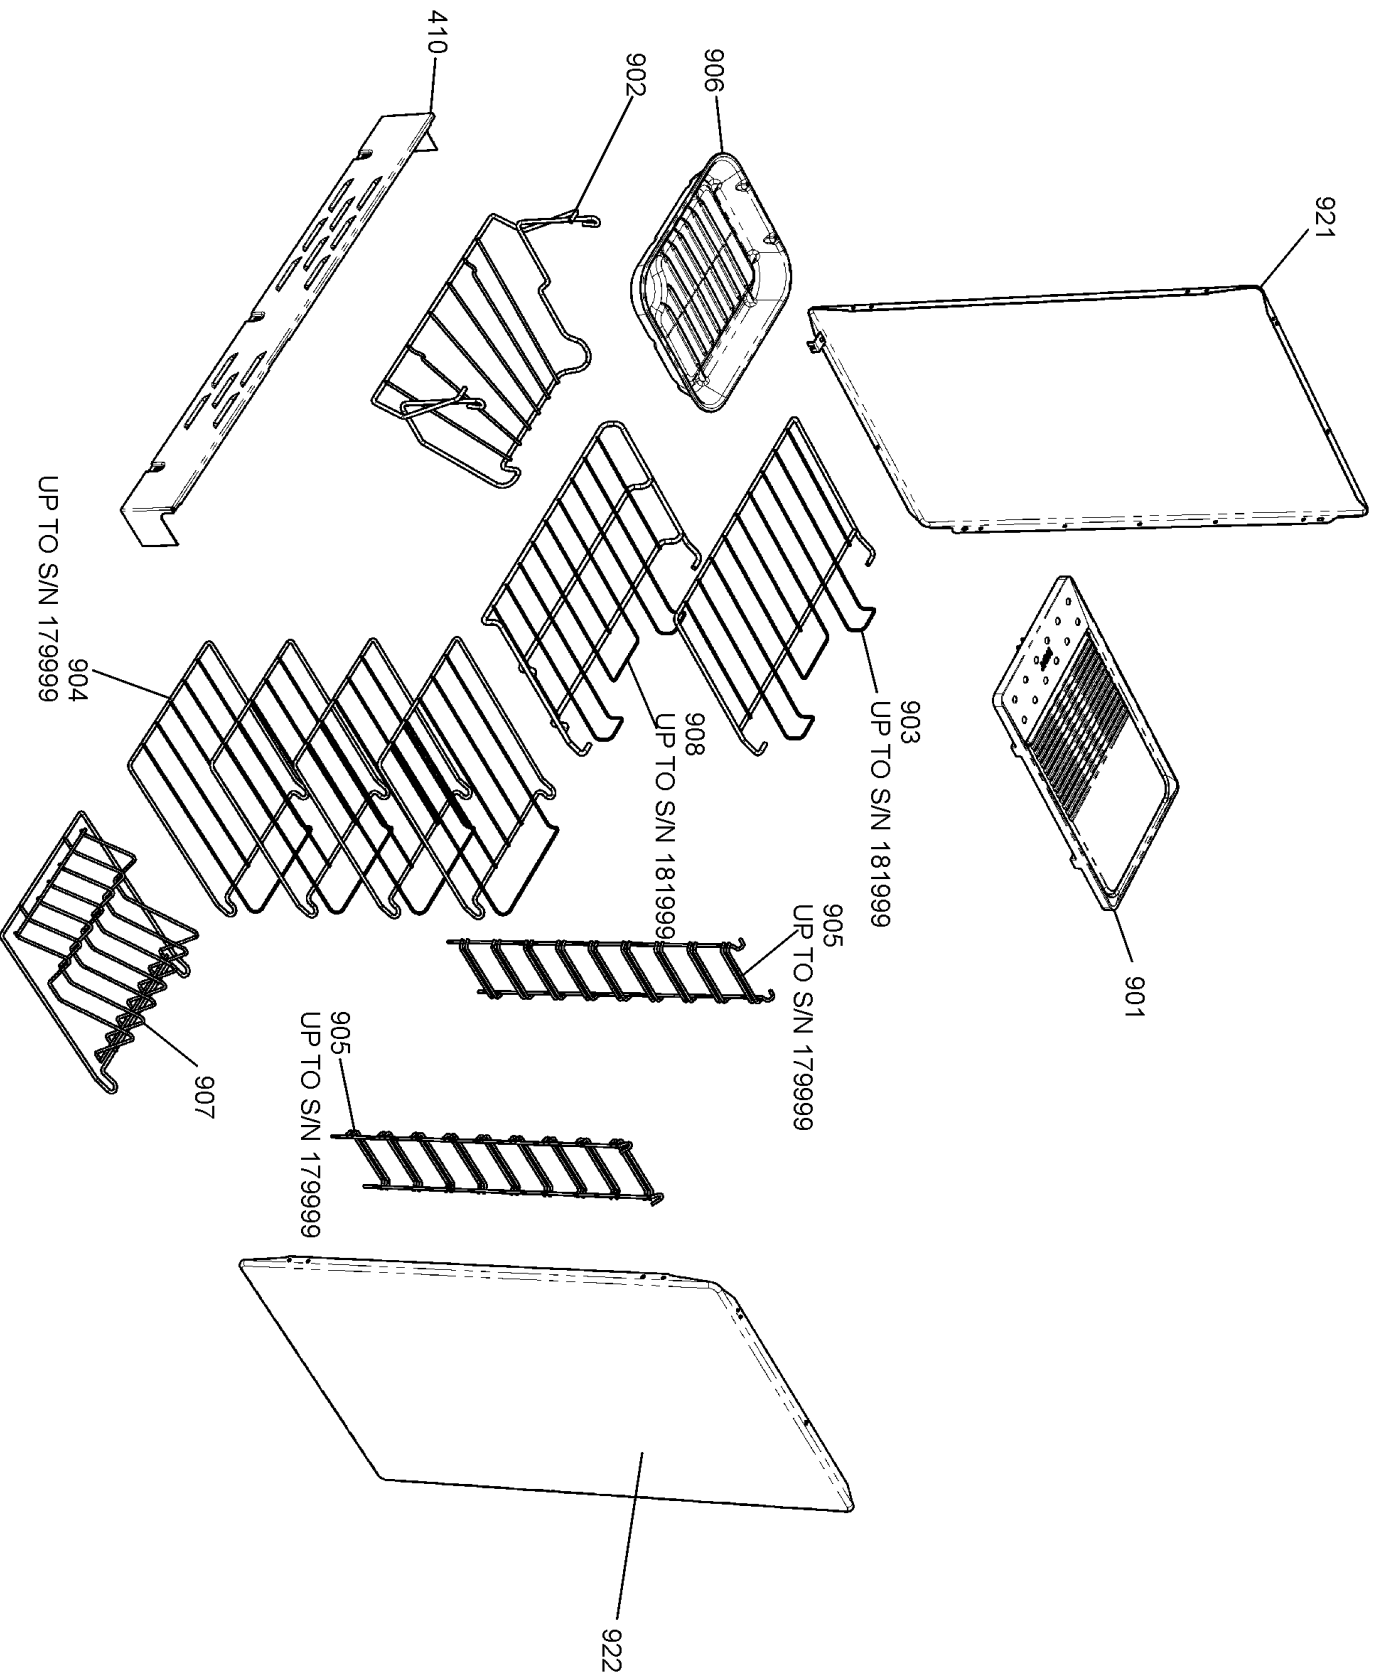

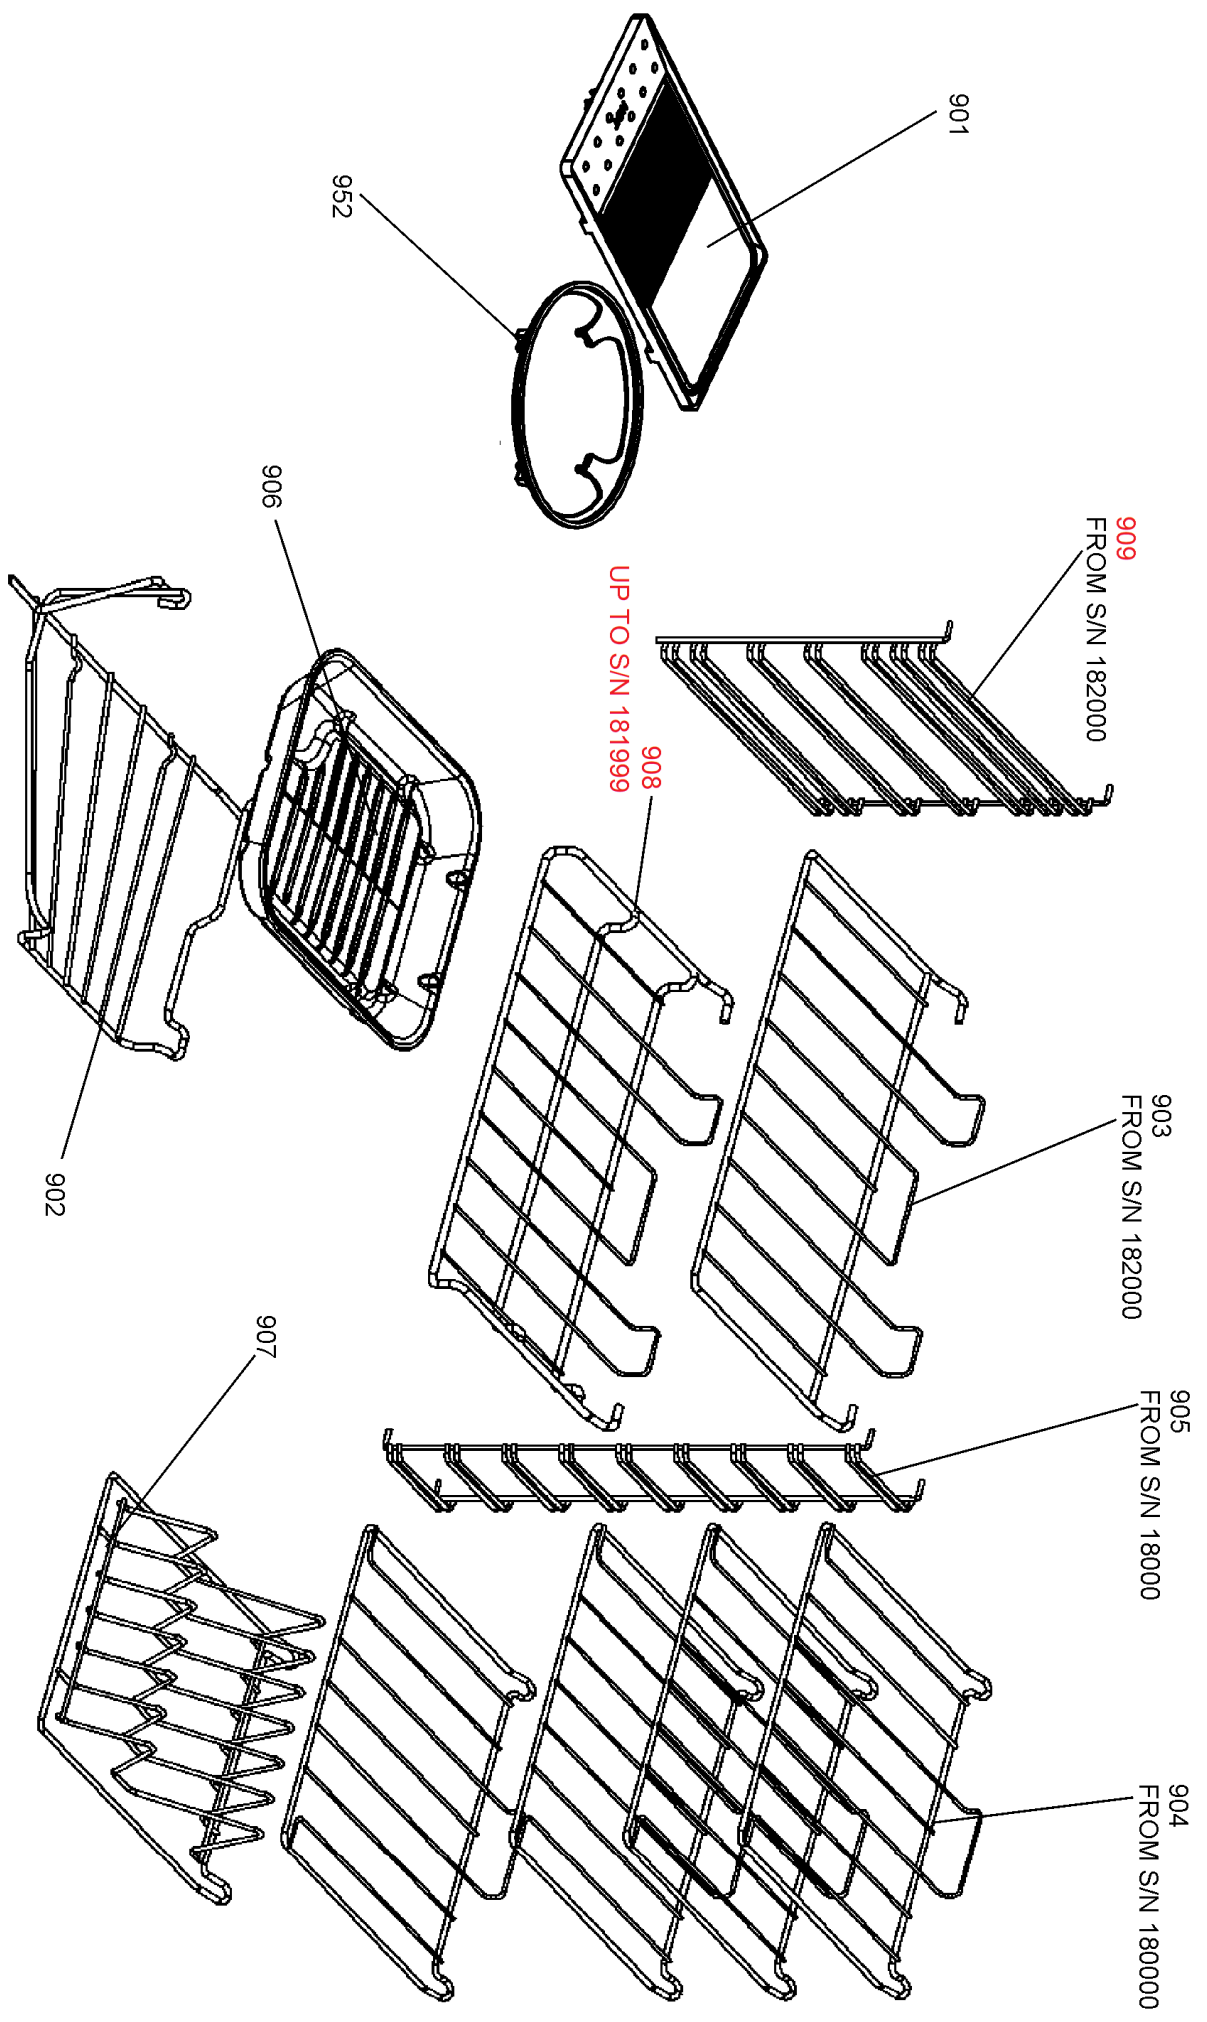

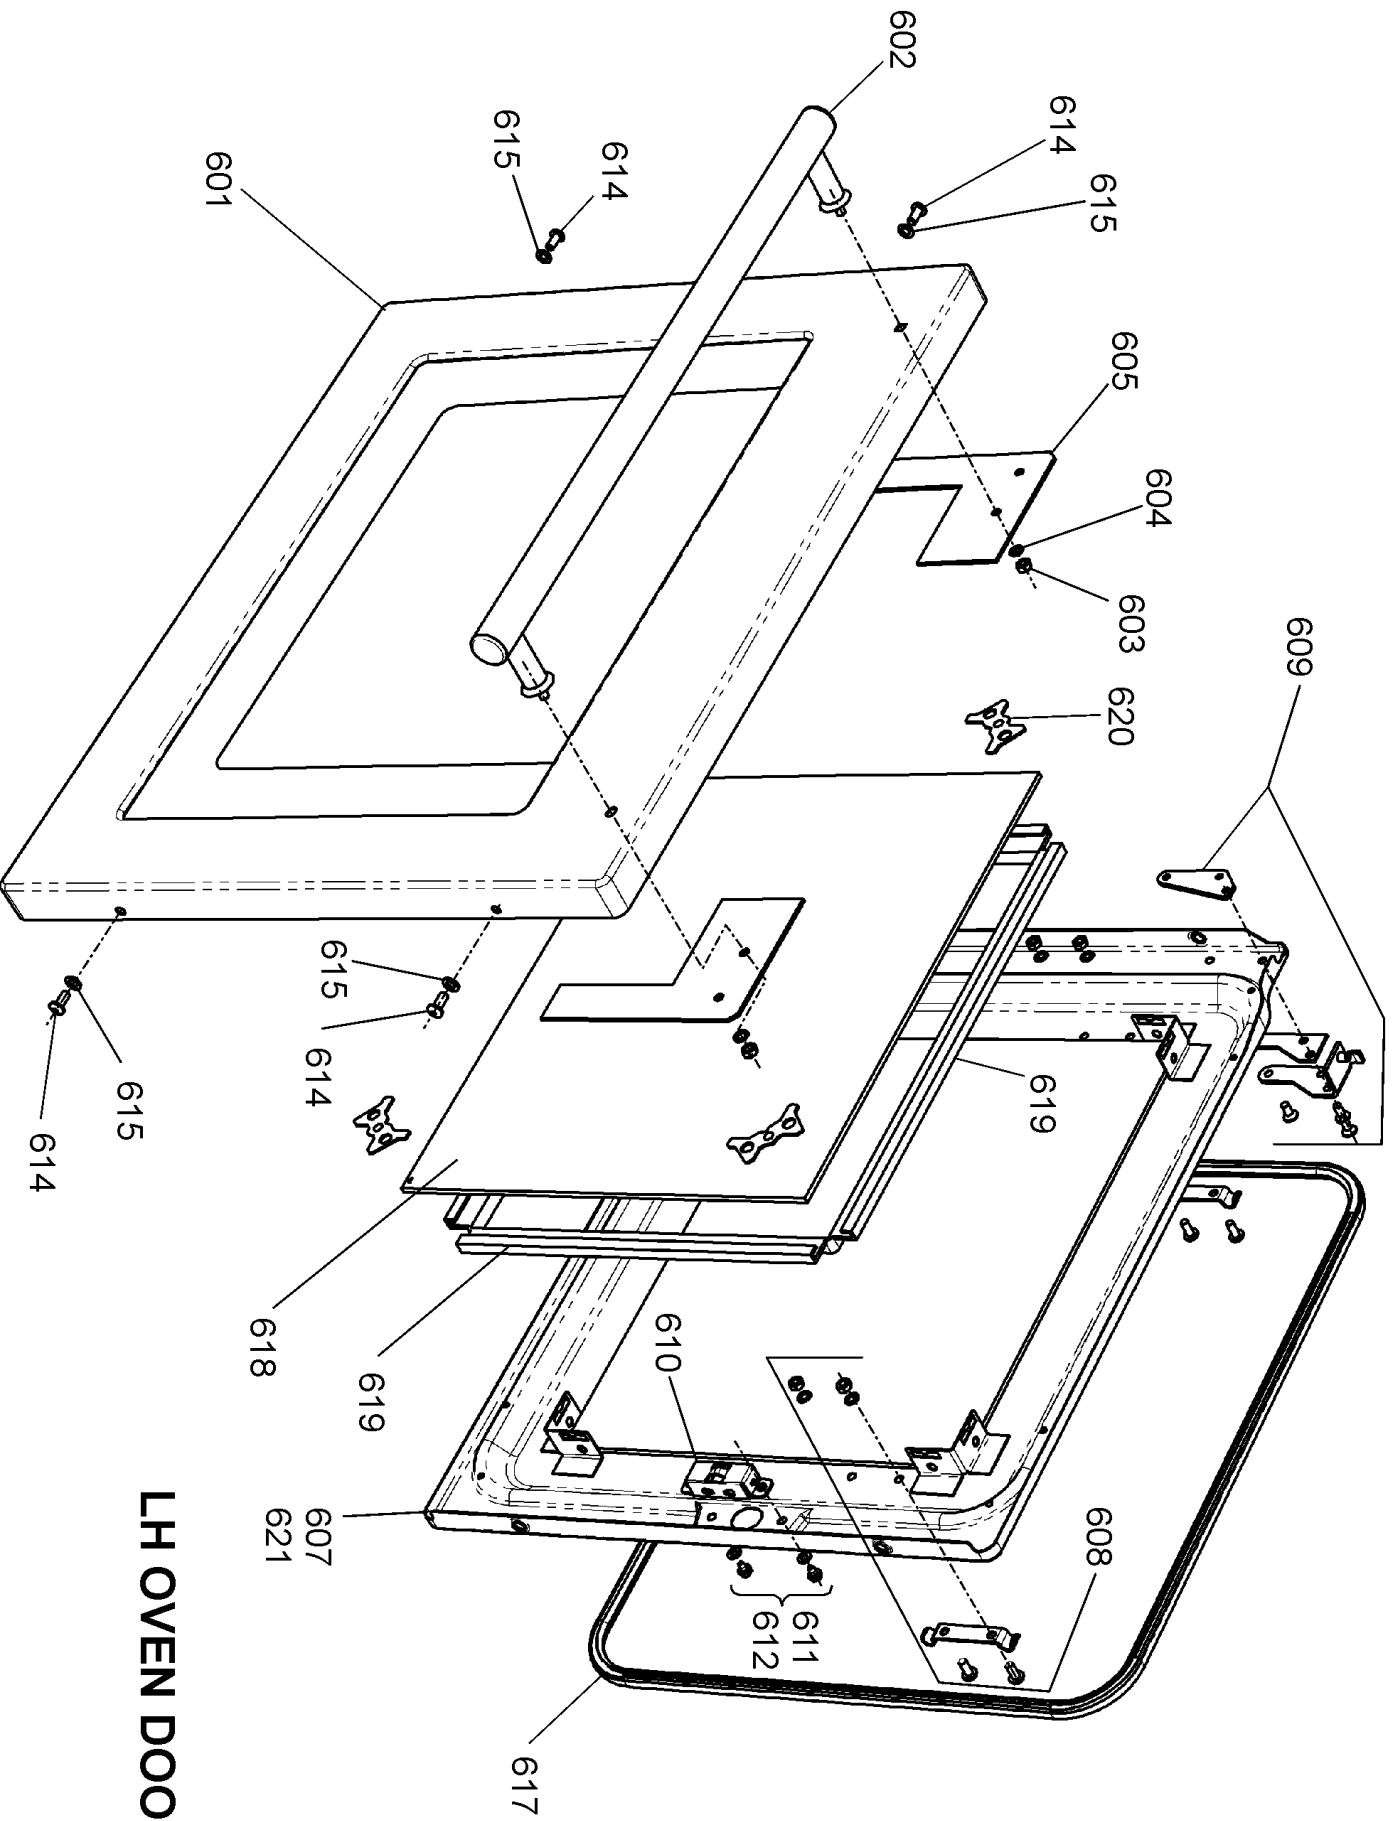

LH OVEN DOOR

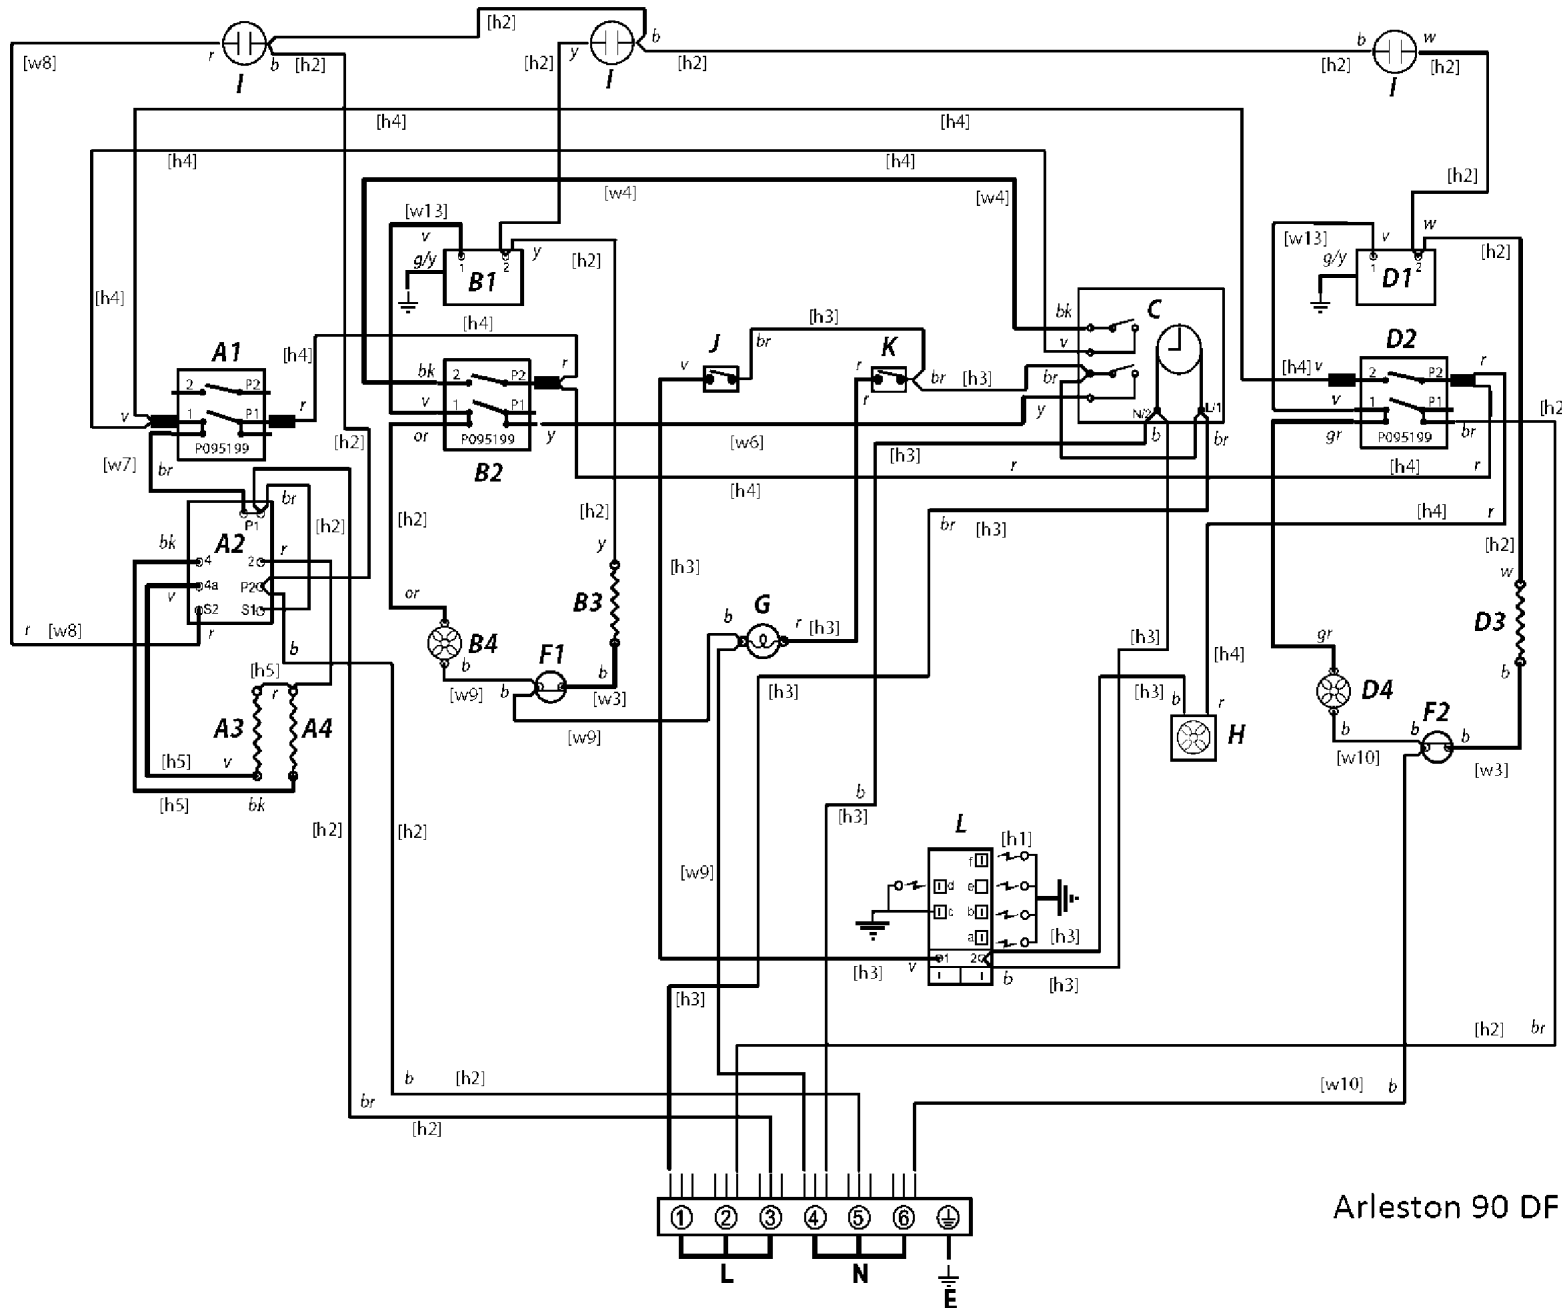

Arleston 90 DF

Ref Number	Part Number	Colour	Qty	Remarks
w1	P055374	g/y	2	Wire- (Nl) GrilleElement Earth to Cooker Back
h1	P049242	Clear	1	Harness - (Nl) Spark Generator to Bruner Heads
w2	P049241	g/y	1	Wire- (Nl) Spark Generator to Cooker Frame
w3	P040066	b	2	Wire - Oven Element CutOuts Neutral Link
w4	P038186	bk	1	Wire - Clock to LH Oven Switch - Cooling Fan Control
w5	P094943	g/y	1	Wire - (Nl) Earth Links - Thermostats - Hotplate
w6	P037438	y	1	Wire - Clock to LH Oven Switch - Oven Control
w7	P055344	br	1	Wire - Energy Reg to Front Switch
h2	P062498	br/b/bk/w/or/y	1	Harness - LH and RH Ovens
h3	P062497	br/b/v/r/	1	Harness - Timer/Oven Light/ Spark Gen / Cooling Fan / Gas Ignition
h4	P060876	r/v	1	Harness - Cooling Fan Front Switch Links
w8	P094951	r	1	Wire - Energy Regulator to Neon
w9	P043963	b	1	Wire - Neutral Link LH Oven
w10	P036011	b	1	Wire - Neutral Link RH Oven
w11	P095450	g/y	1	Wire- (Nl) Earth Link LH Oven
w12	P027672	g/y	1	Wire- (Nl) Earth Link RH Oven
h5	P033958	bk/r/v	1	Harness - Grill
w13	P033086	v	2	Wire - RH and LH Oven Switch to Thermostat Link

Code	Description
A1	Grill Front Switch
A2	Grill Energy Regulator
A3	Grill Elements - LH
A4	Grill Elements - RH
B1	Left-Hand Oven Thermostat
B2	Left Hand Oven Front Switch
B3	Left Hand Oven Fan Element
B4	Left Hand Oven Fan
C	Clock / Timer

Code	Description
D1	Right - Hand Oven Thermostat
D2	Right - Hand Oven Front Switch
D3	Right- Hand Oven Element
D4	Right - Hand Oven Fan
F1	Left - Hand Oven Thermal Preset
F2	Right - Hand Oven Thermal Preset
G	Left Hand Oven Light
H	Cooling Fan
I	Indicator Neon
J	Ignition Switch
K	Oven Light Switch
L	Spark Generator

Code	Colour
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
g/y	Green/Yellow
gr	Grey