

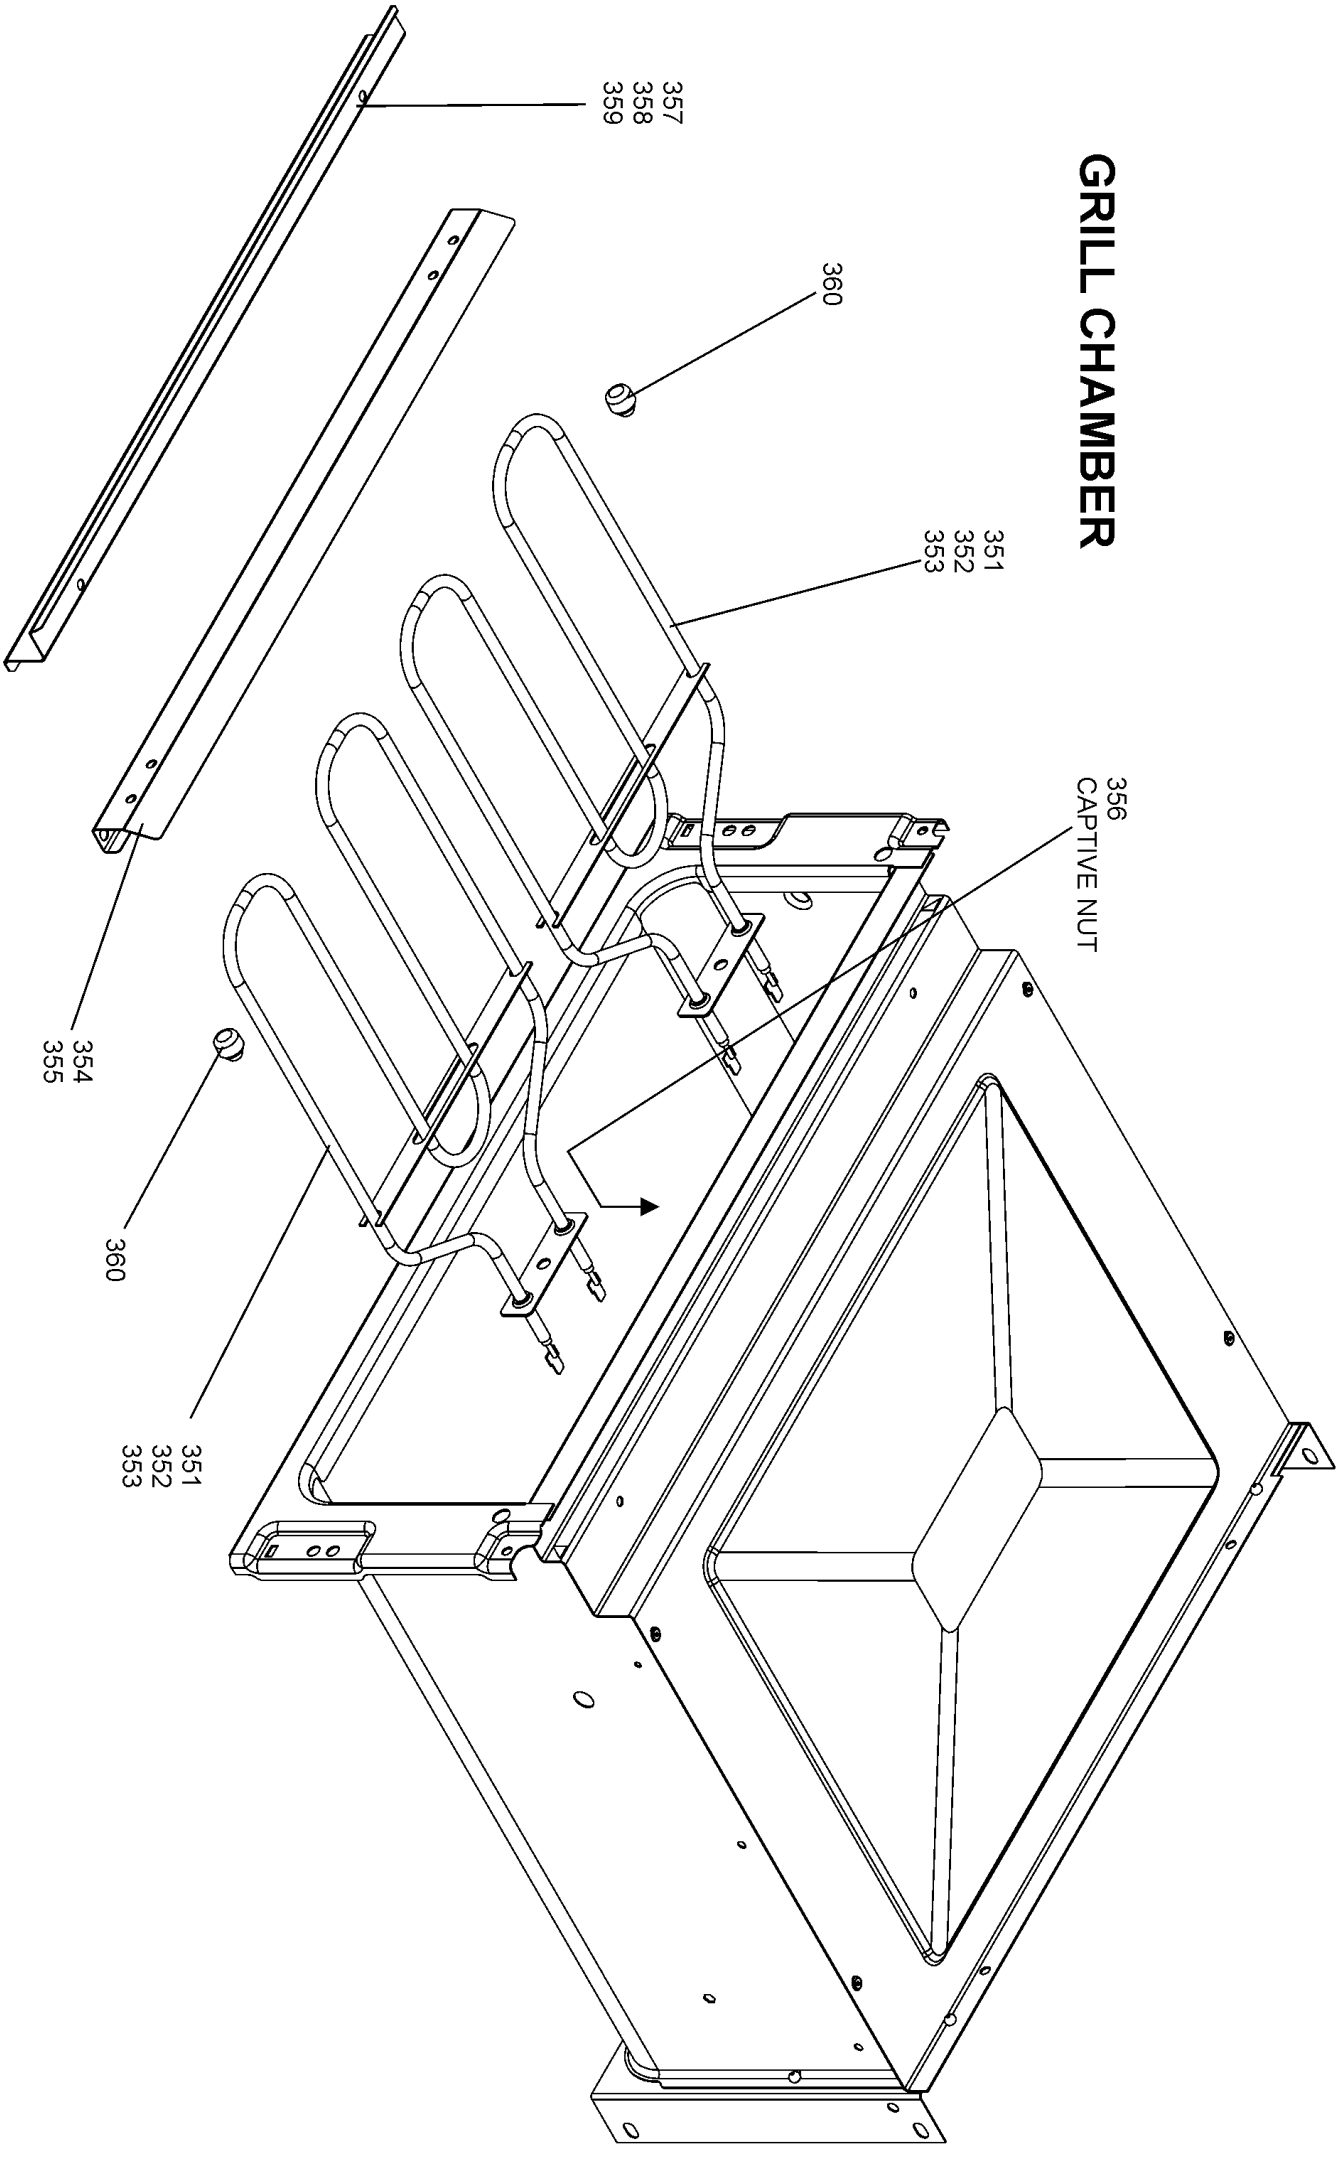



GRILL CHAMBER

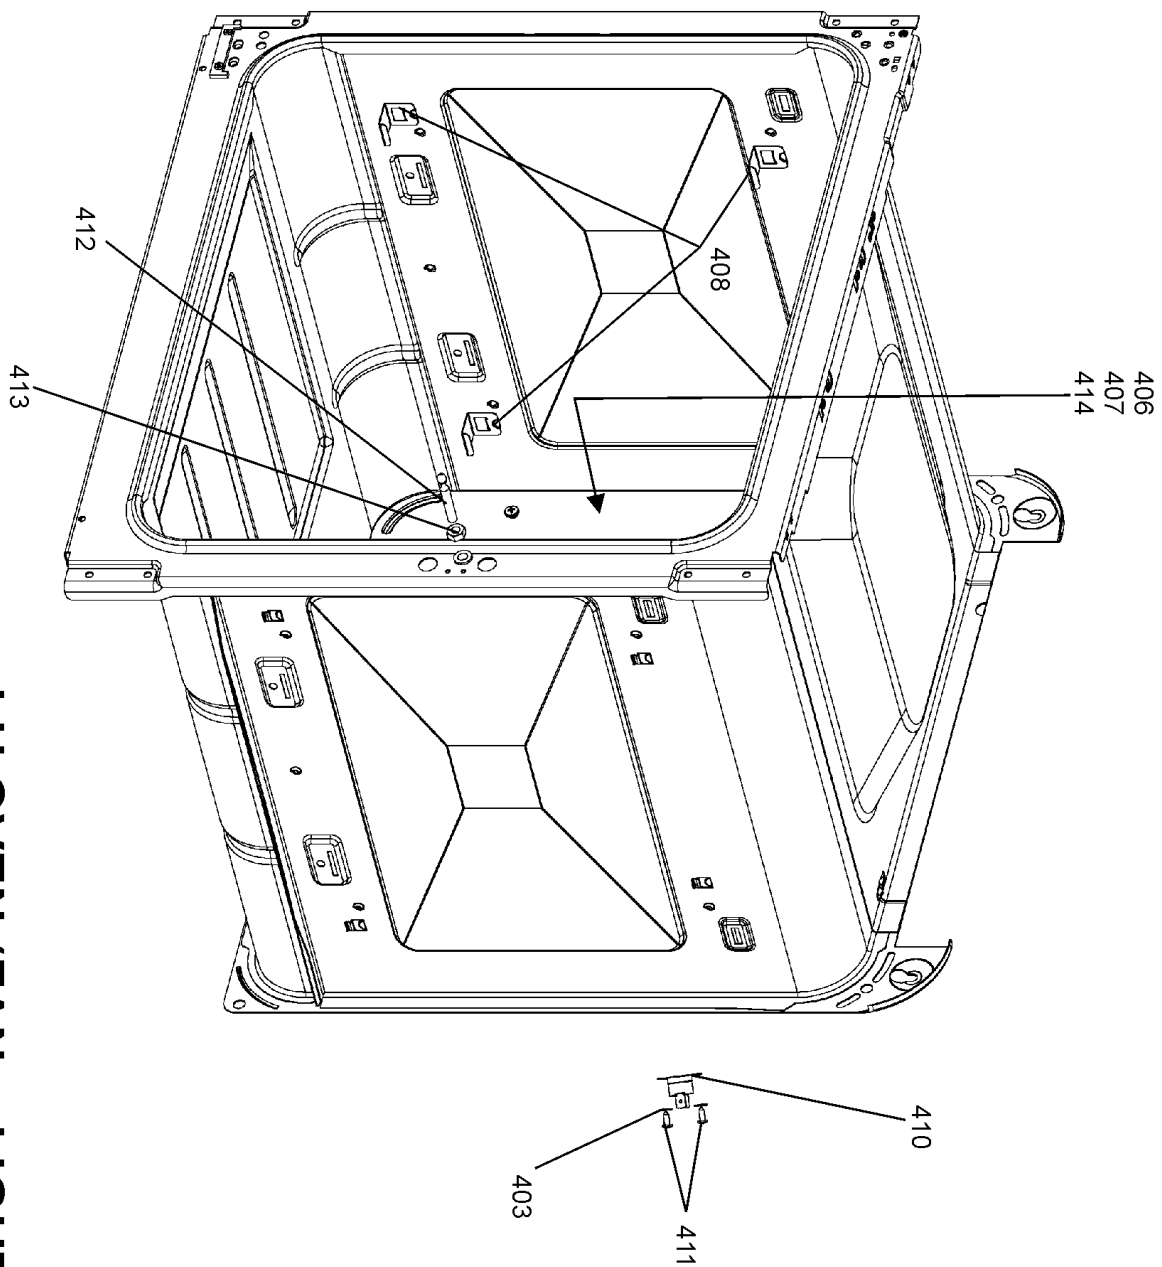

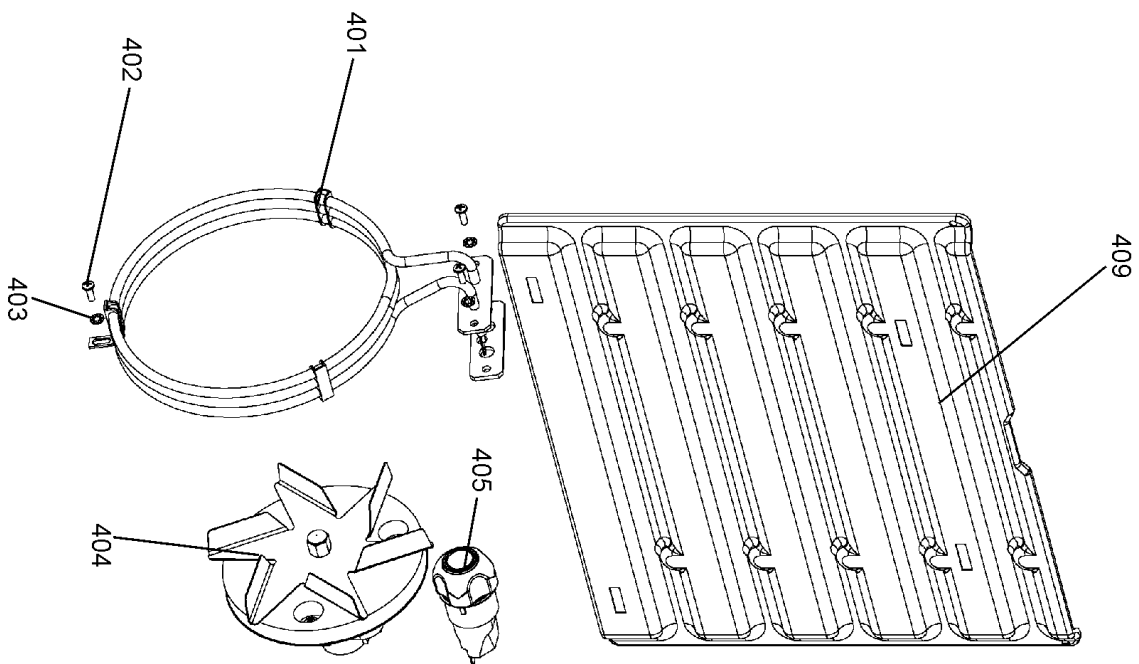


LH OVEN (FAN + LIGHT)


UP TO SERIAL NUMBER 181999

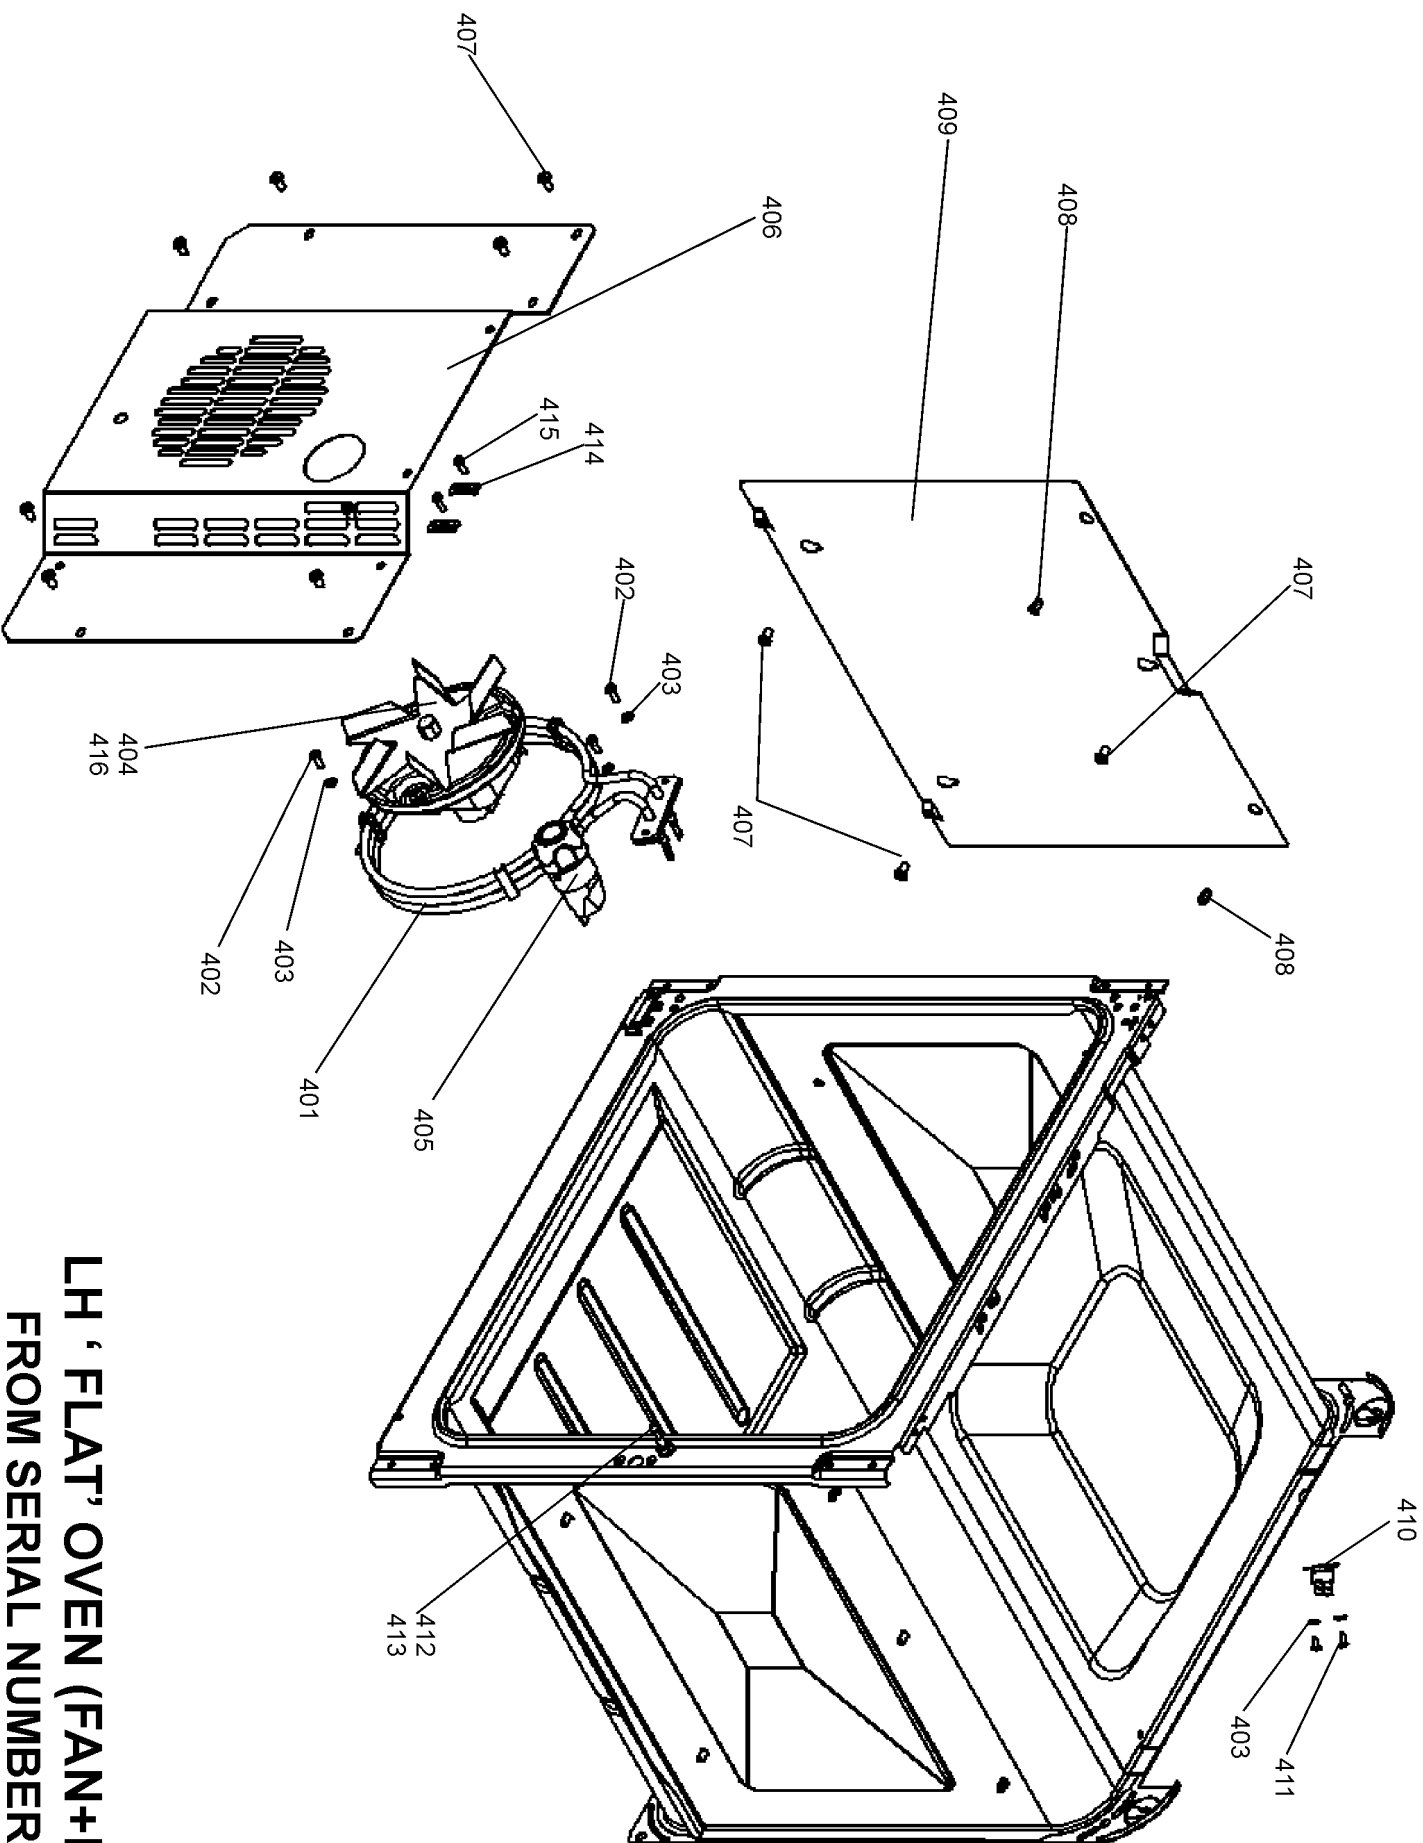

LH 'FLAT' OVEN (FAN+LIGHT)
FROM SERIAL NUMBER 182000


RH TALL OVEN ASSEMBLY

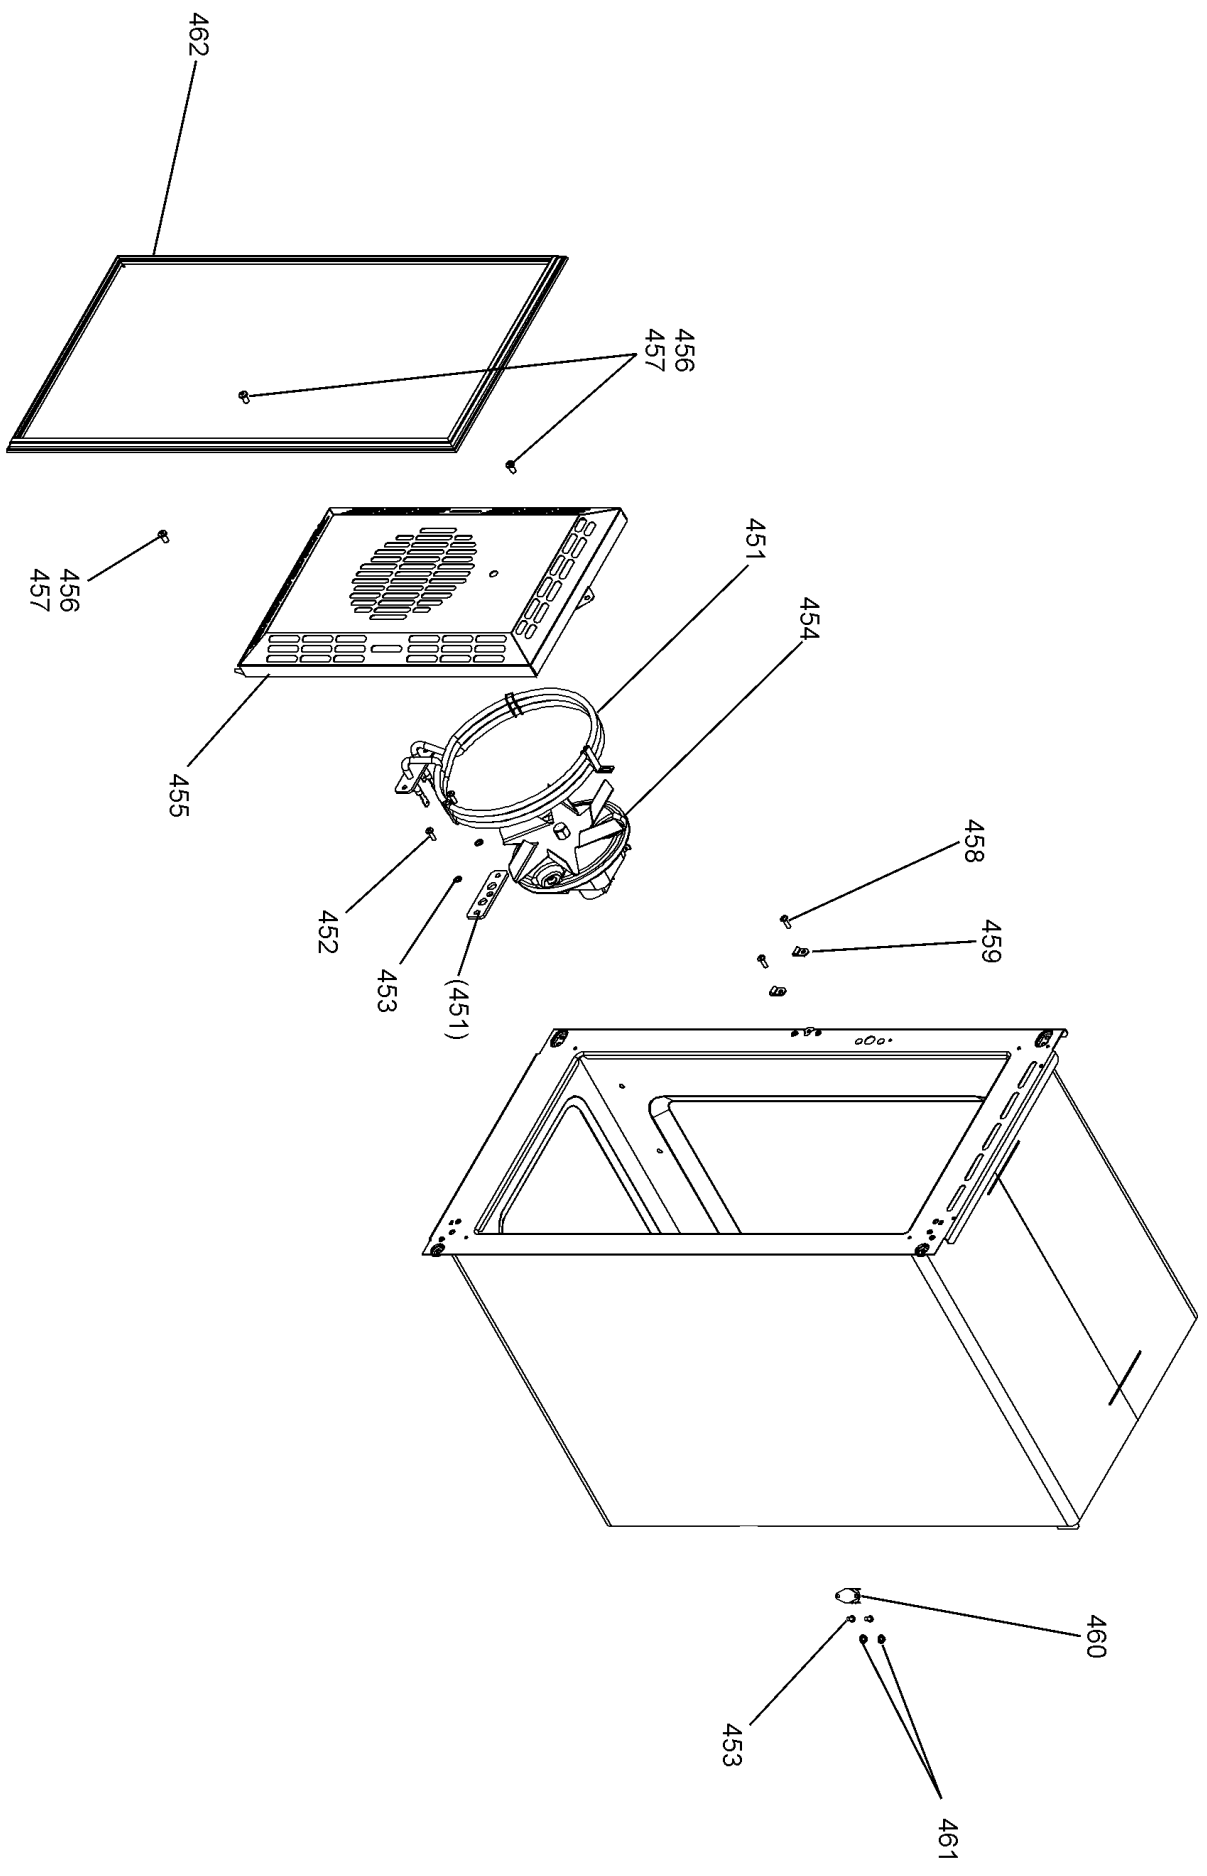

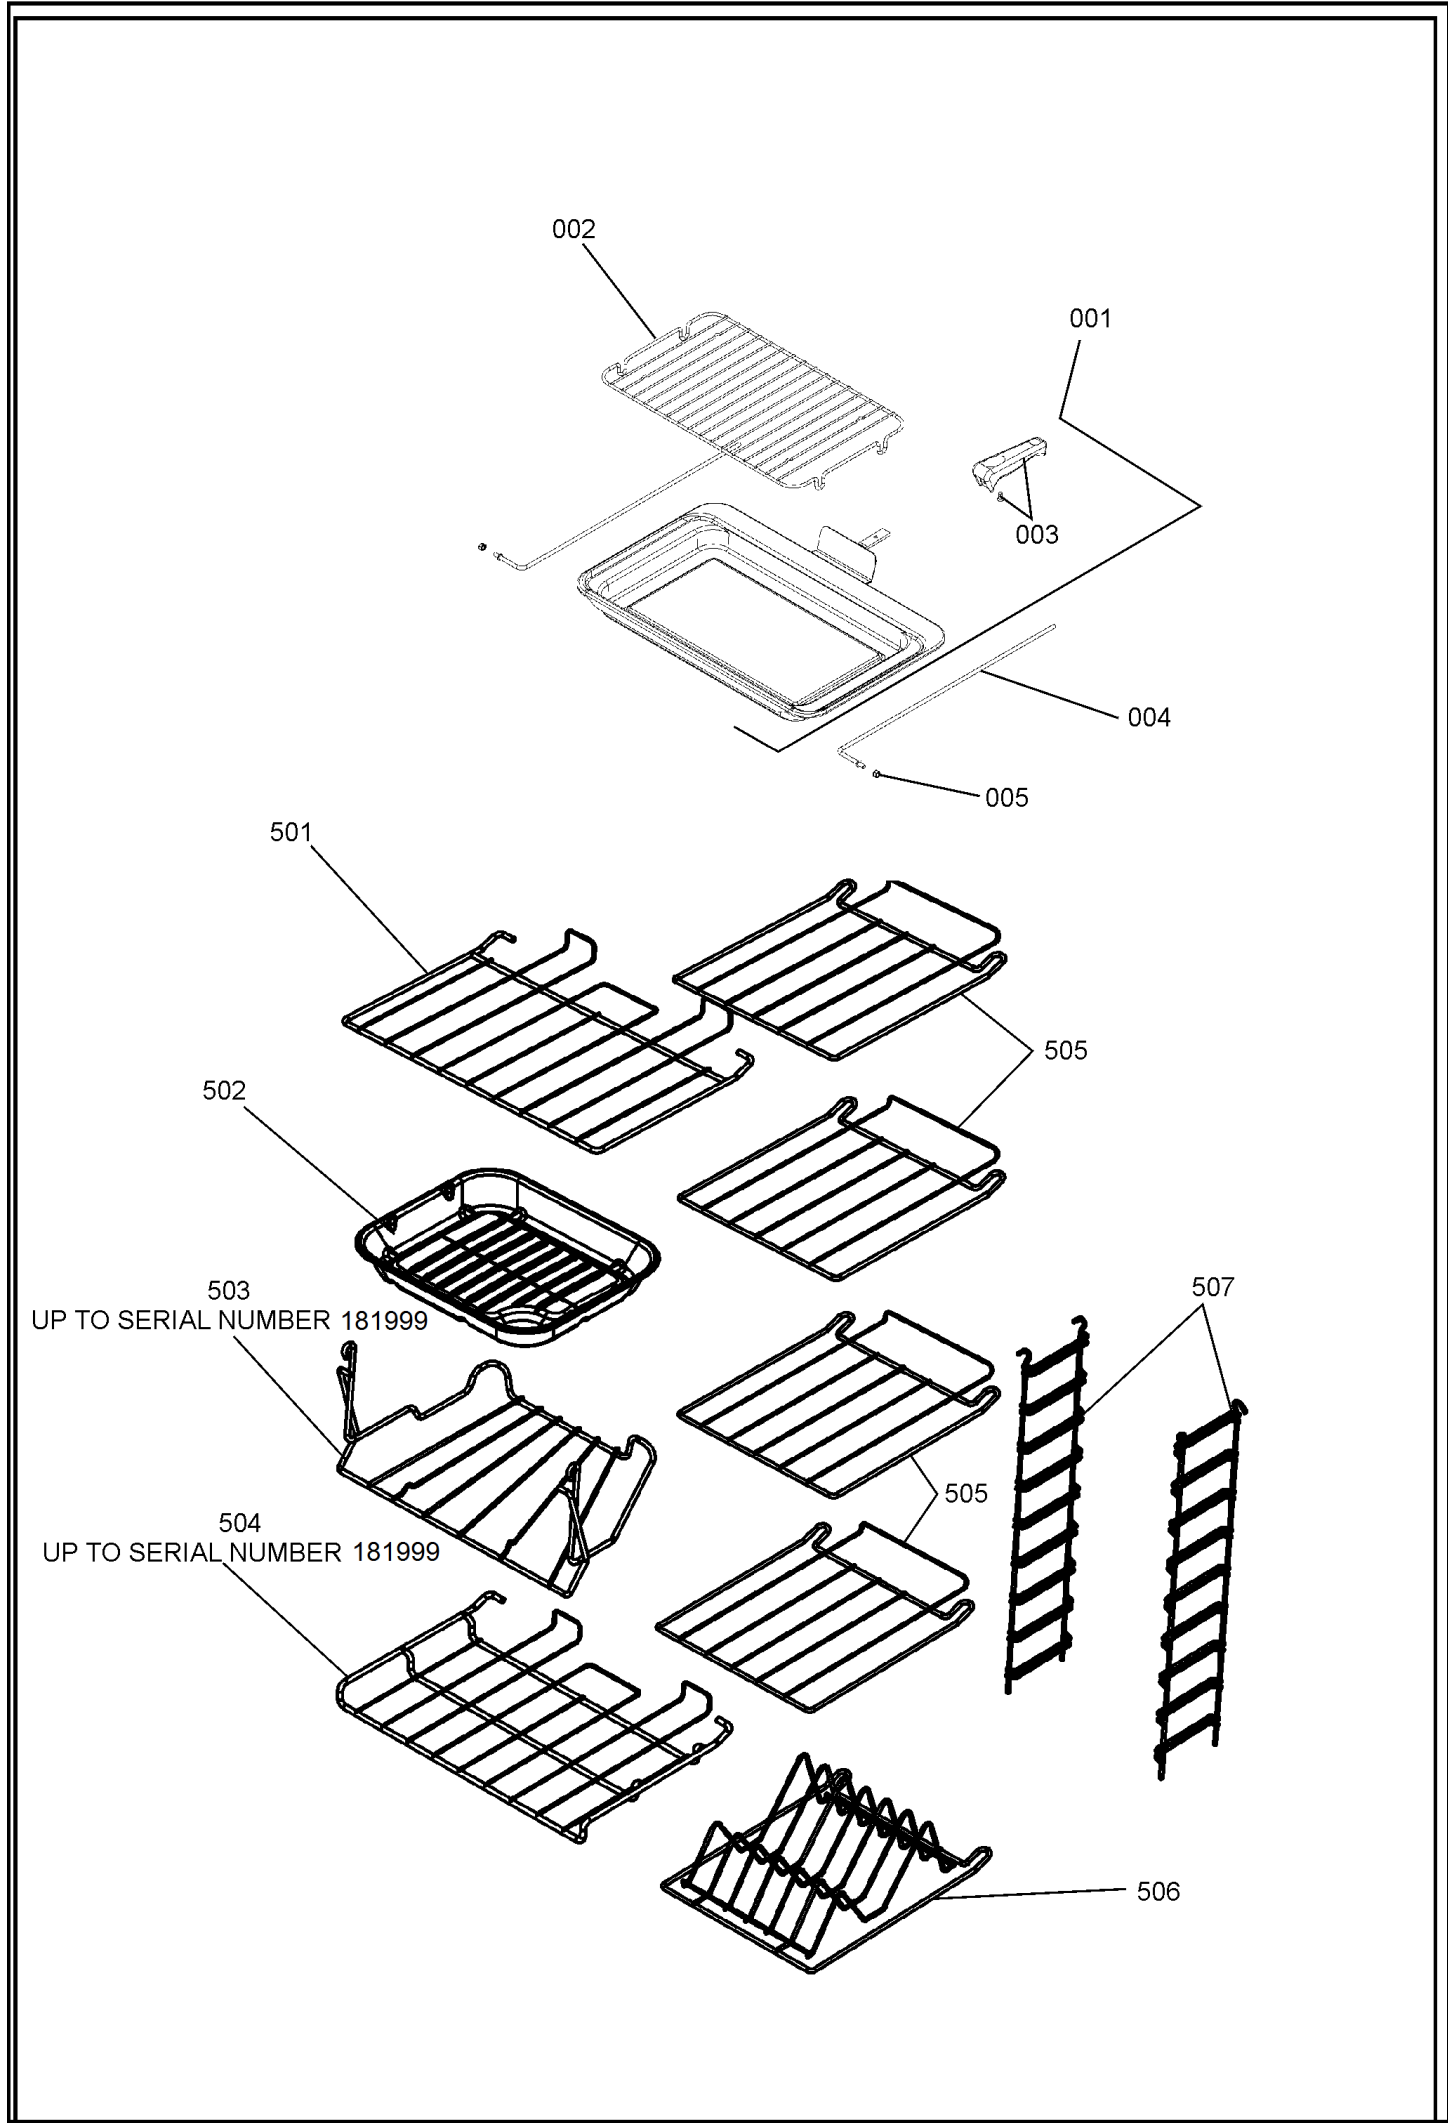


504
FROM SERIAL NUMBER 182000

501
FROM SERIAL NUMBER 182000

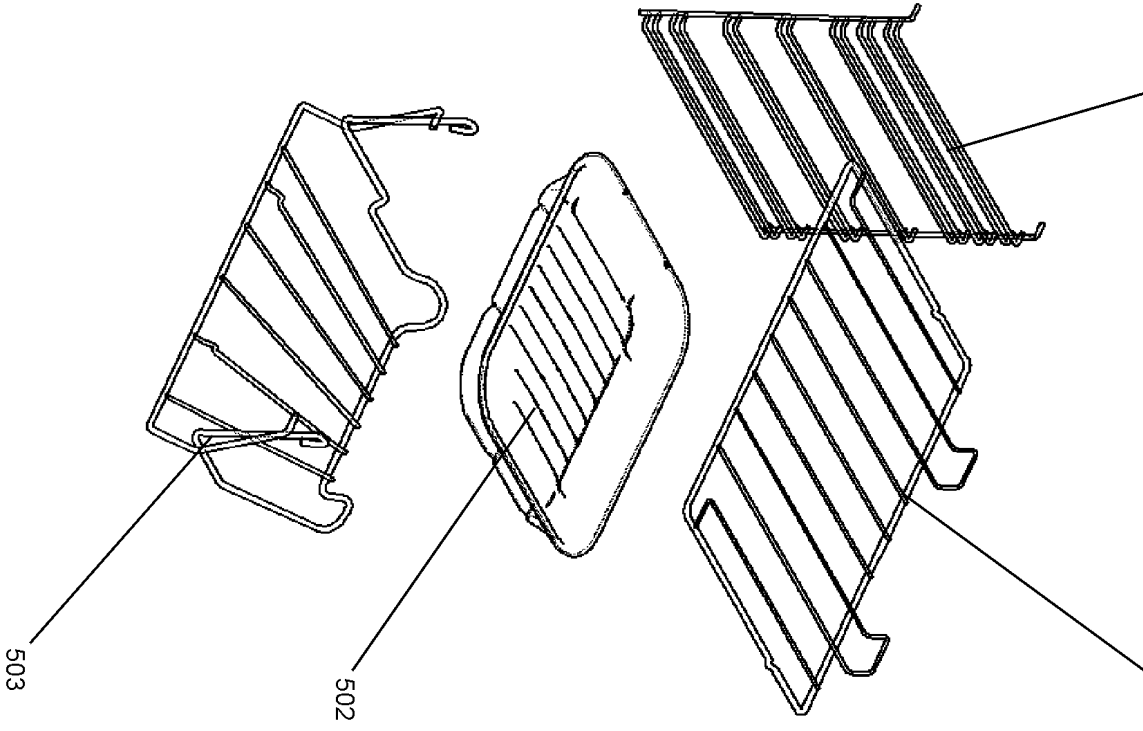


507

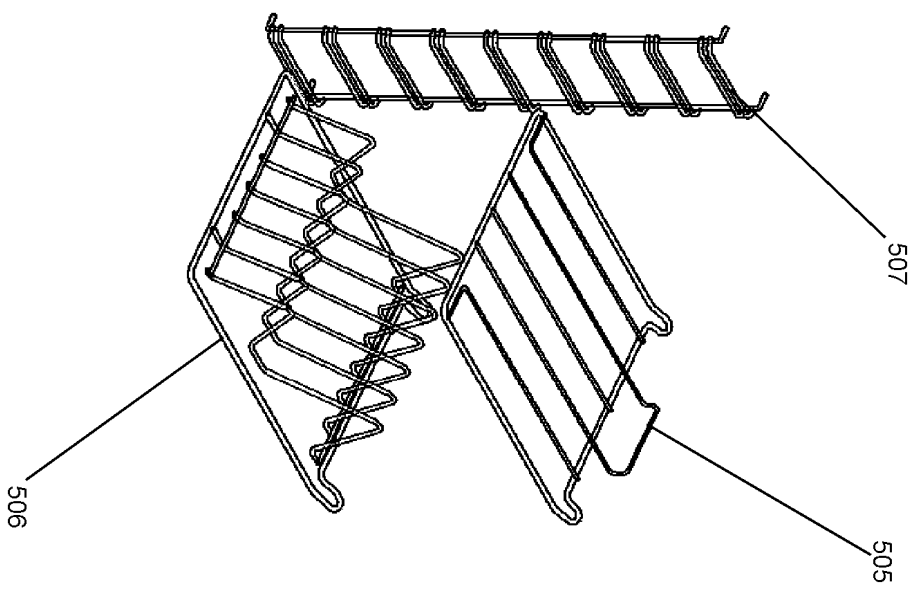

002

001

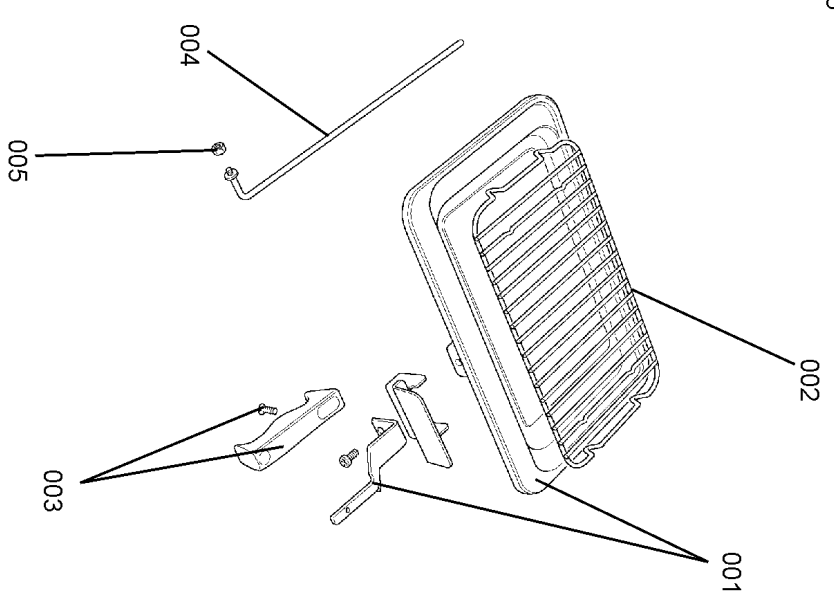

503


502


506


004


005


003

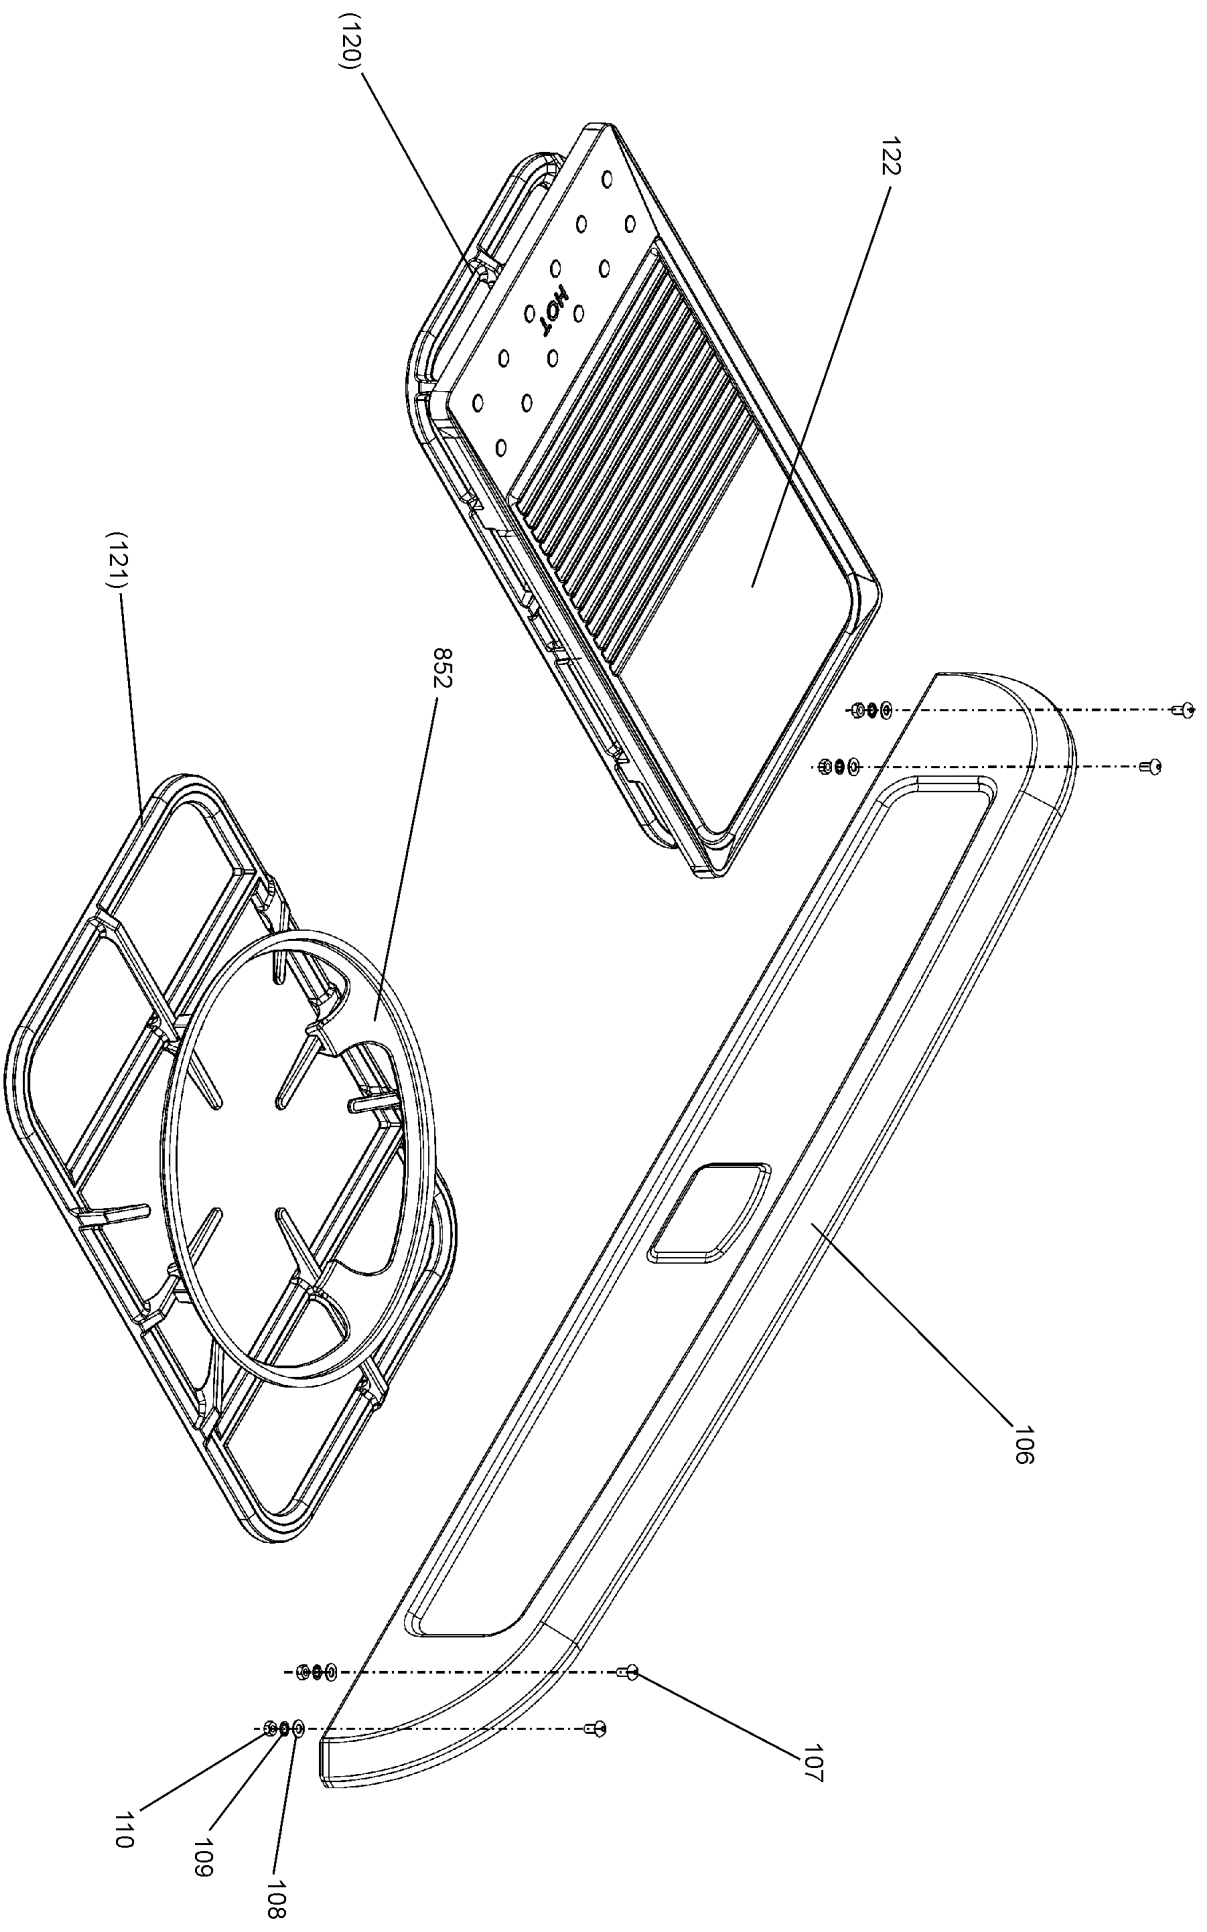

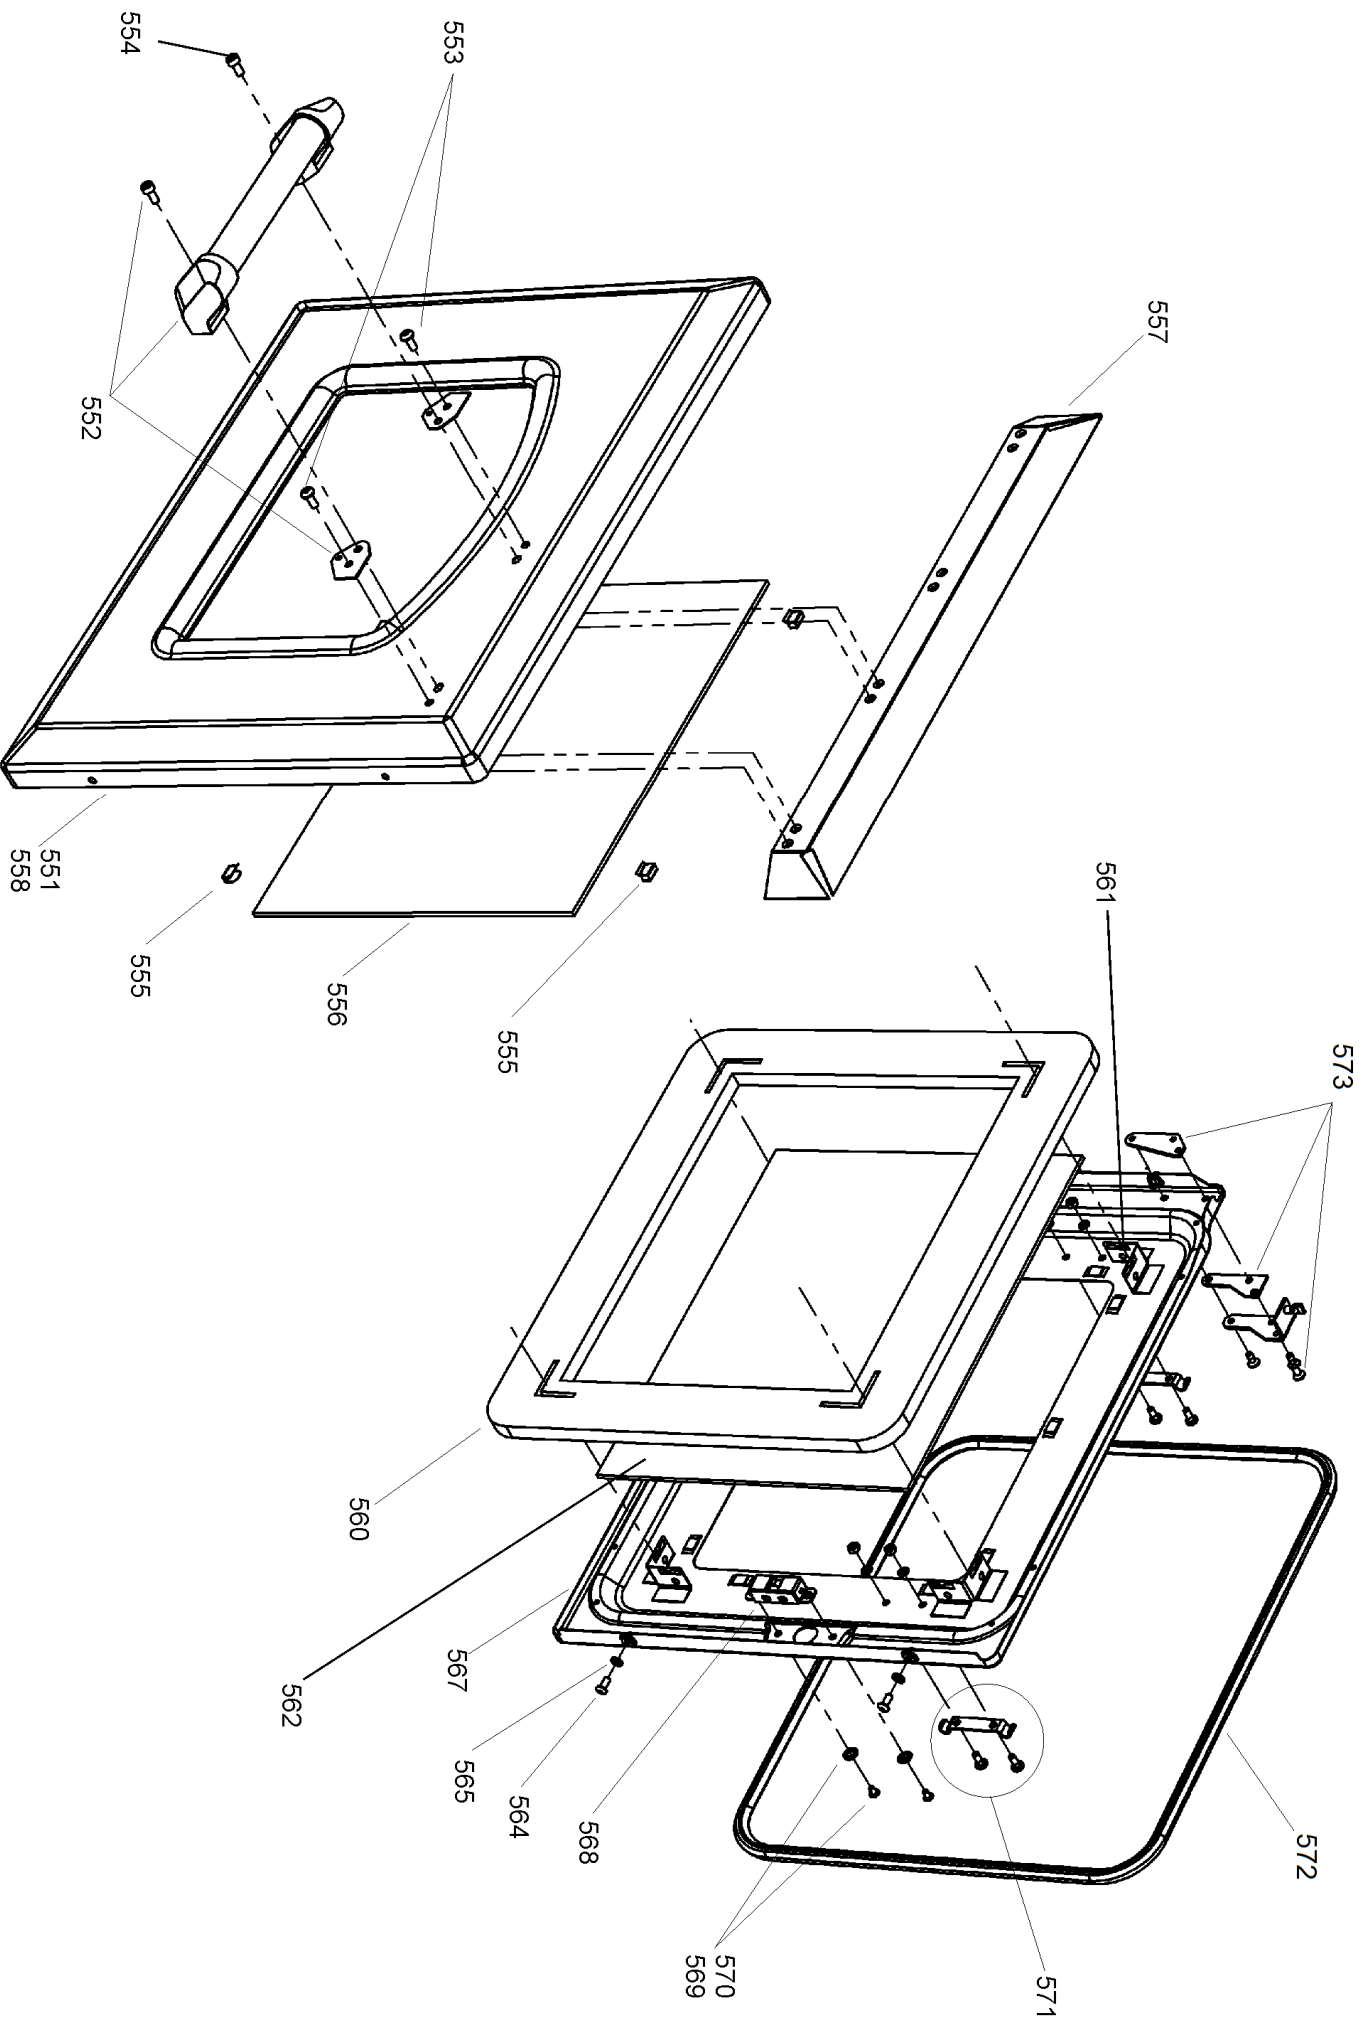

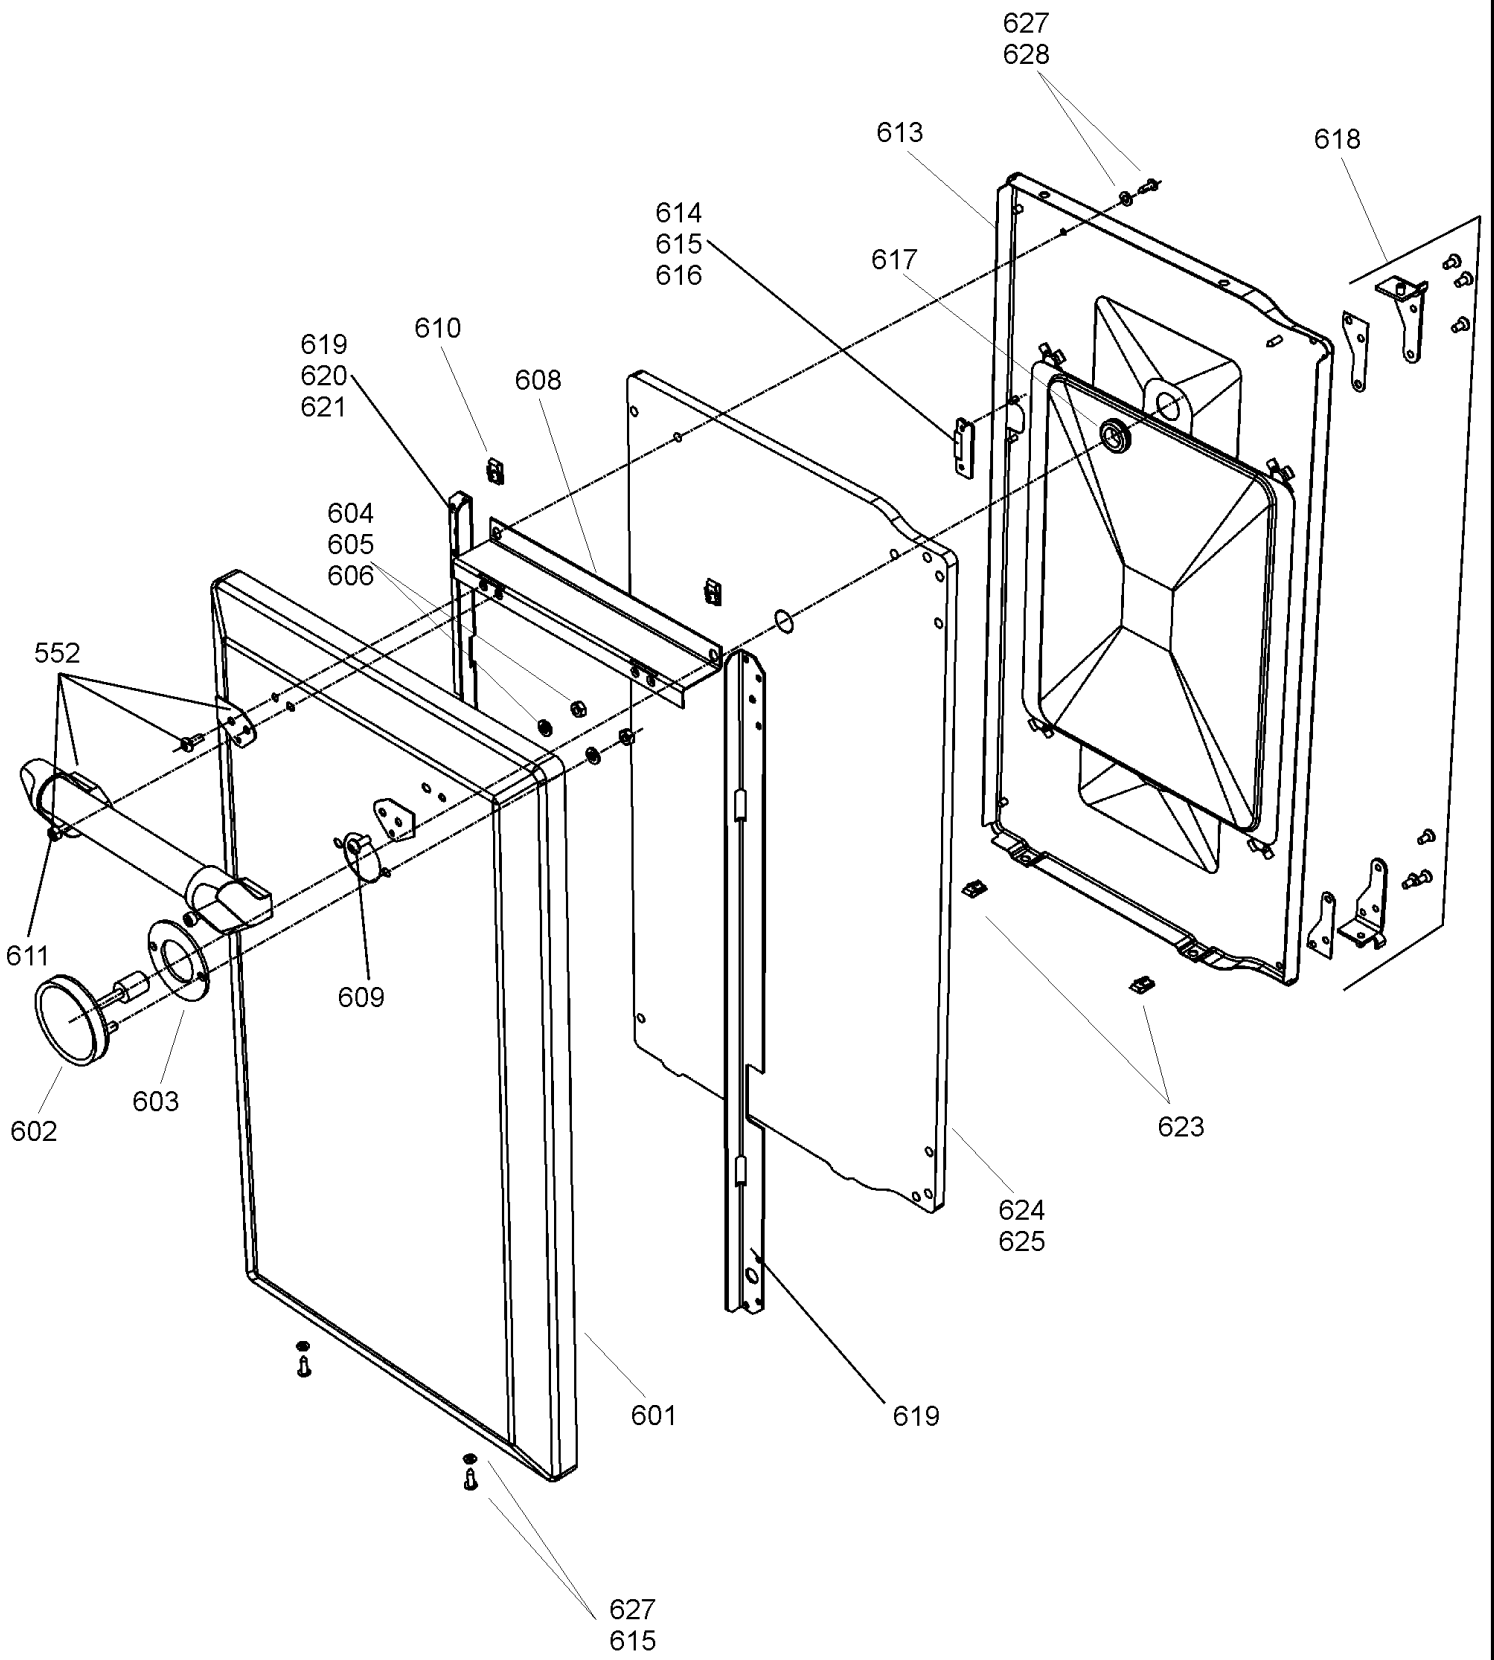

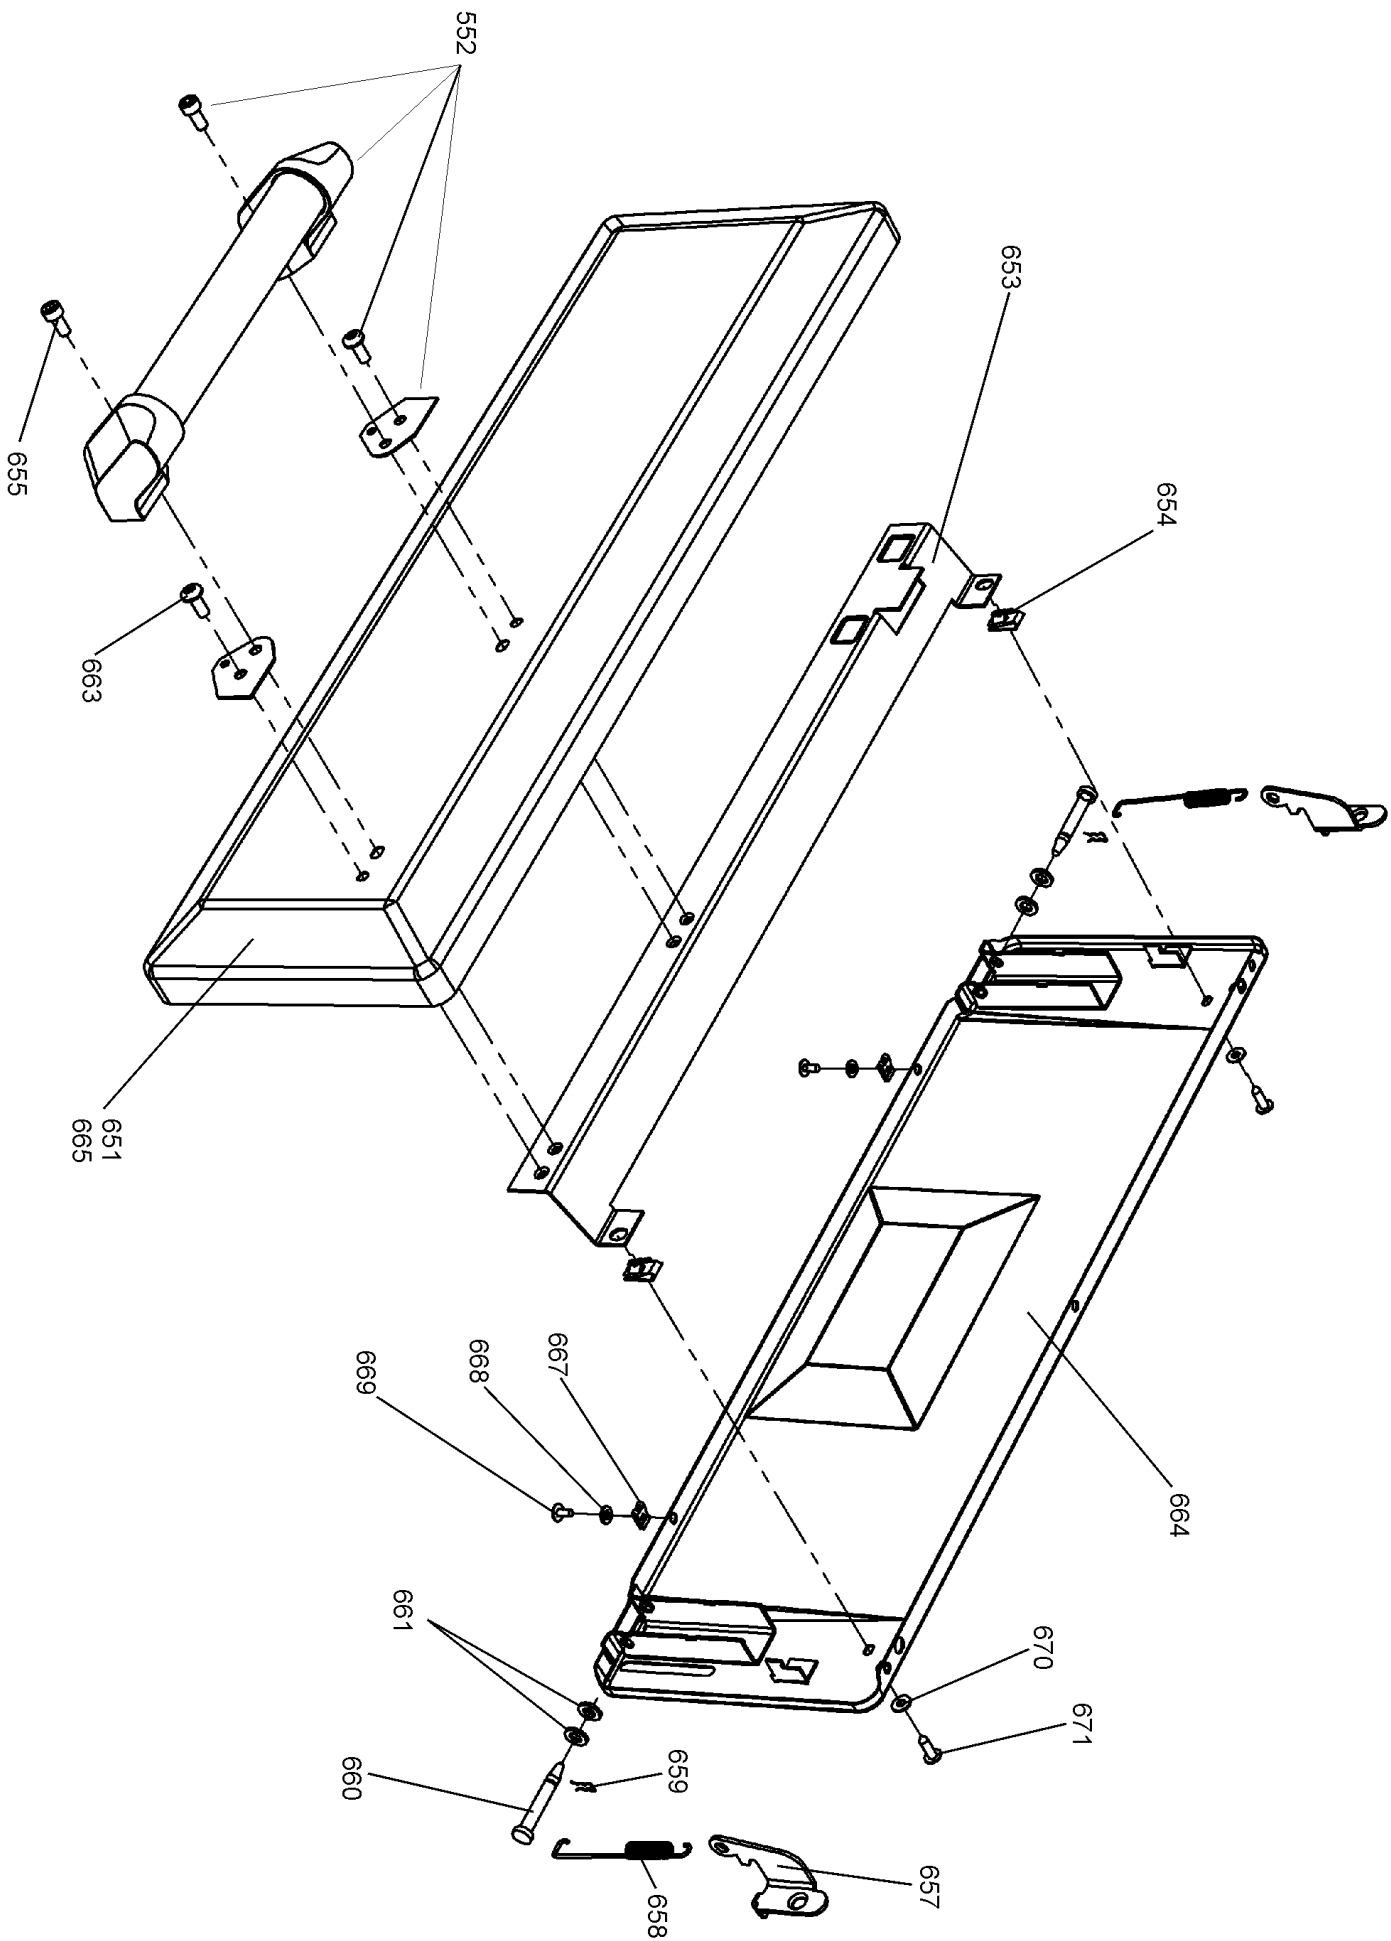

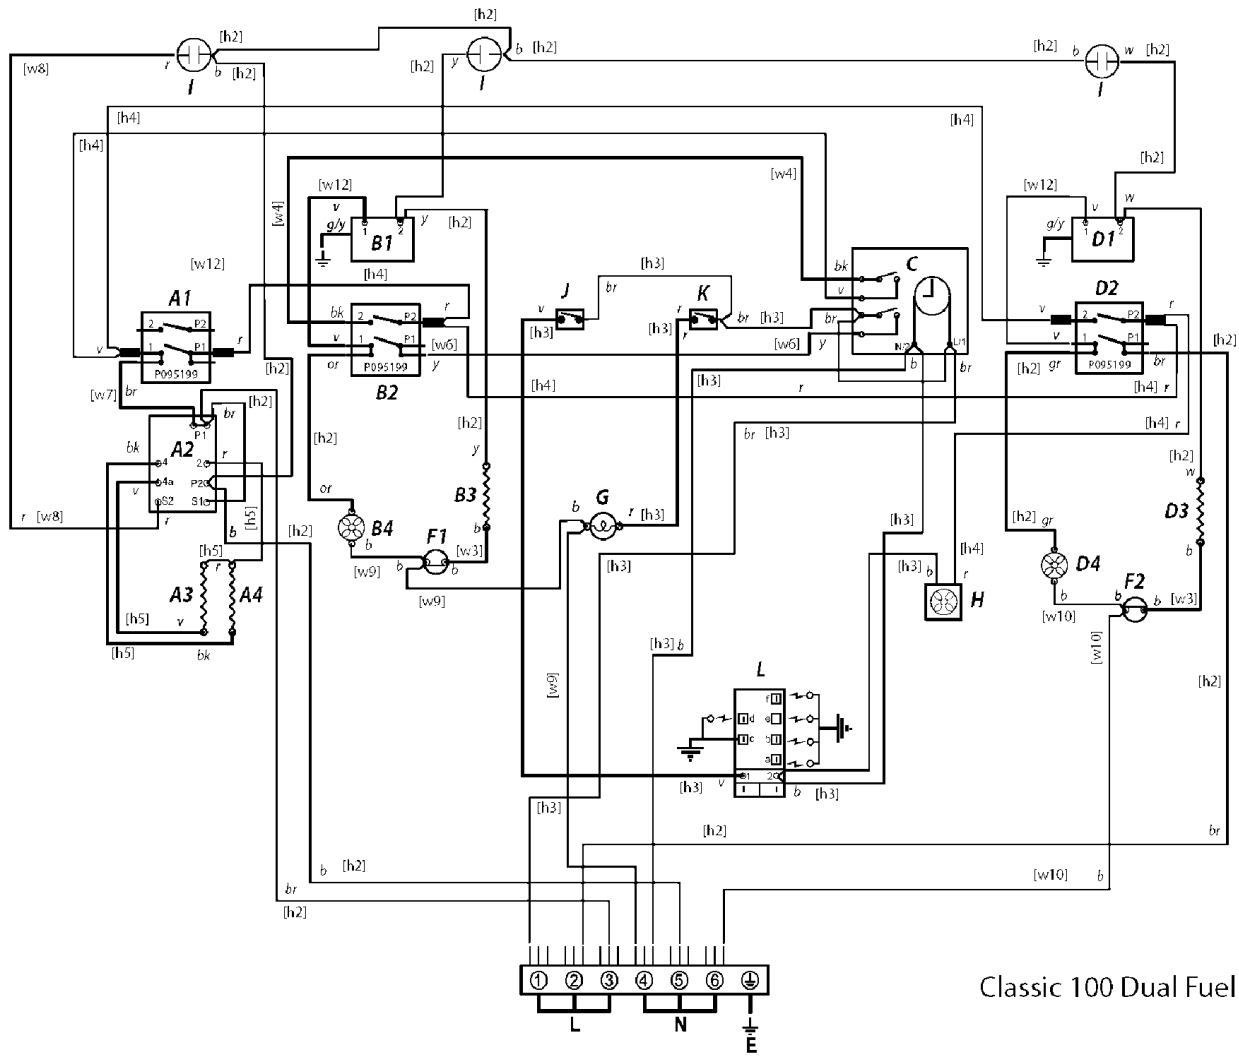

Classic 100 Dual Fuel

Ref Number	Part Number	Colour	Qty	Remarks
w1	P055374	g/y	2	Wire- (NI) GrillElement Earth to Cooker Back
h1	P049242	Clear	1	Harness - (NI) Spark Generator to Bruner Heads
w2	P049241	g/y	1	Wire- (NI) Spark Generator to Cooker Frame
w3	P040066	b	2	Wire - Oven Element CutOuts Neutral Link
w4	P049233	bk	1	Wire - Clock to LH Oven Switch - Cooling Fan Control
w5	P094943	g/y	1	Wire - Earth Links - Thermostats - Hotplate
w6	P062809	y	1	Wire - Clock to LH Oven Switch - Oven Control
w7	P055344	br	1	Wire - Energy Reg to Front Switch
h2	P062707	br/b/bk/w/or/y	1	Harness - LH and RH Ovens
h3	P062712	br/b/v/r/	1	Harness - Timer/Oven Light/ Spark Gen / Cooling Fan / Gas Ignition
h4	P061628	r/v	1	Harness - Cooling Fan Front Switch Links
w8	P094951	r	1	Wire - Energy Regulator to Neon
w9	P043963	b	1	Wire - Neutral Link LH Oven
w10	P036011	b	1	Wire - Neutral Link RH Oven
w11	P045284	g/y	1	Wire- (NI) Earth Link LH Oven
h5	P033958	bk/r/v	1	Harness - Grill
w12	P033086	v	2	Wire - RH and LH Oven Switch to Thermostat Link

Code	Description
A1	Grill Front Switch
A2	Grill Energy Regulator
A3	Grill Elements -LH
A4	Grill Elements - RH
B1	Left-Hand Oven Thermostat
B2	Left Hand Oven Front Switch
B3	Left Hand Oven Fan Element
B4	Left Hand Oven Fan
C	Clock / Timer

Code	Description
D1	Right - Hand Oven Thermostat
D2	Right - Hand Oven Front Switch
D3	Right- Hand Oven Element
D4	Right - Hand Oven Fan
F1	Left - Hand Oven Thermal Preset
F2	Right - Hand Oven Thermal Preset
G	Left Hand Oven Light
H	Cooling Fan
I	Indicator Neon
J	Ignition Switch
K	Oven Light Switch
L	Spark Generator

Code	Colour
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
g/y	Green/Yellow
gr	Grey