 



HOB ASSEMBLY

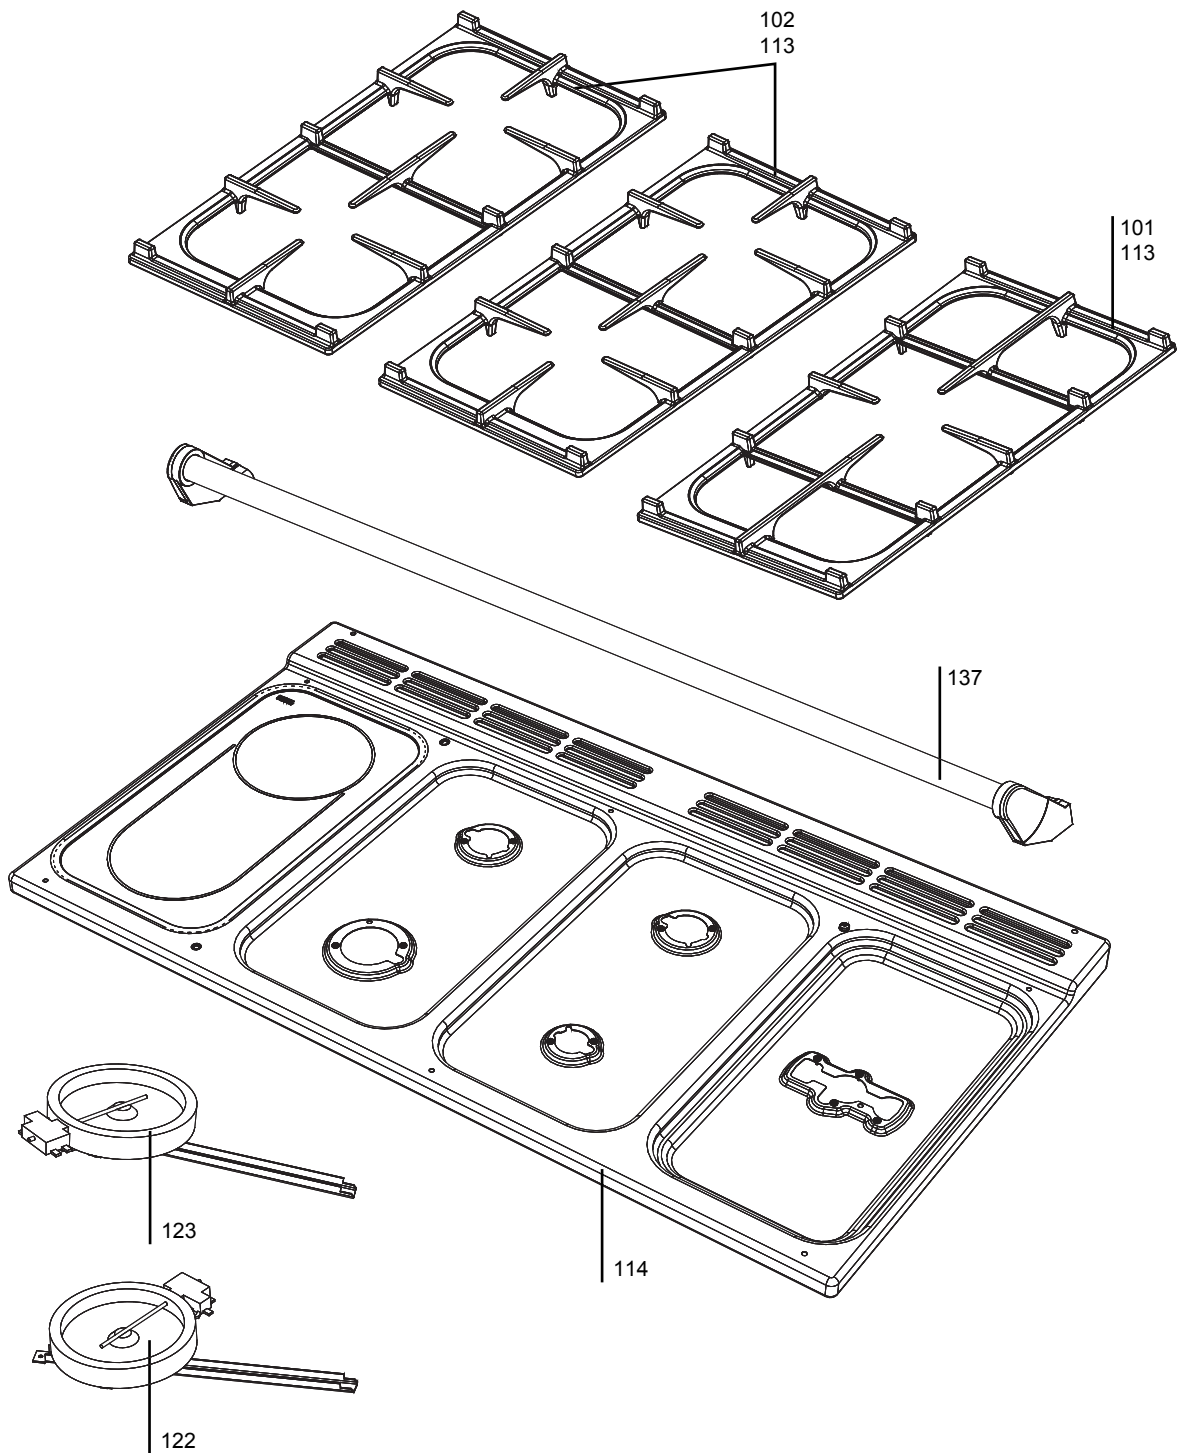








HOTPLATE ASSEMBLY


LECKFORD DELUXE 110 DUAL FUEL

 DSL0791 P02
DATE 05.03.2019 ISSUE STATUS 001

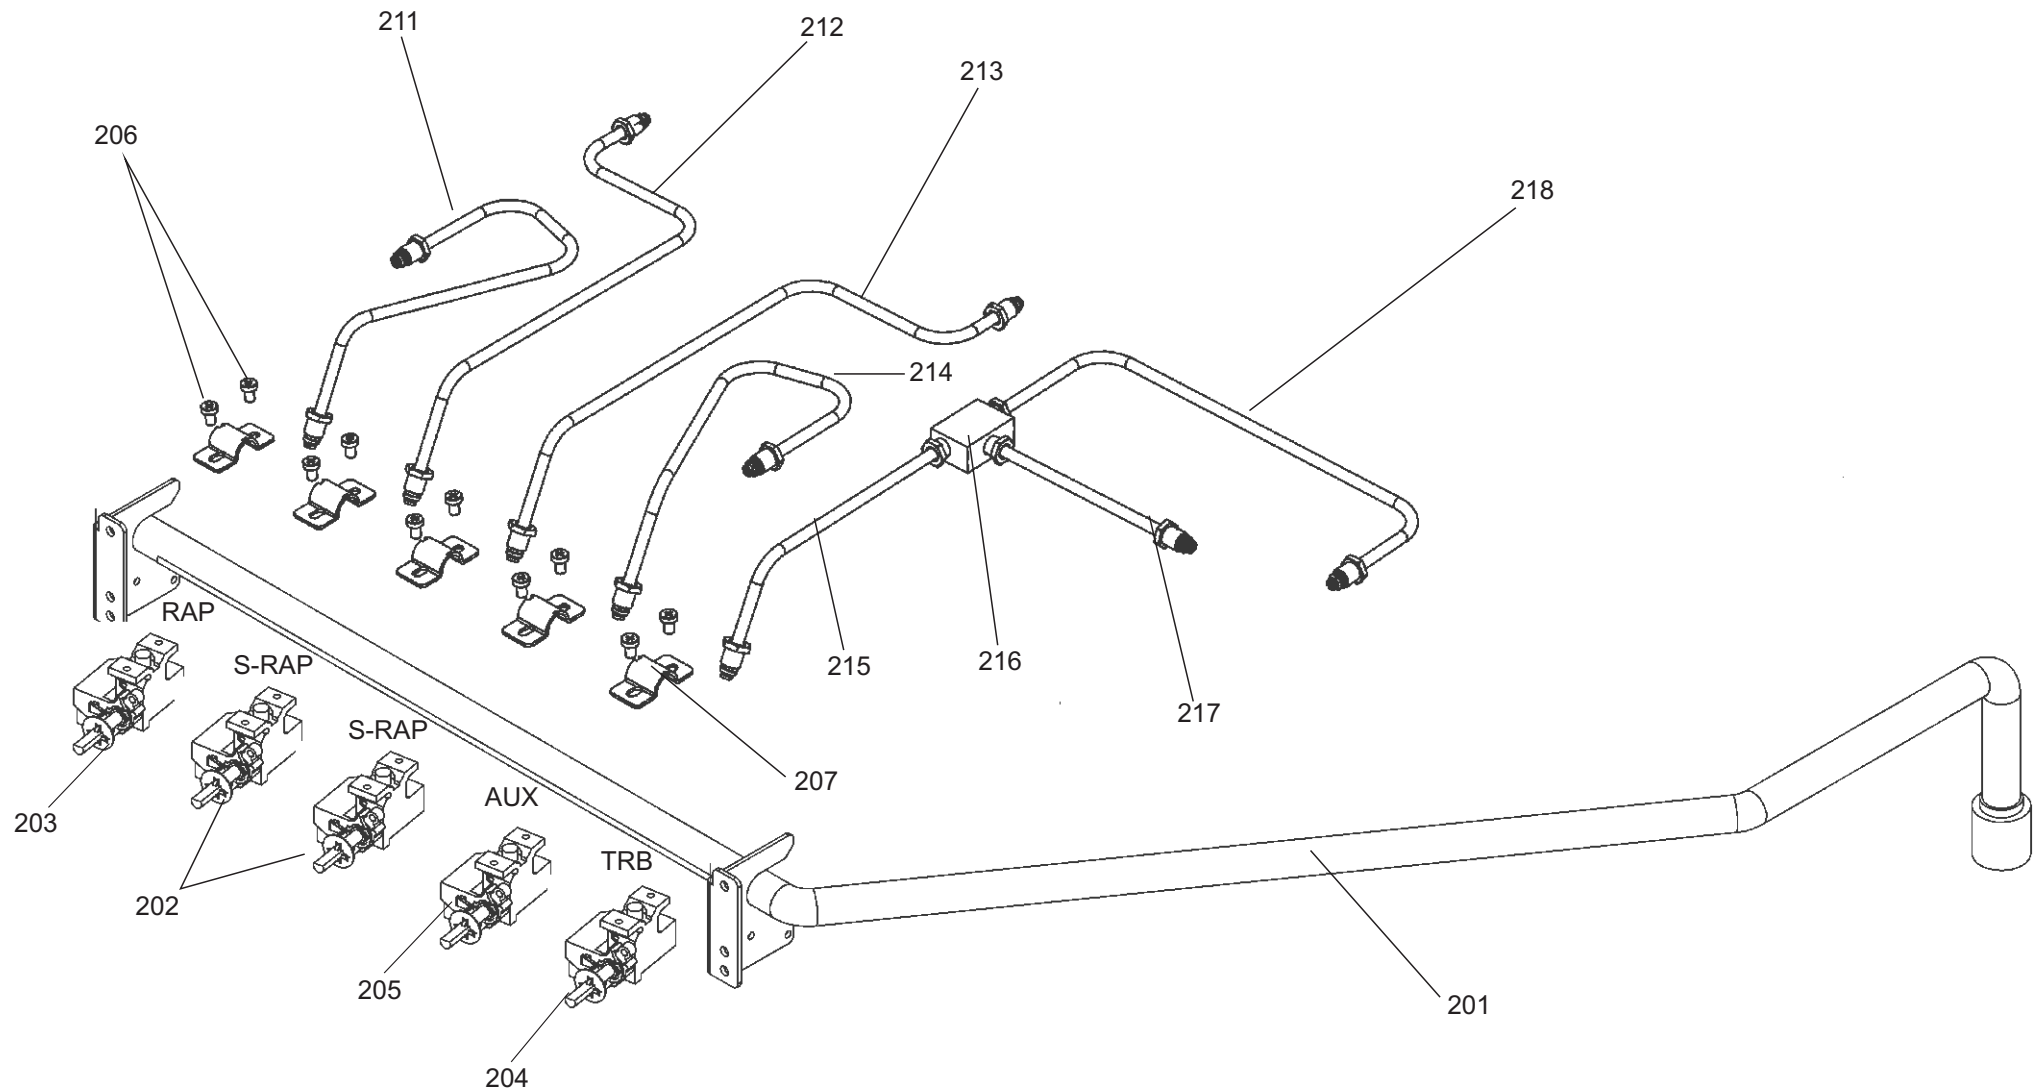


        GAS RAIL - BURNERS - INJECTORS AND PIPE ASSY

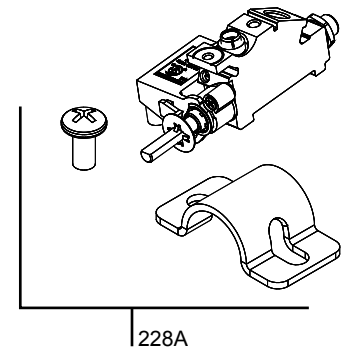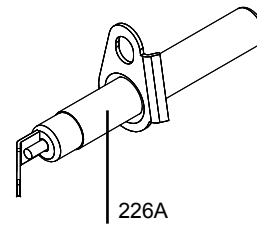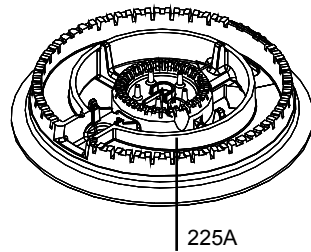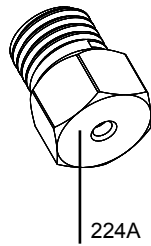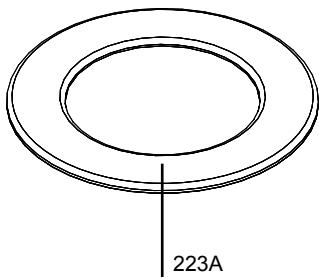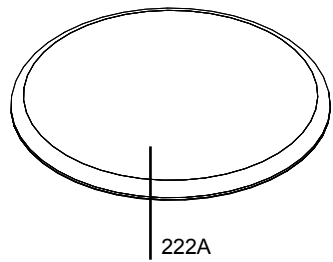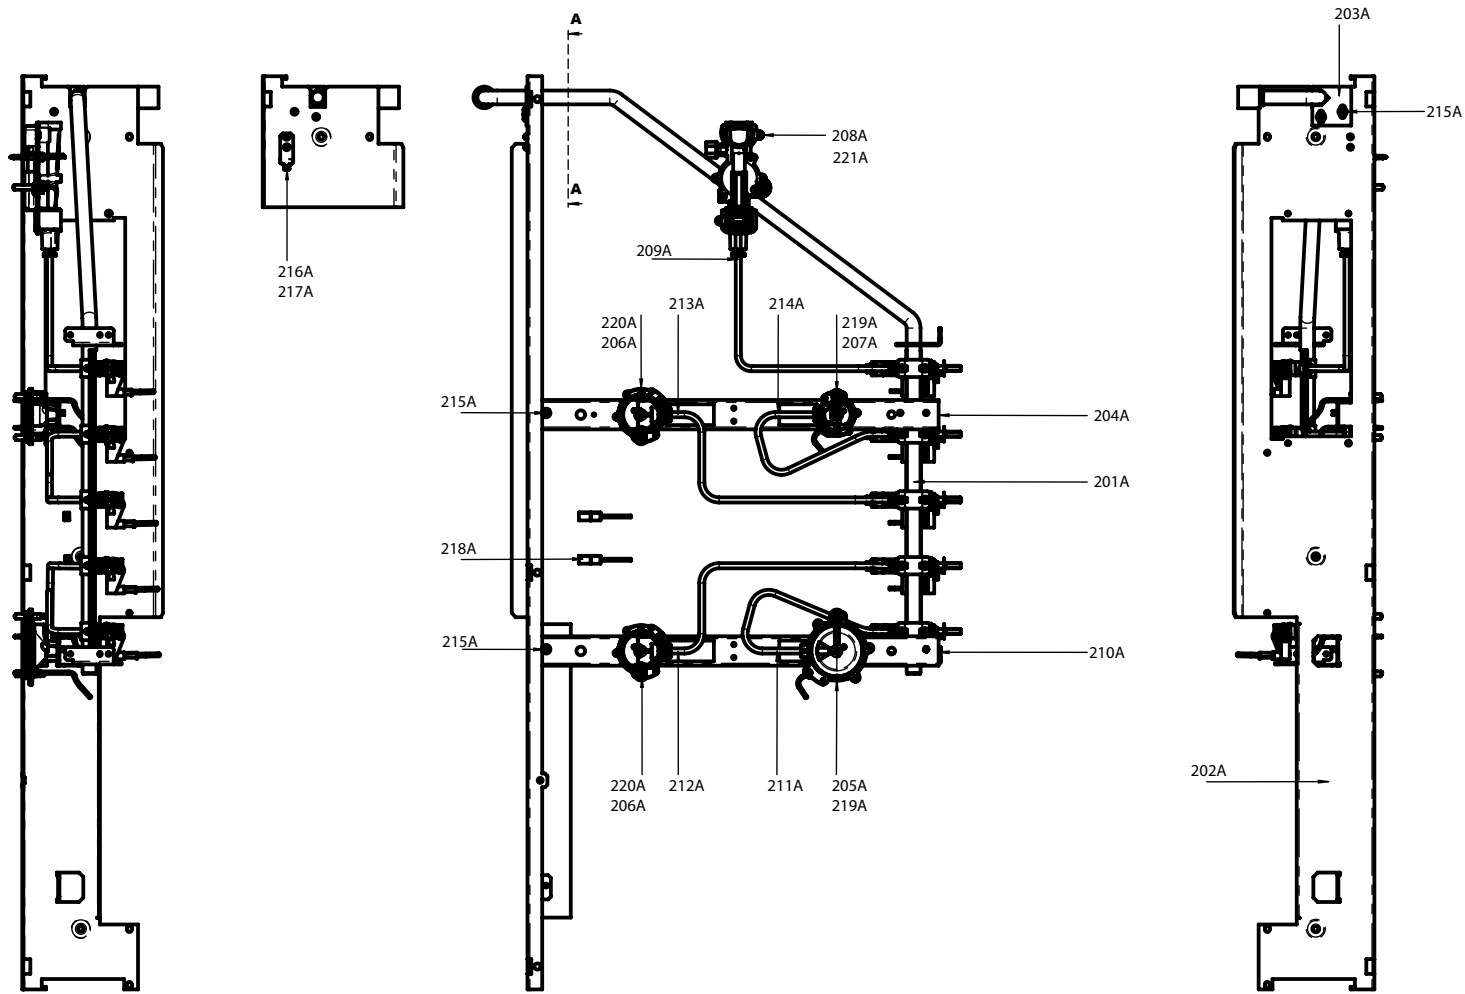


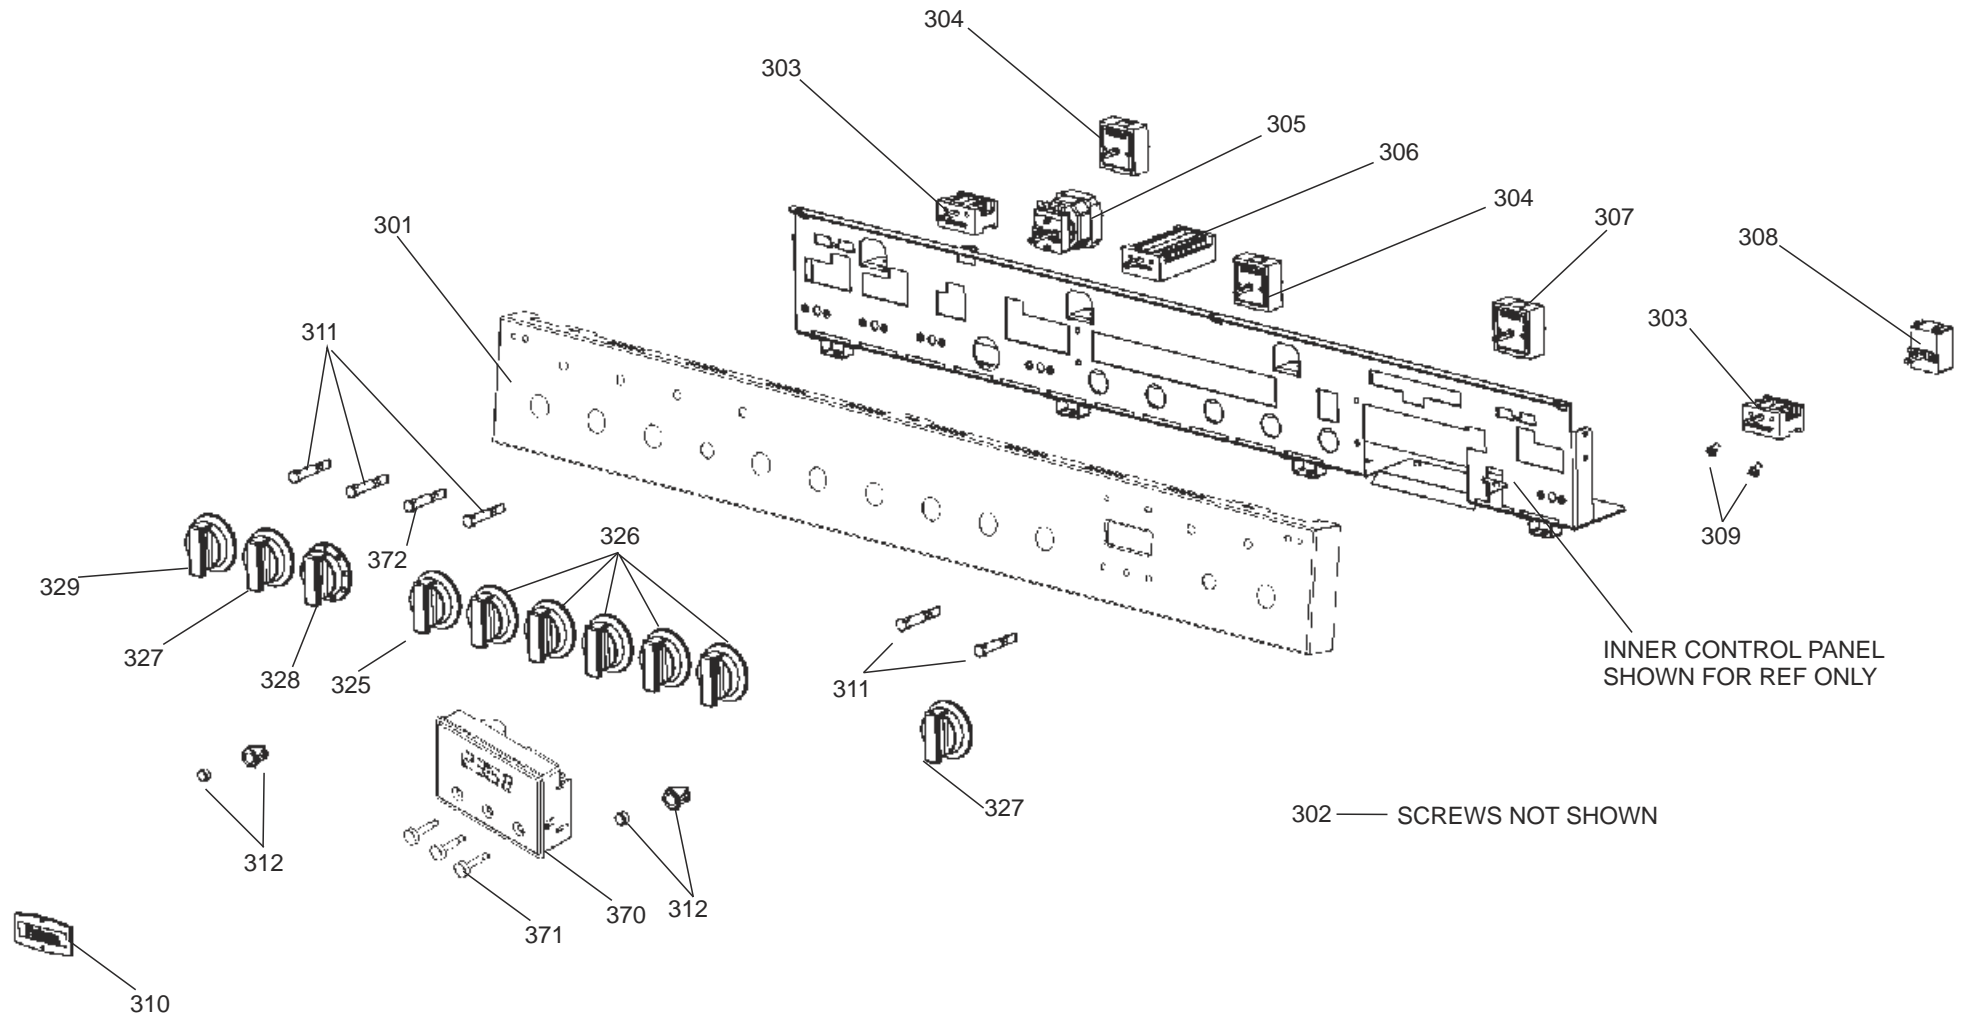

FACIA - CONTROL KNOBS AND PLINTH

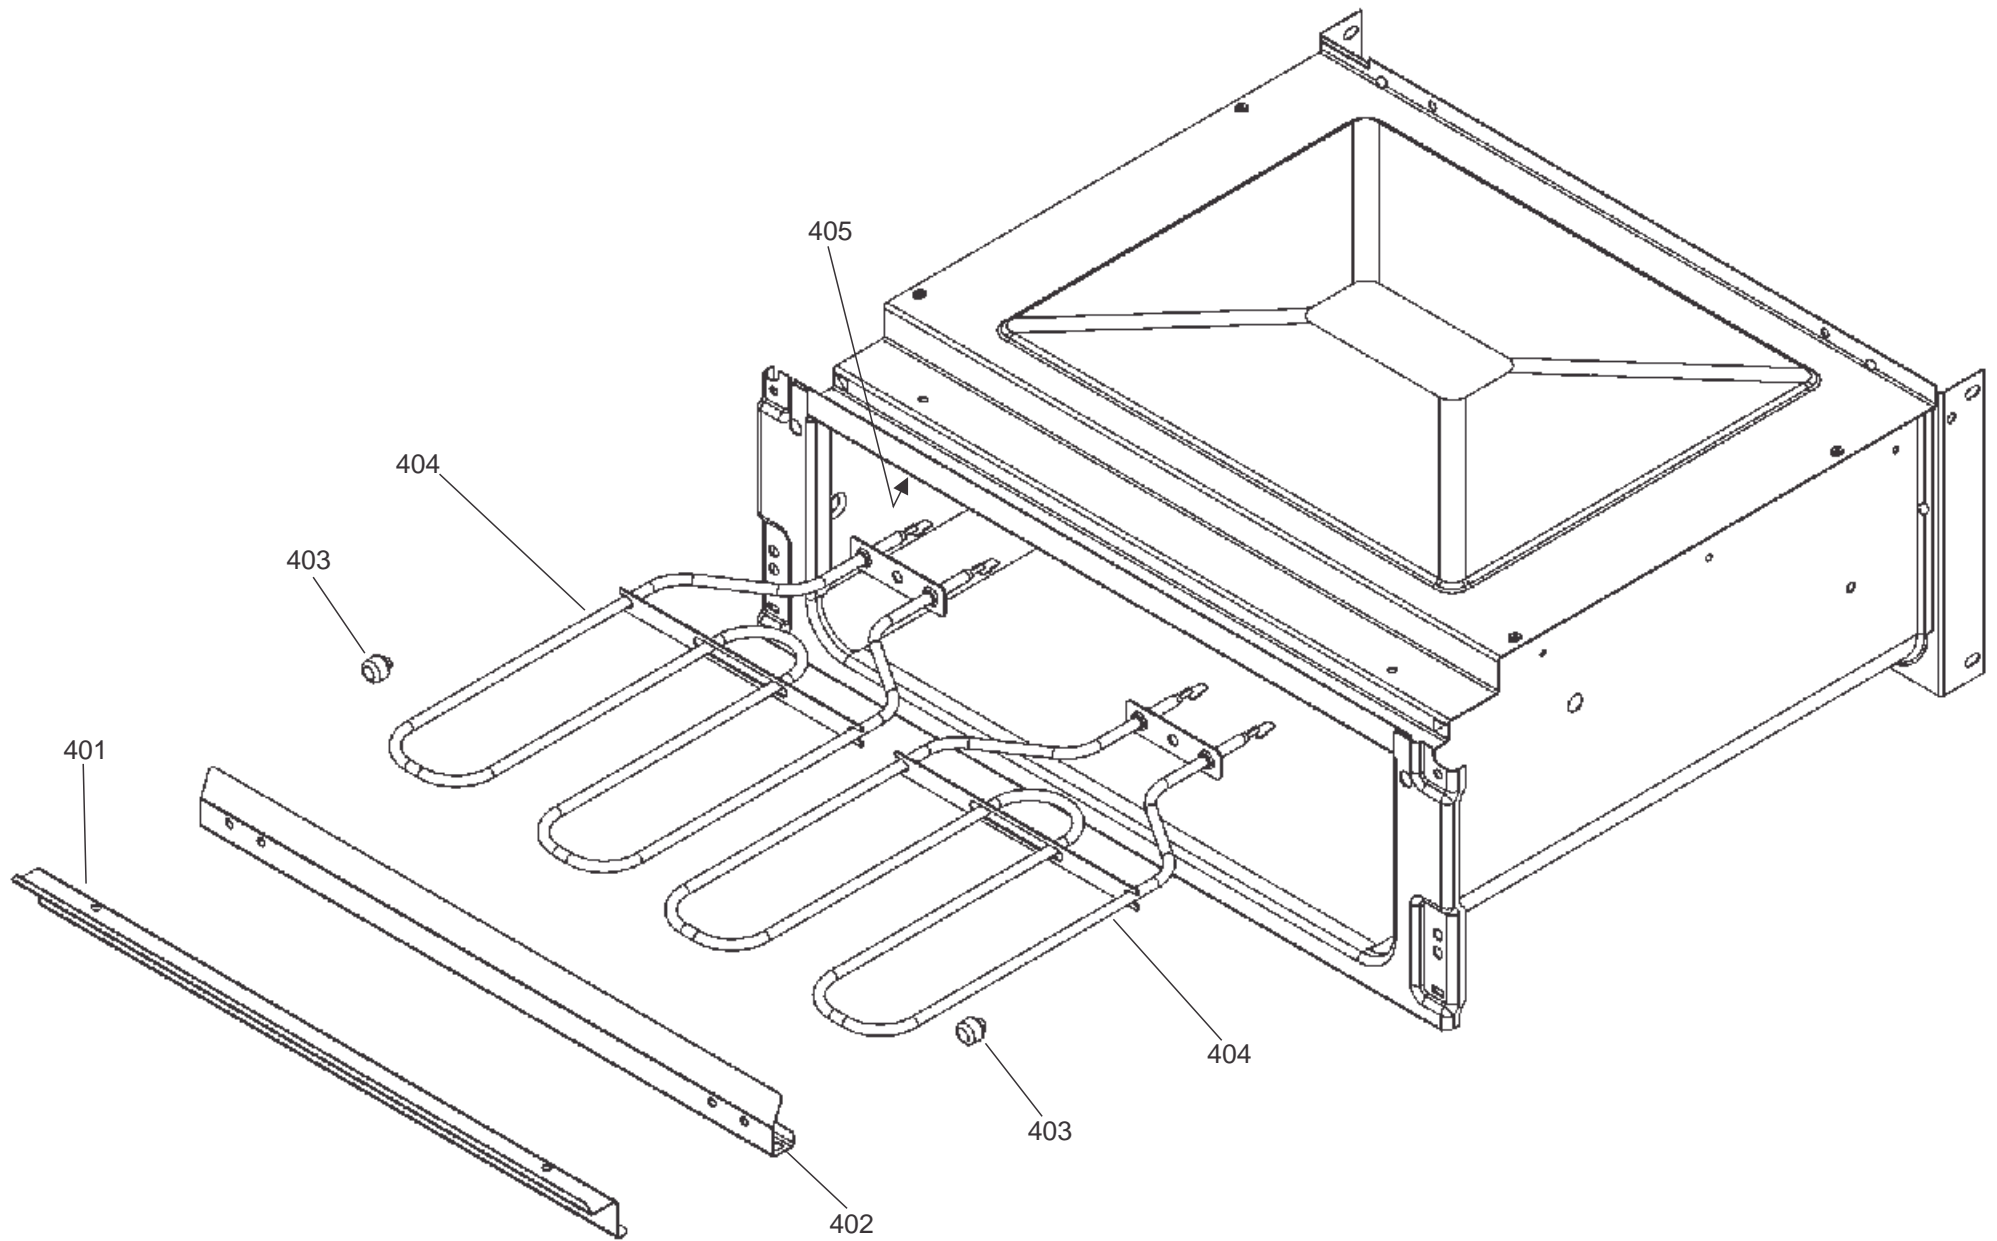 

GRILL CHAMBER

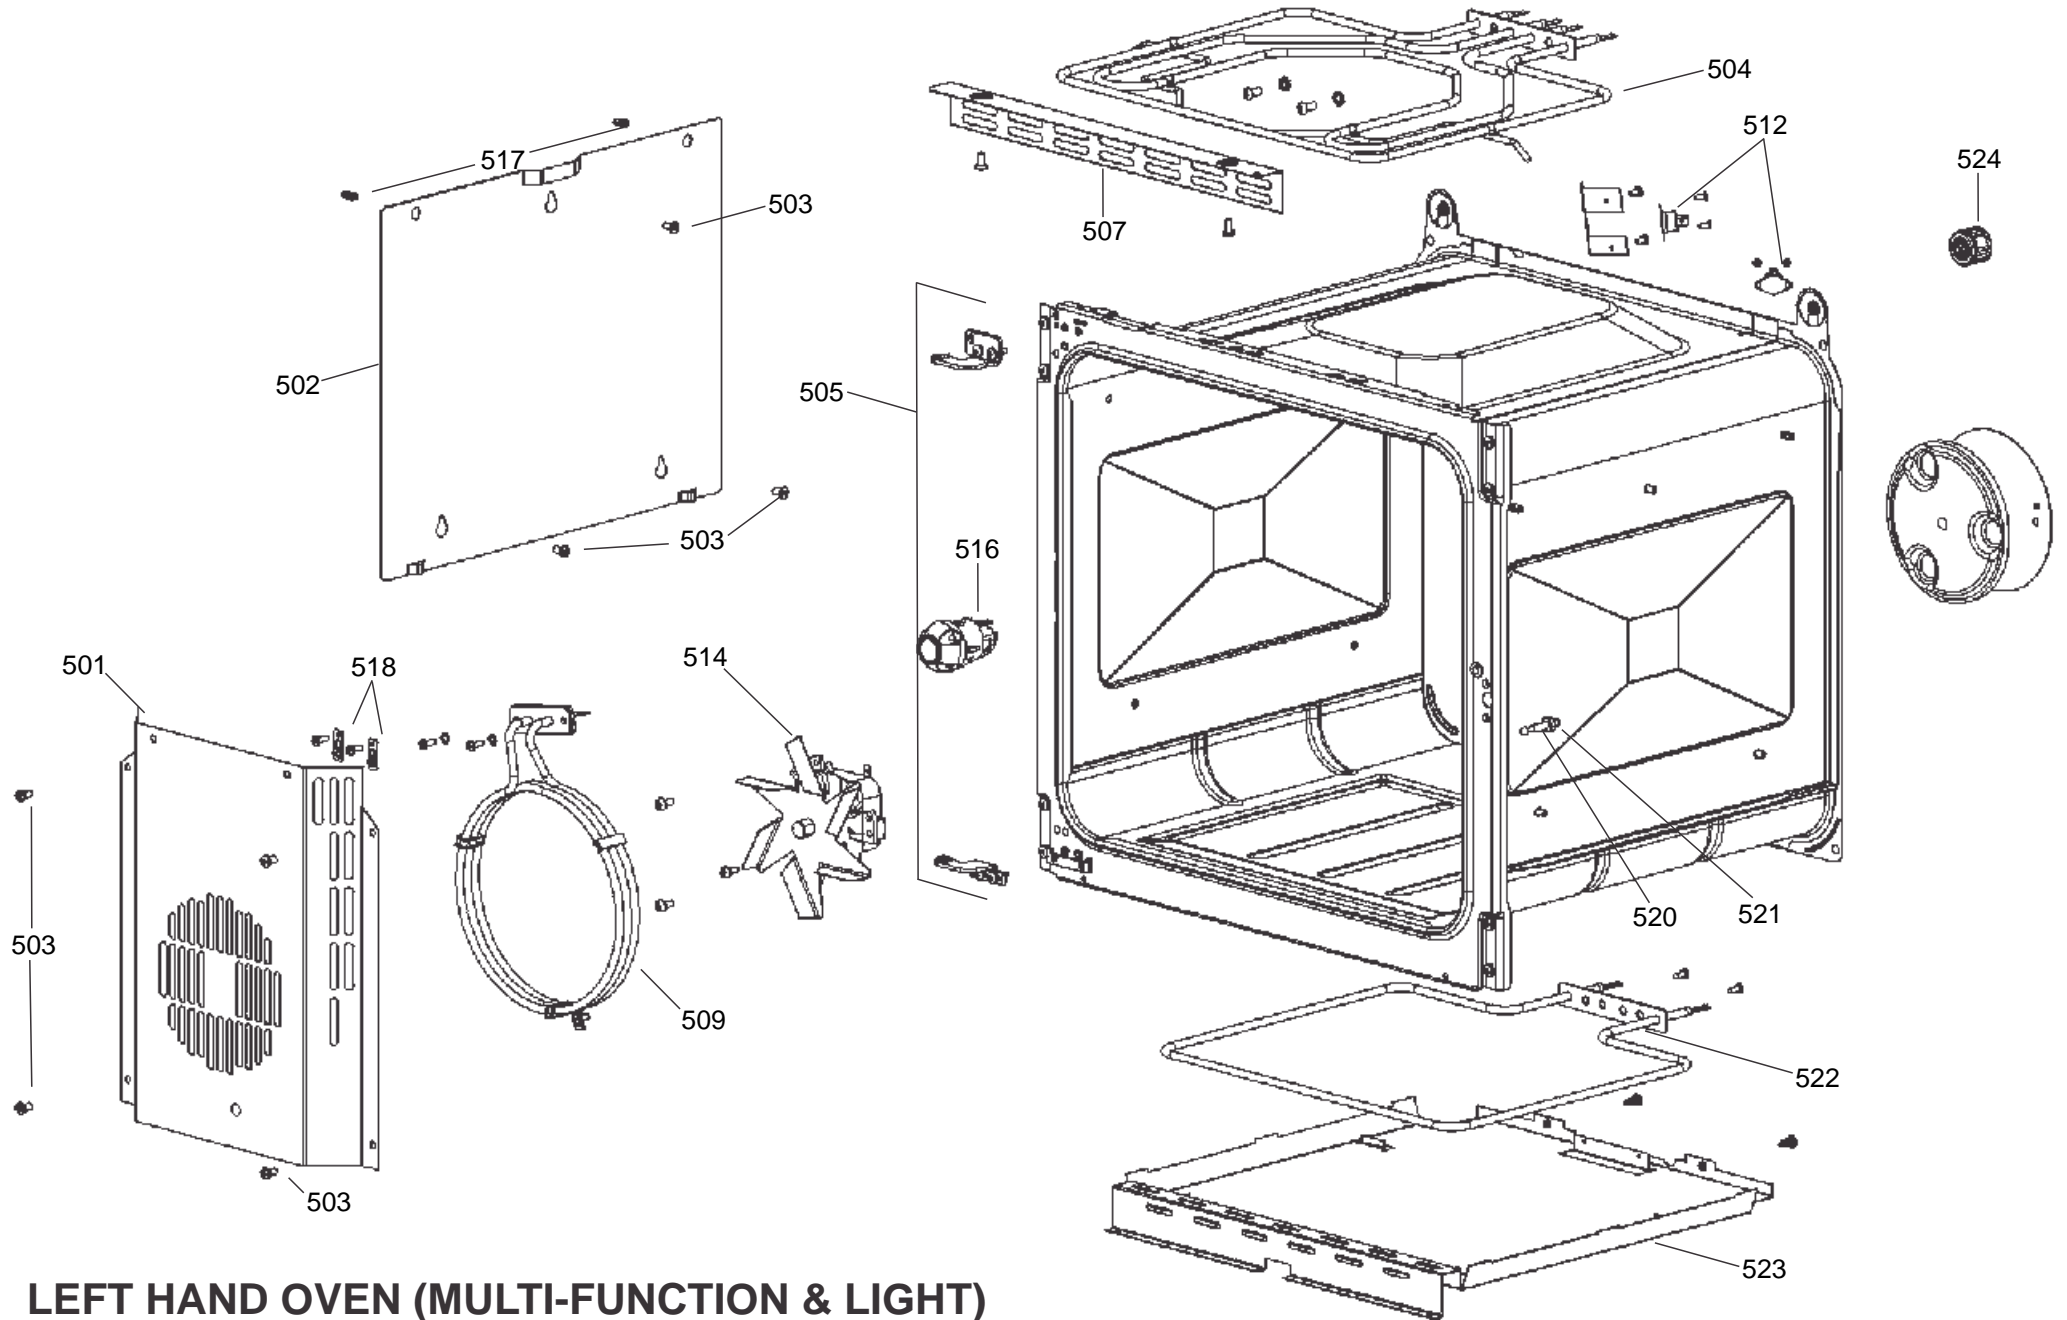 


LEFT HAND OVEN (MULTI-FUNCTION & LIGHT)


LECKFORD DELUXE 110 DUAL FUEL

DATE: 12.03.2019


DSL0791 P06

  ISSUE: 01










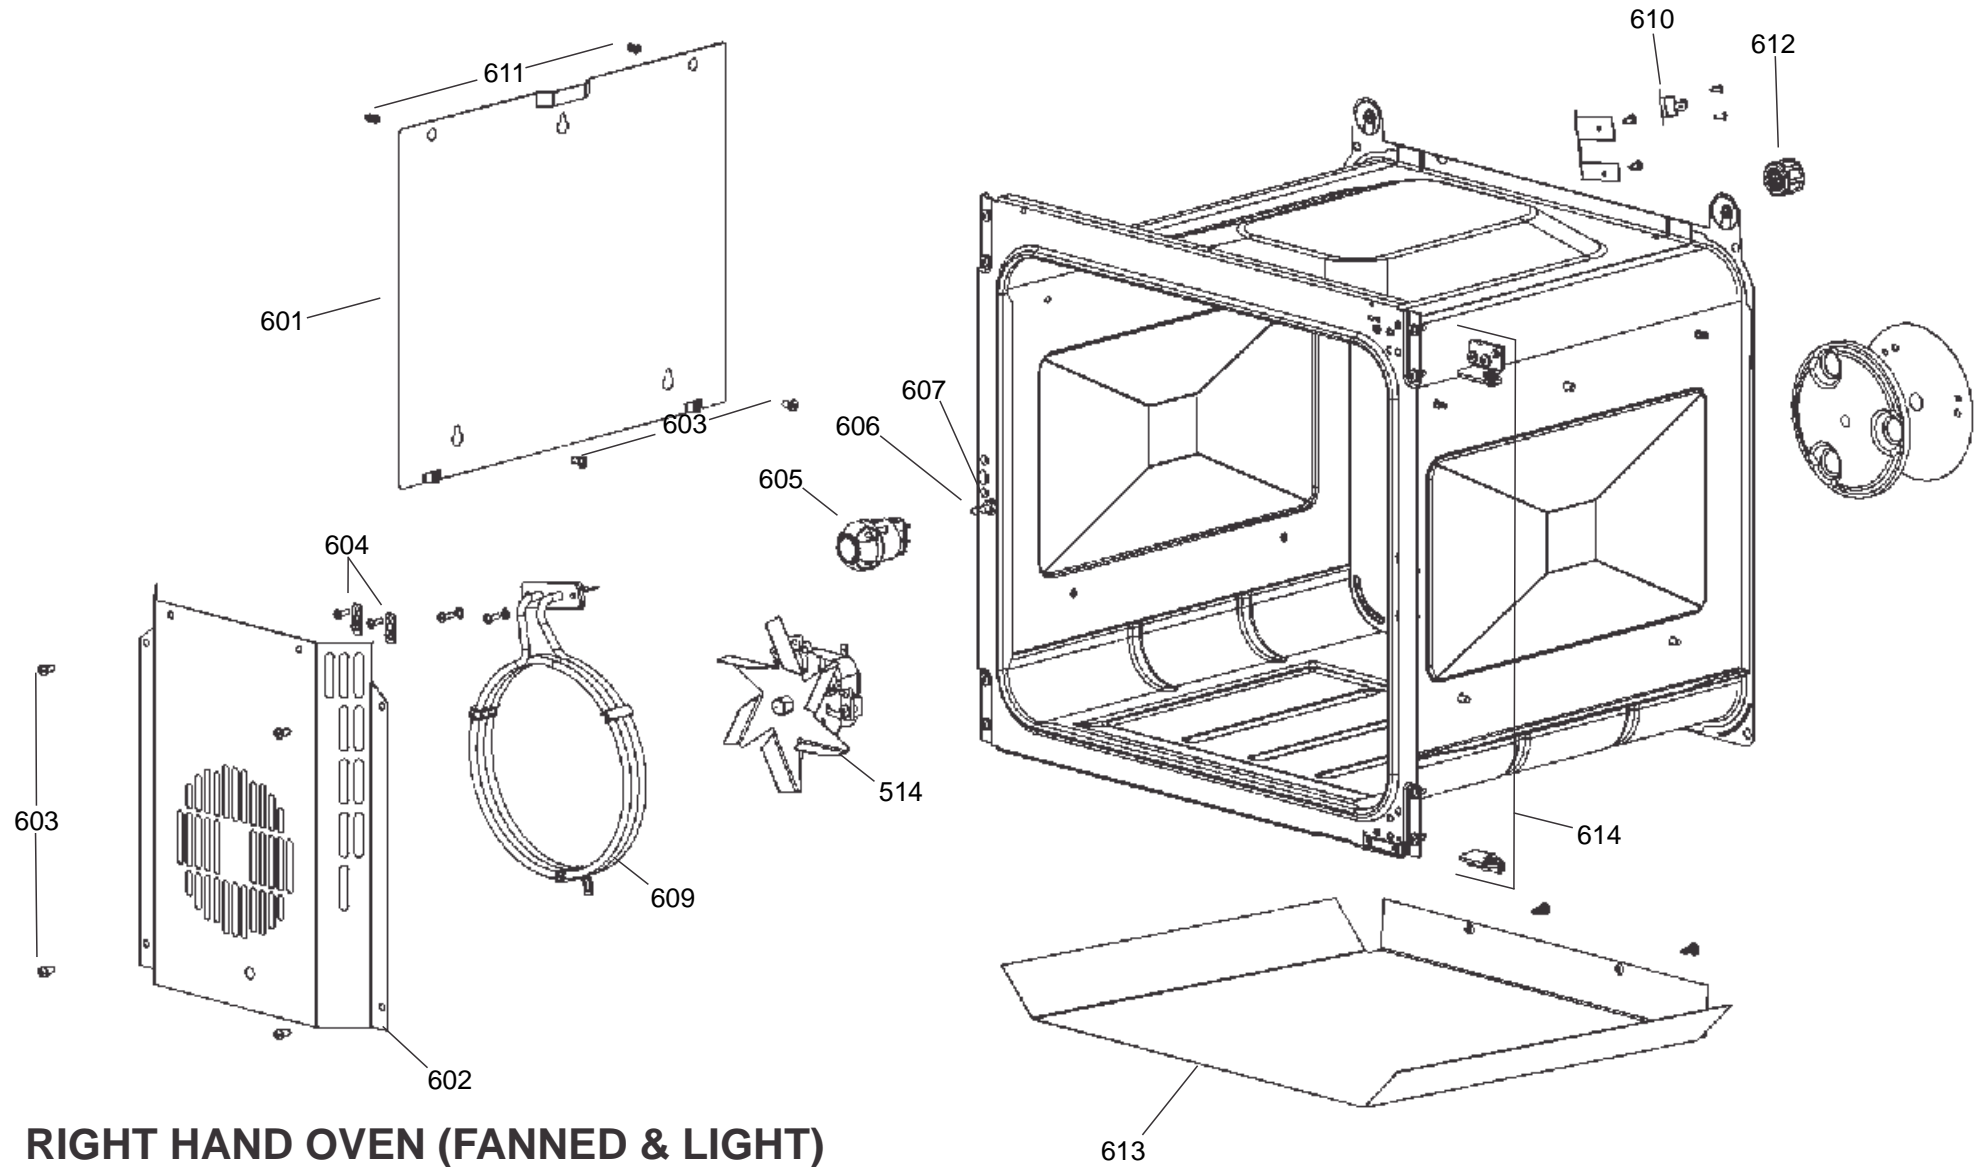


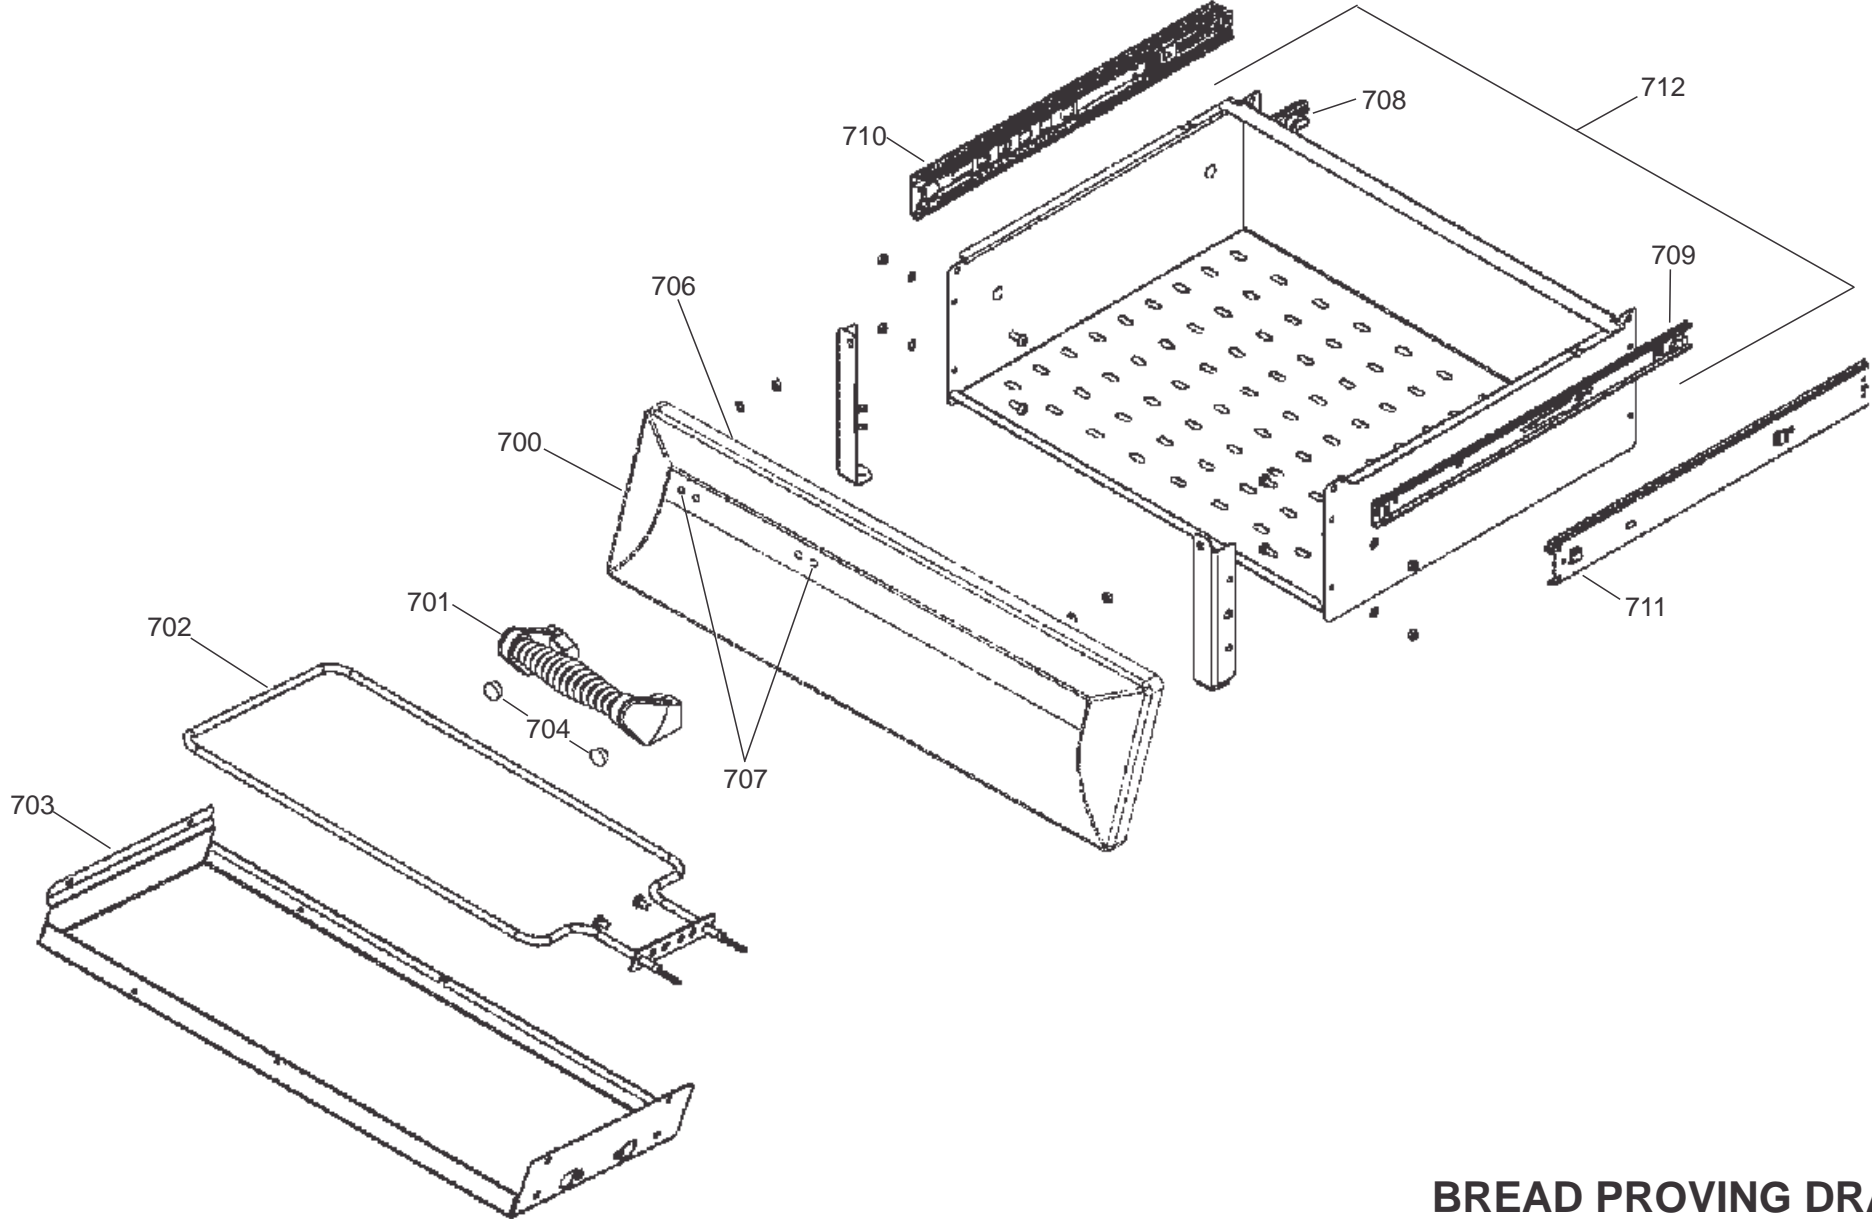

BREAD PROVING DRAWER

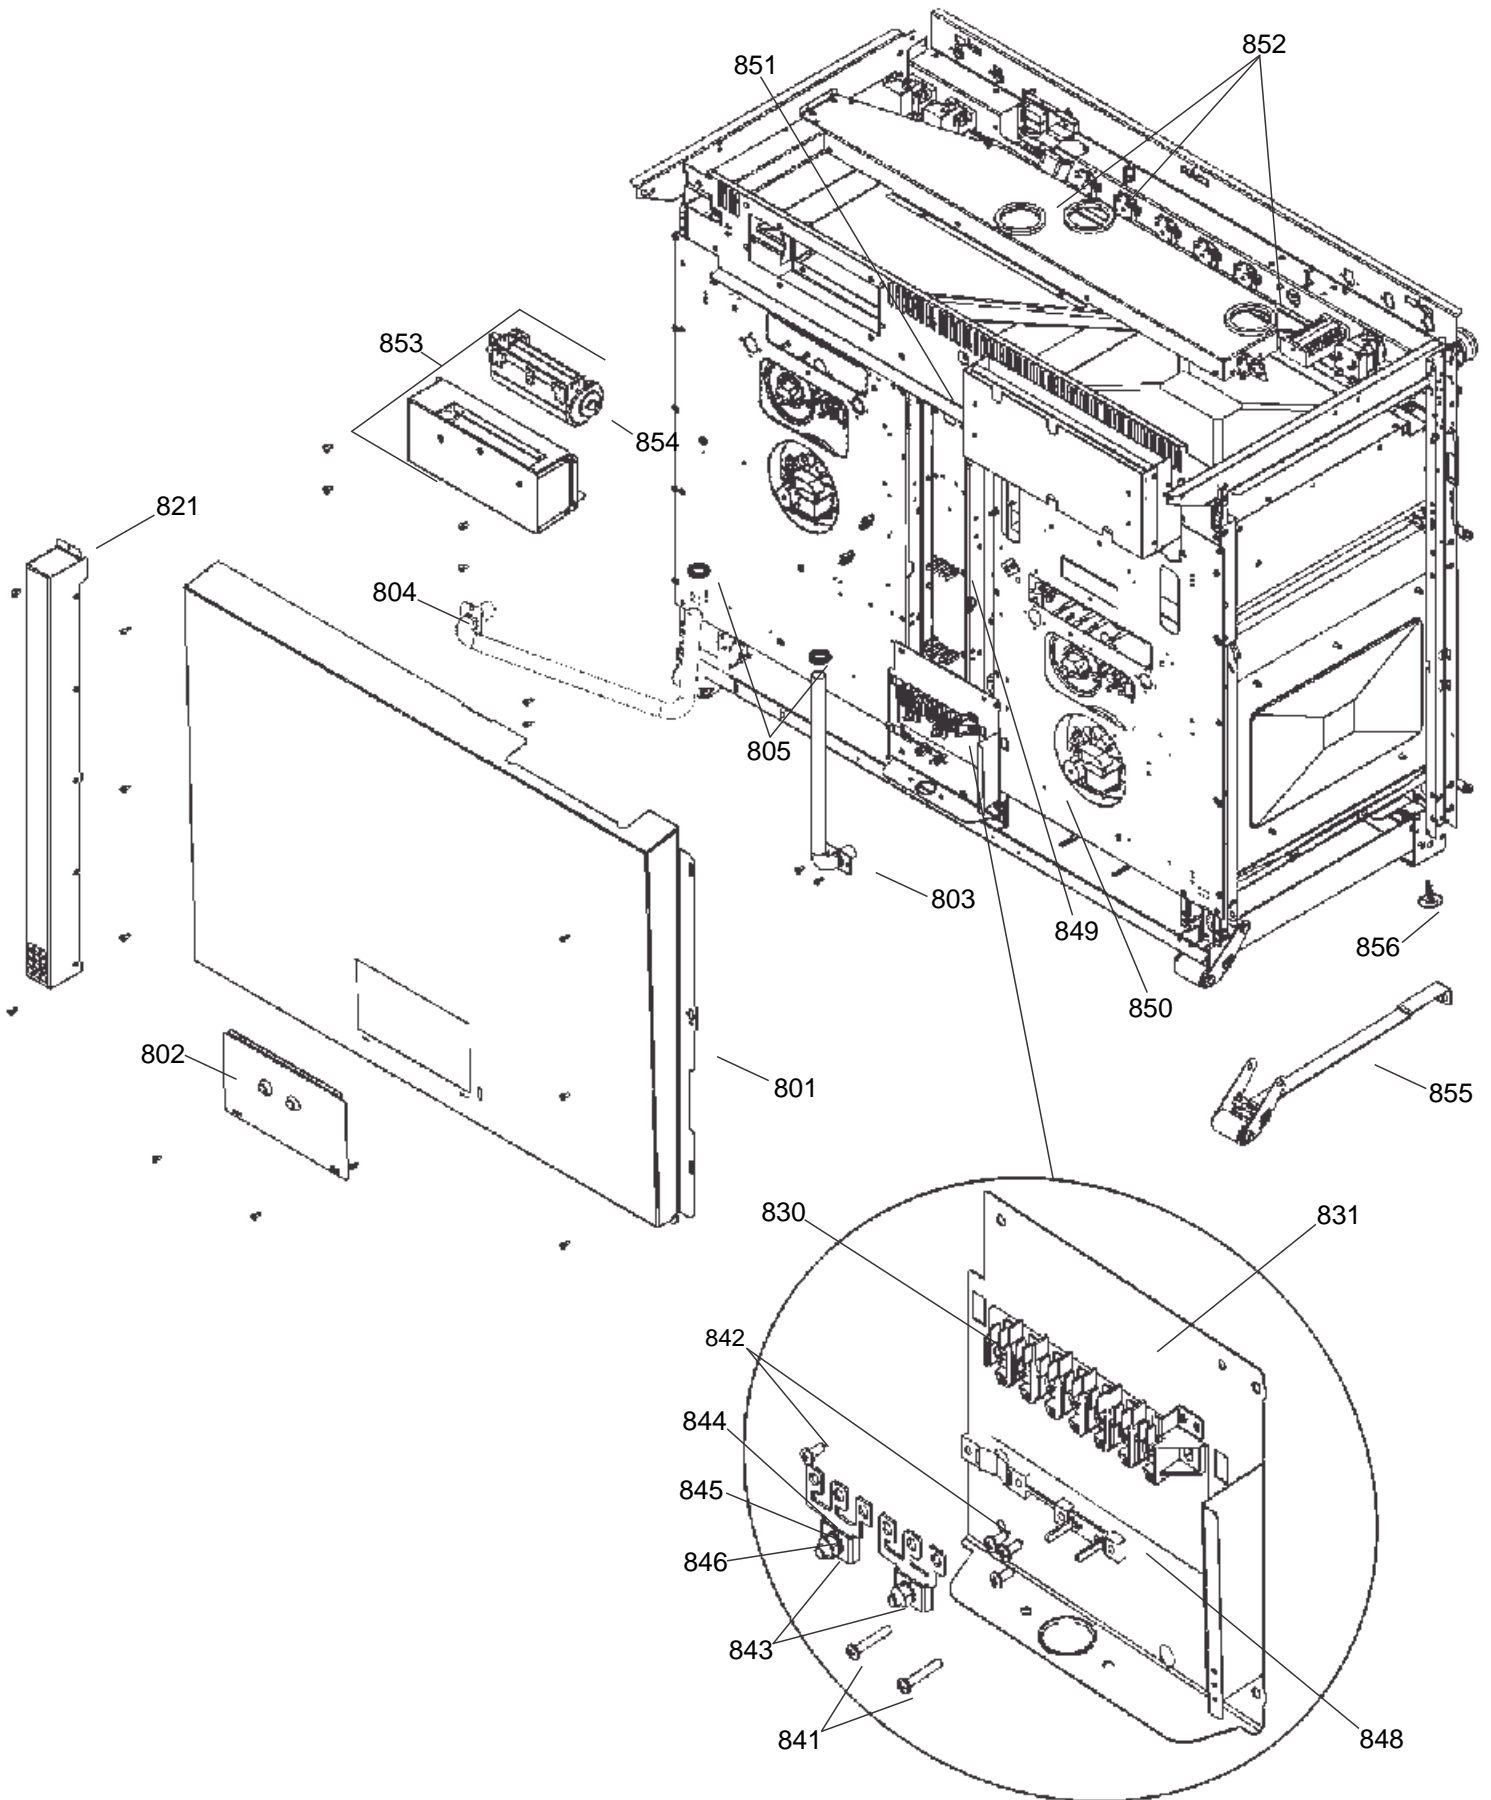 

COOKER BACK & ELECTRICAL

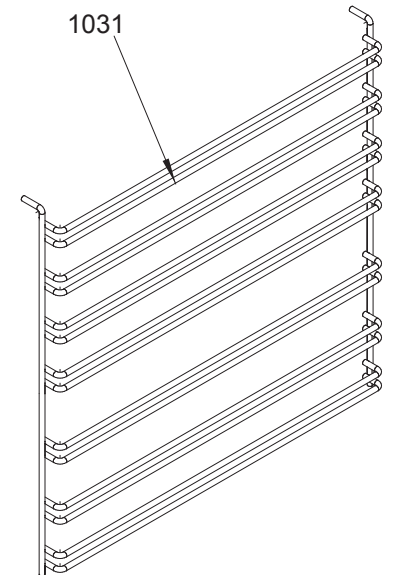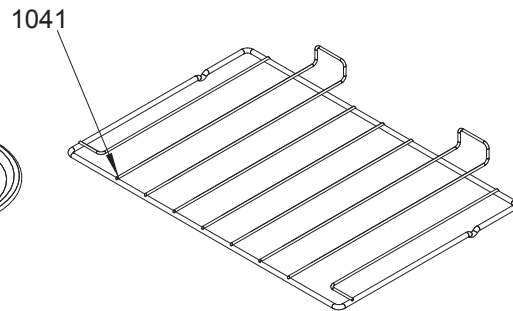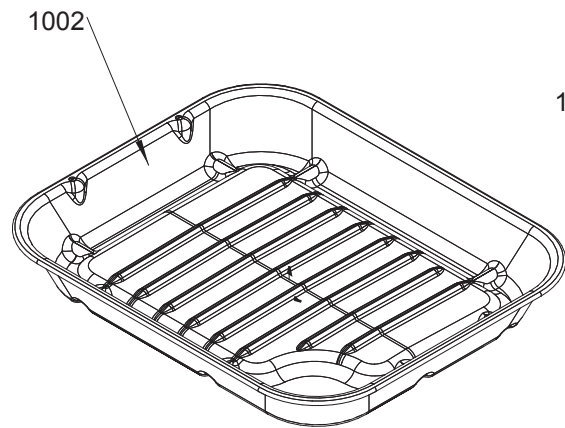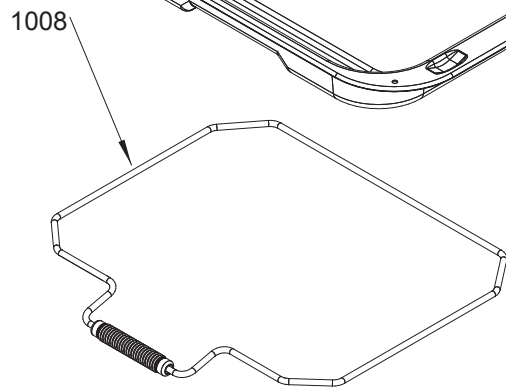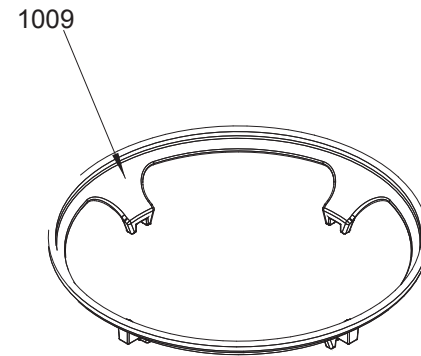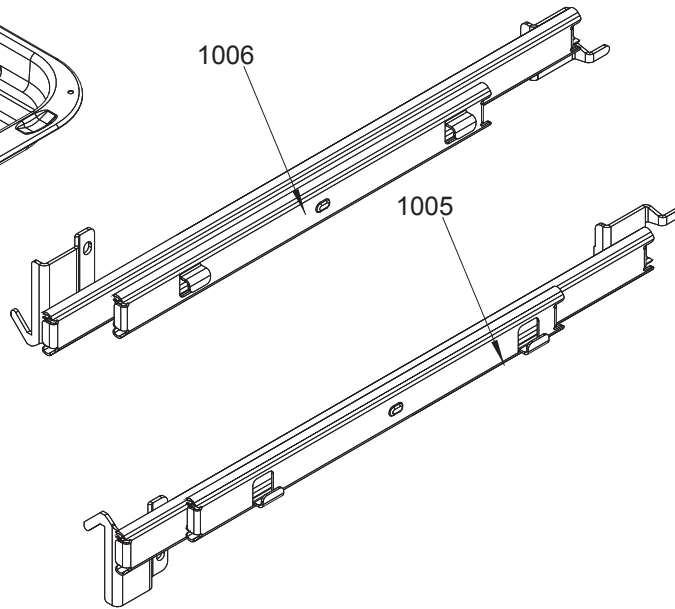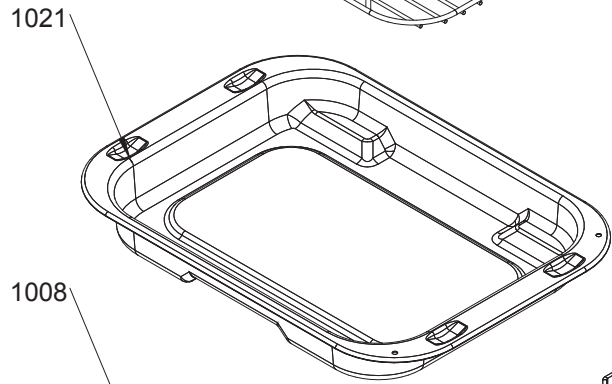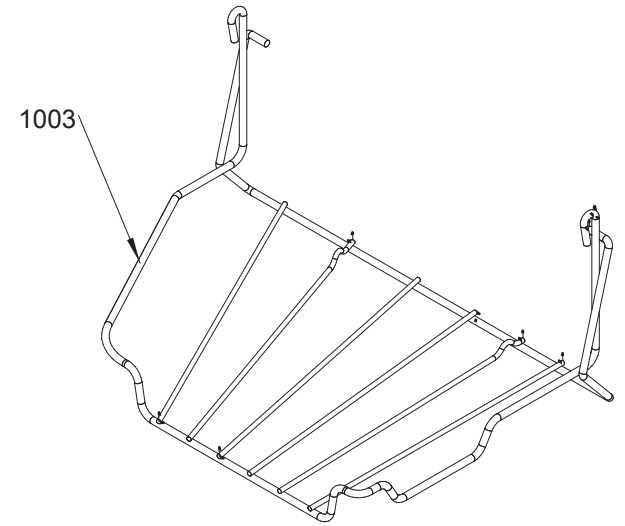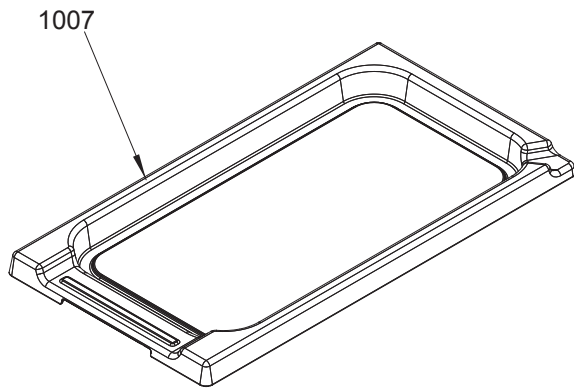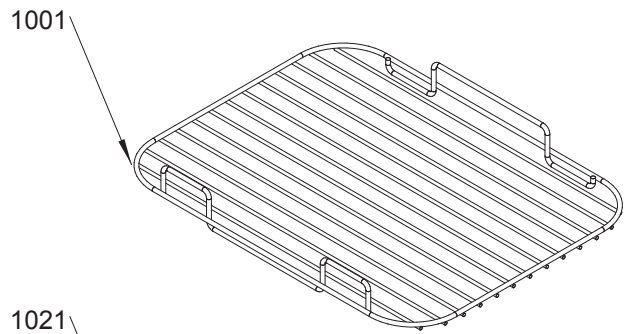          


ACCESSORIES


LECKFORD DELUXE 110 DUAL FUEL

DATE: 12.03.2019

 
DSL0791 P11
ISSUE STATUS 01

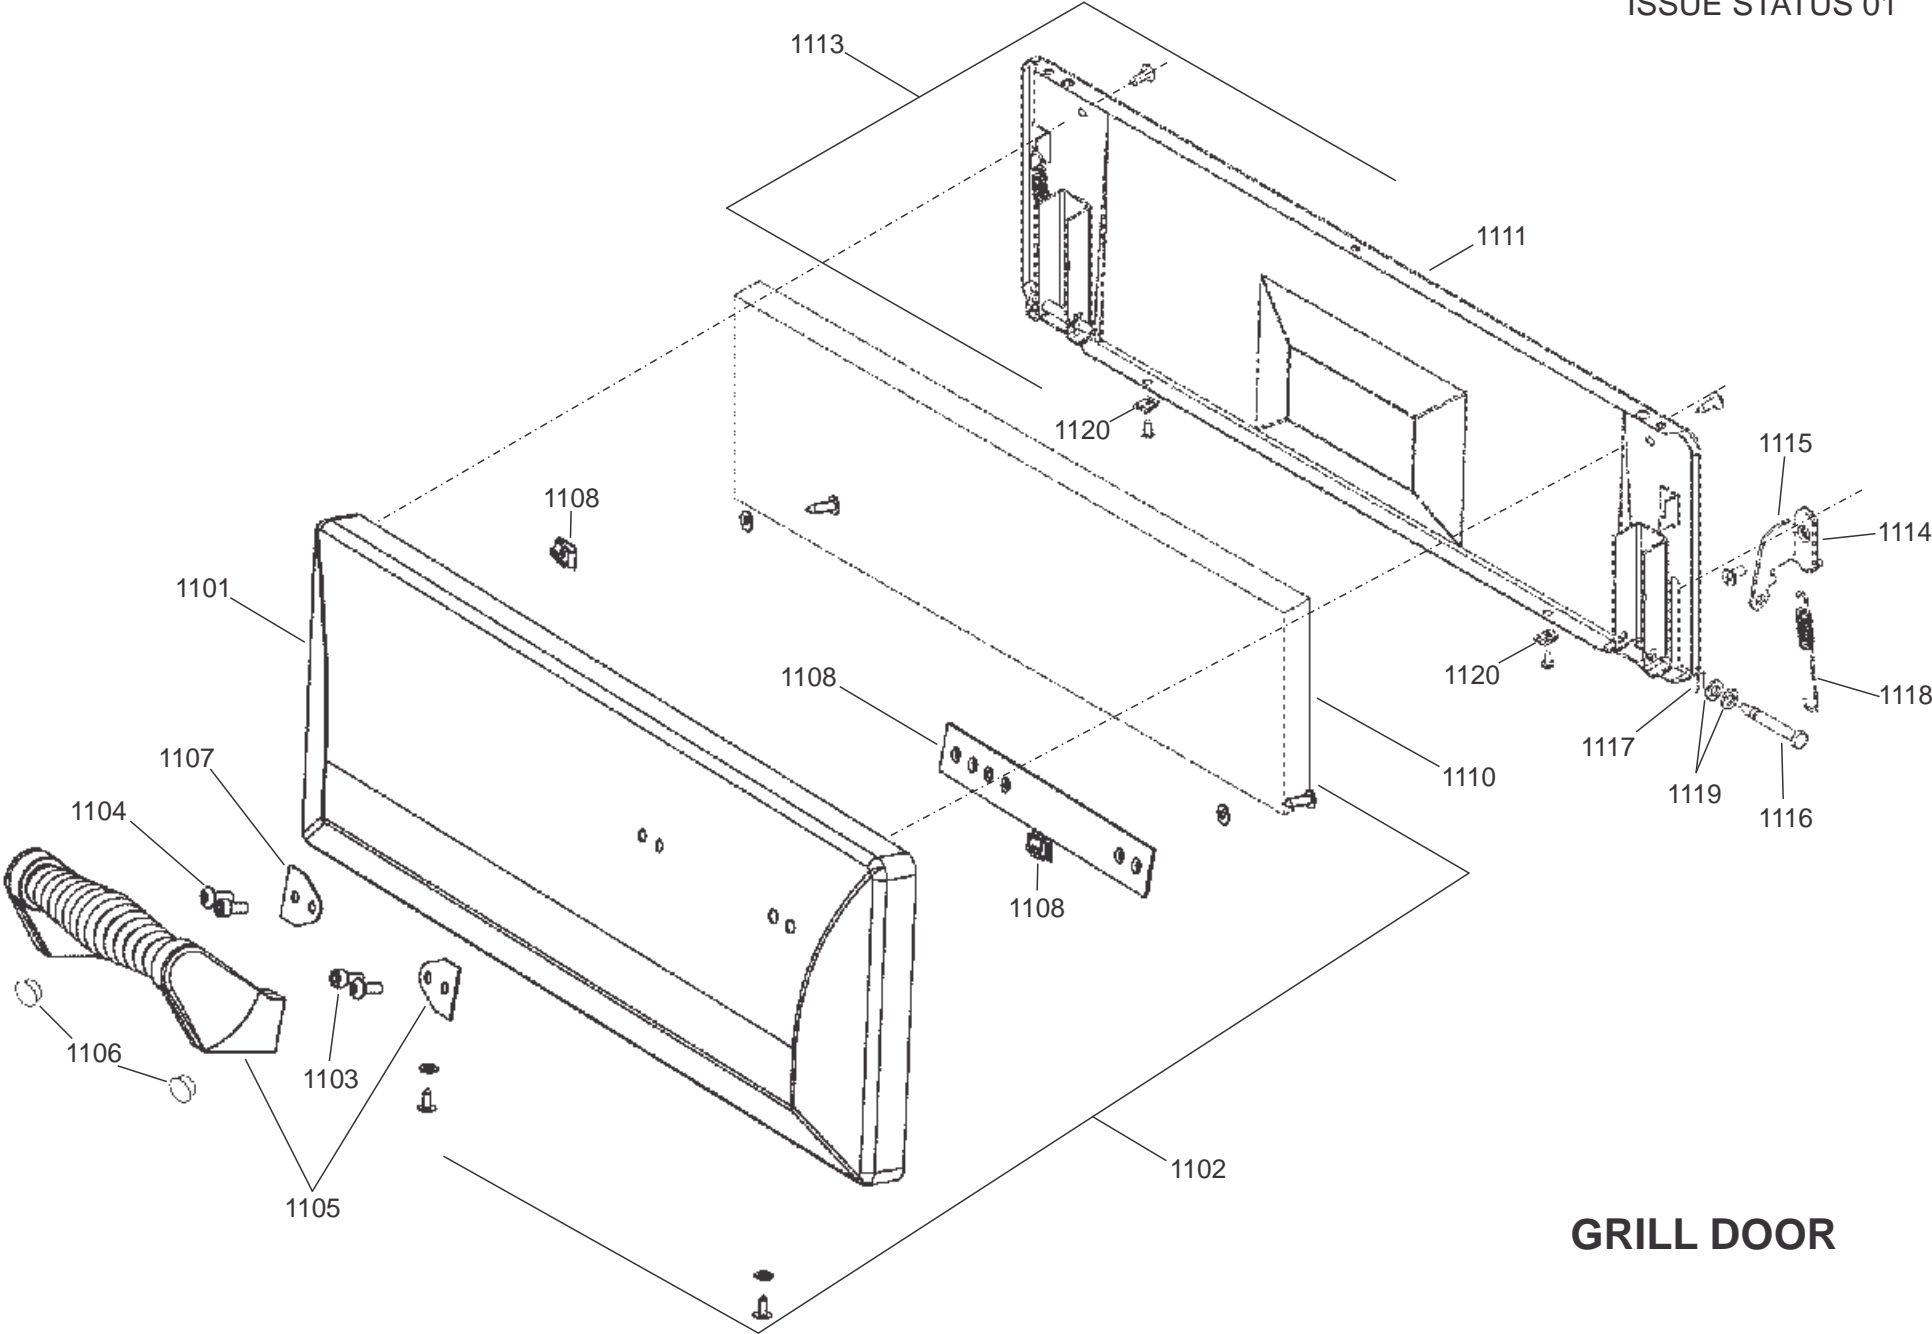

GRILL DOOR

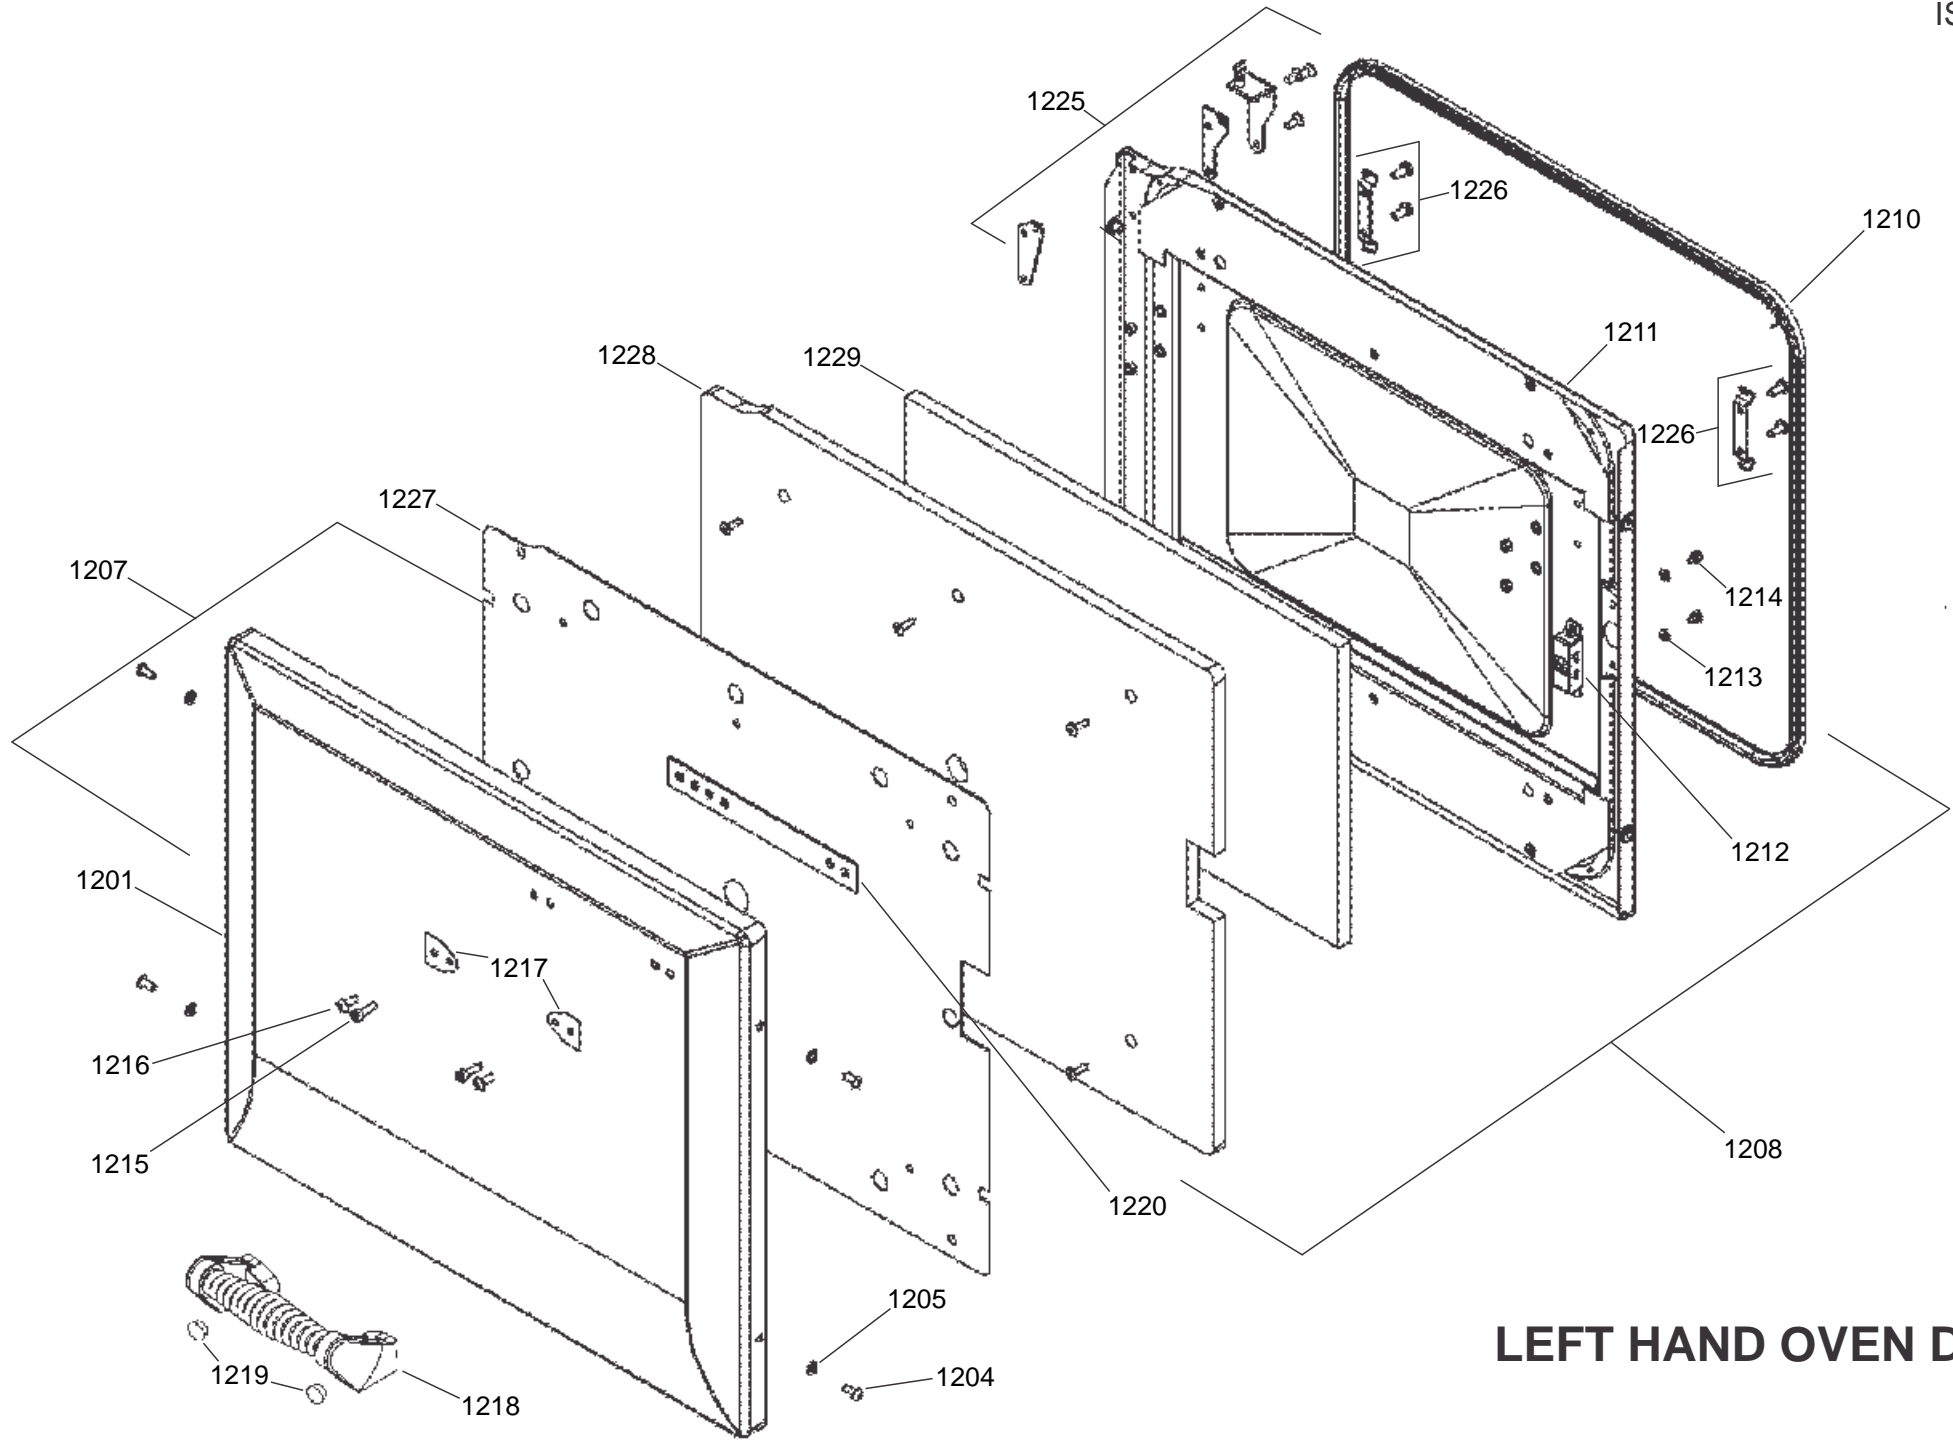 

LEFT HAND OVEN DOOR

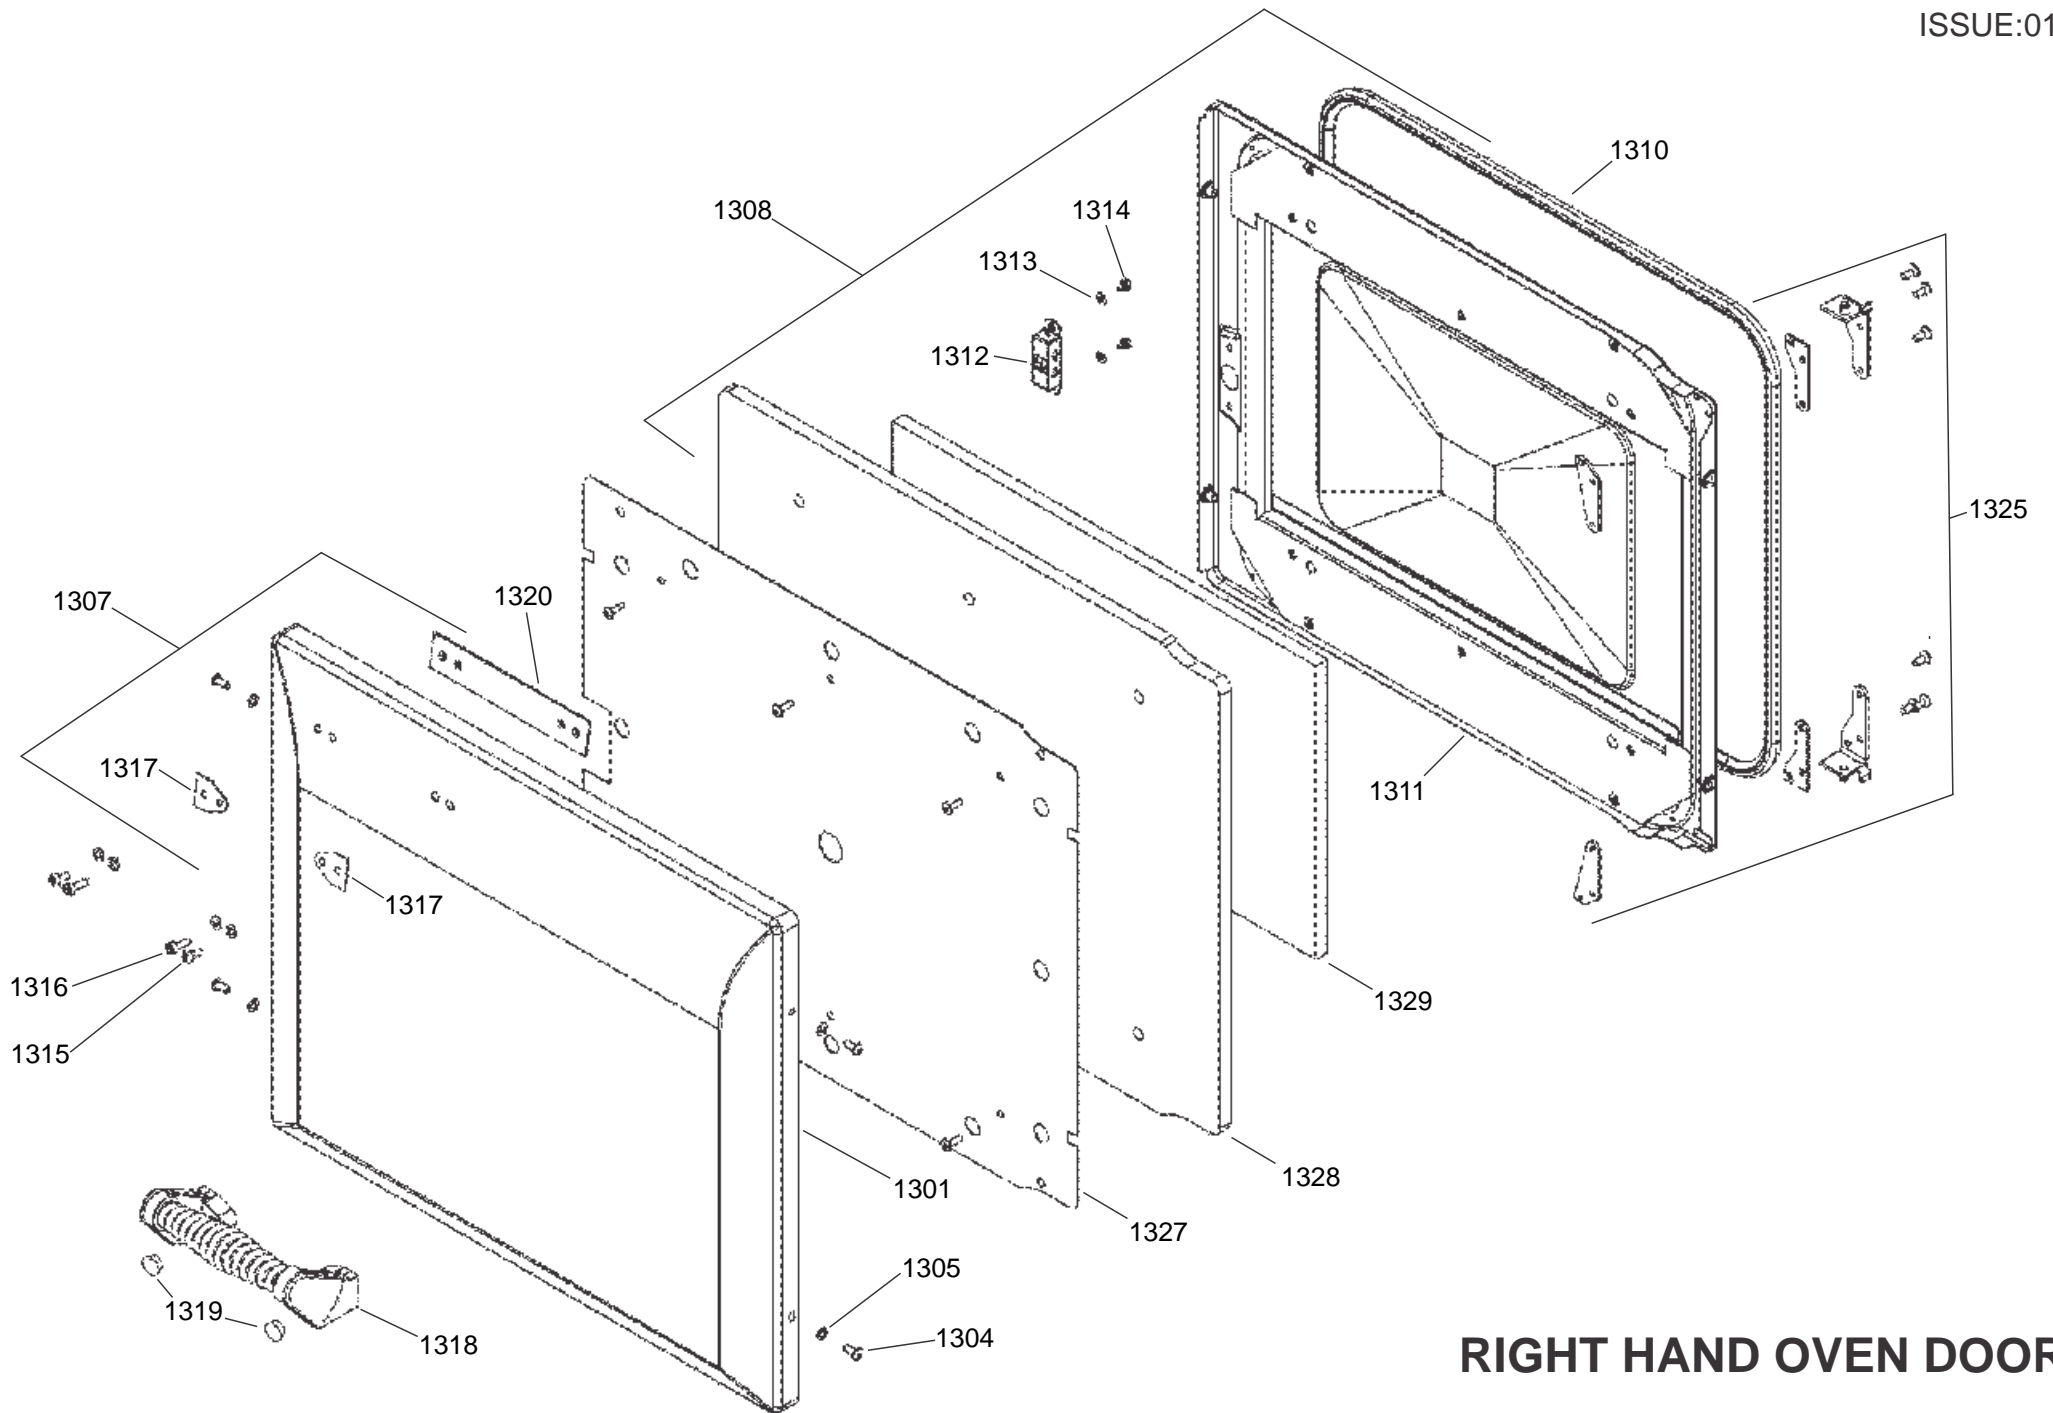 


RIGHT HAND OVEN DOOR

LECKFORD DELUXE 110 DUAL FUEL

DATE: 12.03.2019

DSL0791 P15

 ISSUE: 01

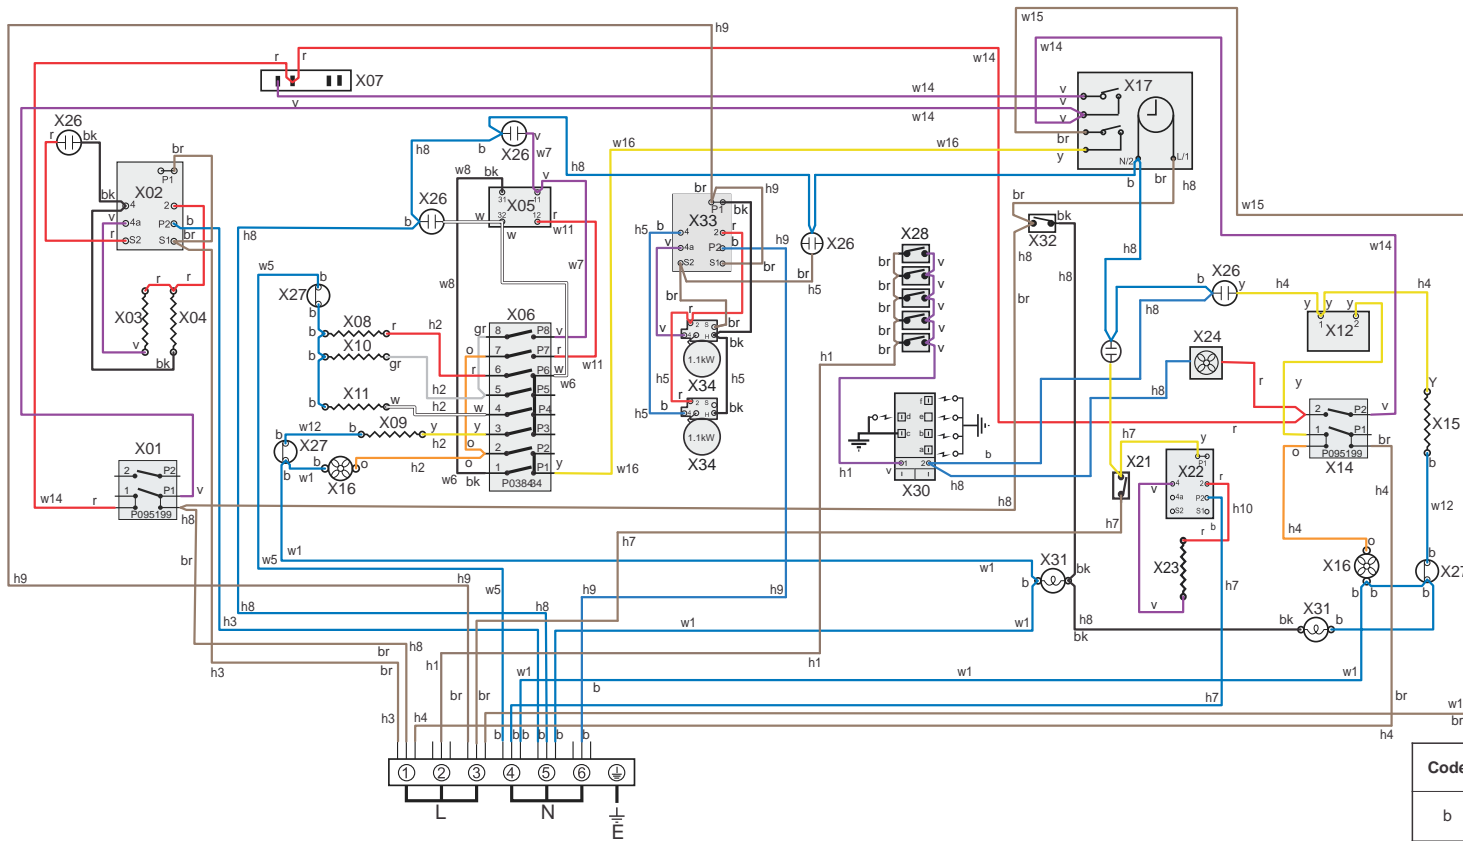

Code	Description
X01	Grill Front Switch
X02	Grill Energy Controller
X03	Left Hand Grill Elements
X04	Right Hand Grill Elements
X05	Left Hand Oven Thermostat
X06	Left Hand Oven Switch
X07	Left Hand Oven Front Switch
X08	Left Hand Oven Base Element
X09	Left Hand Oven Fan Element
X10	Left Hand Oven Top Outer Element
X11	Left Hand Oven Top Inner Element
X12	Right Hand Oven Thermostat
X14	Right Hand Oven Front Switch
X15	Right Hand Oven Fan Element
X16	Oven Fan
X17	Clock / Timer
X21	Proving Drawer Switch
X22	Proving Drawer Energy Regulator
X23	Proving Drawer Element
X24	Cooling Fan
X26	Neon
X27	Thermal Cut-Out
X28	Ignition Switches
X30	Spark Generator
X31	Oven Light
X32	Oven Light Switch
X33	Hob Energy Regulator
X34	Hob Element

Code	Description
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
g/y	Green / Yellow

WIRING