

NO Frost

°C



-16

-18






-20

-22

-24



SET

CODES ERREURS	
Codes erreurs (Voyants)	SIGNIFICATION
 / -16	Défaut sonde congélateur
 / - 20	Défaut sonde dégivrage
 / - 24	Défaut sonde ambiant
 	Défaut communication

Valeurs sonde de température							
T(°C)	R(kΩ)	T(°C)	R(kΩ)	T(°C)	R(kΩ)	T(°C)	R(kΩ)
-30	33.81	-20	18.9	0	6.495	5	5.06
-28	30.01	-18	16.9	1	6.175	6	4.818
-26	26.68	-16	15.12	2	5.873	8	4.372
-24	23.76	-10	10.92	3	5.587	10	3.972
-22	21.18	-5	8.392	4	5.315	15	3.141

La solution assistance