



A detailed view of the oven selector switch mechanism shows six positions (0-6) and three power points (P1, P2, P3). The switch is shown in its open position. The connections for each position are as follows:

Position	P3	P1	P2
0			
1	X		
2	X		X
3	X	X	X
4	X		
5	X		
6	X		X

0					⊕	0°
1	X				⊗	51.43°
2	X			X	⊕	102.86°
3	X	X		X	⊗	154.29°
4	X				⊗	205.72°
5	X				⊕	257.15°
6	X			X	⊗	308.58°