


# **RAYBURN 216 SFW COOKER**


## ***SPARE PARTS MANUAL***

**LPRT 513158**


**DATE: OCTOBER 2003**

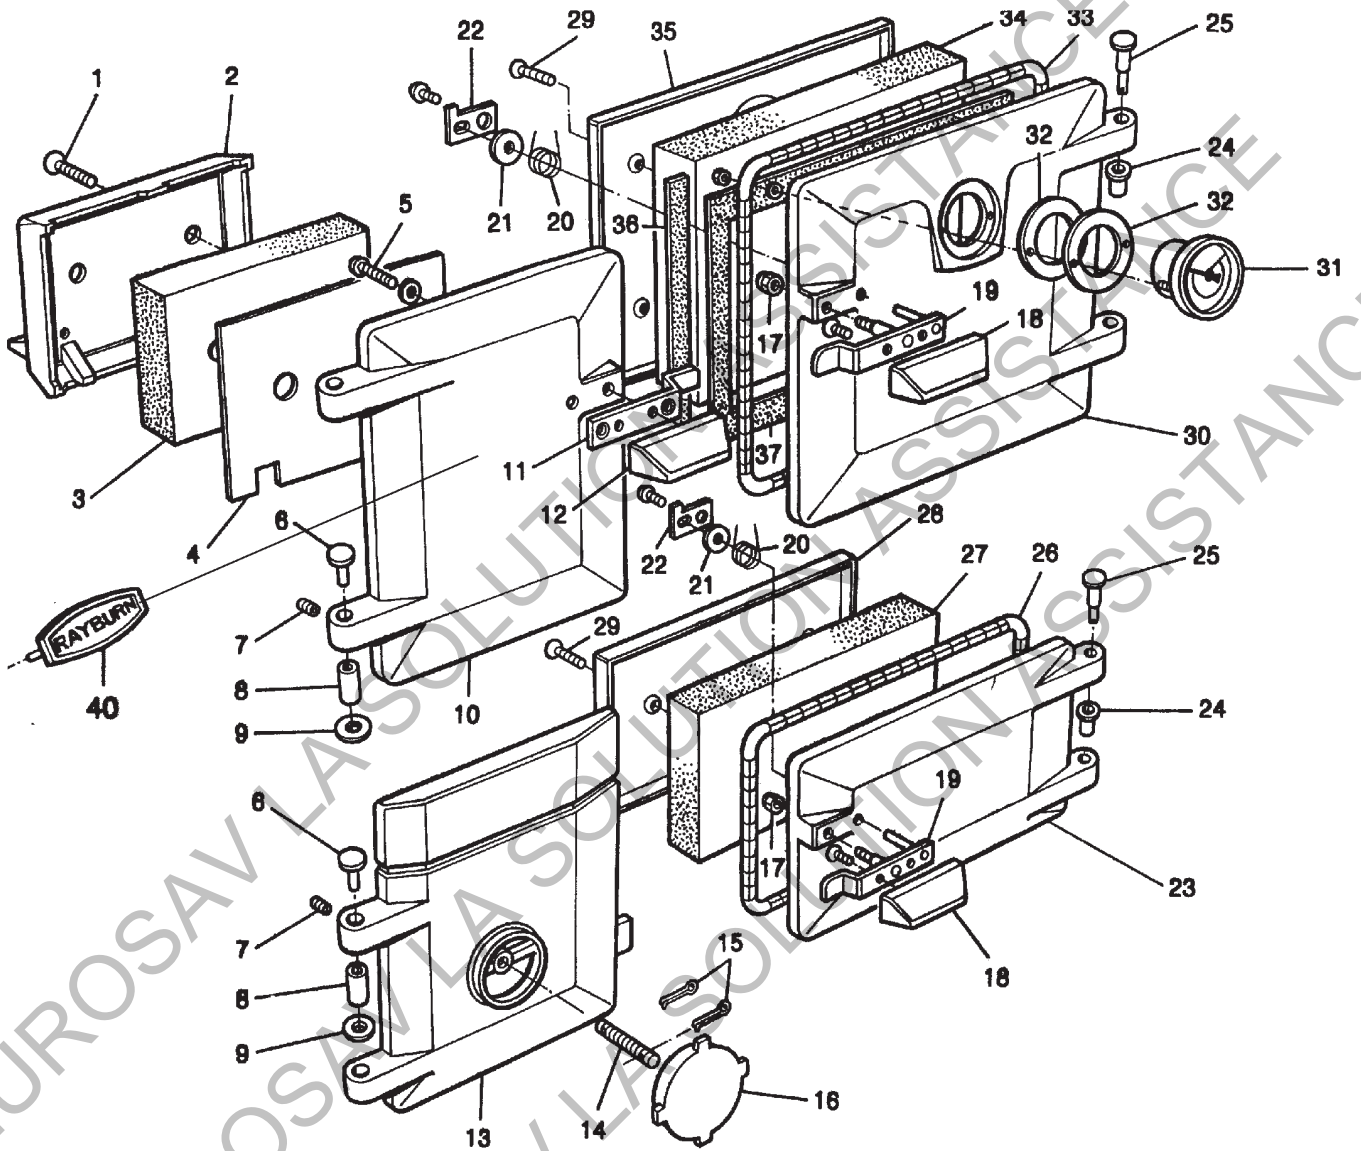


**RAYBURN 216 SFW COOKER  
TOP/BOTTOM OVEN DOORS, FIRE DOOR & ASHPIT DOOR  
ASSEMBLY**

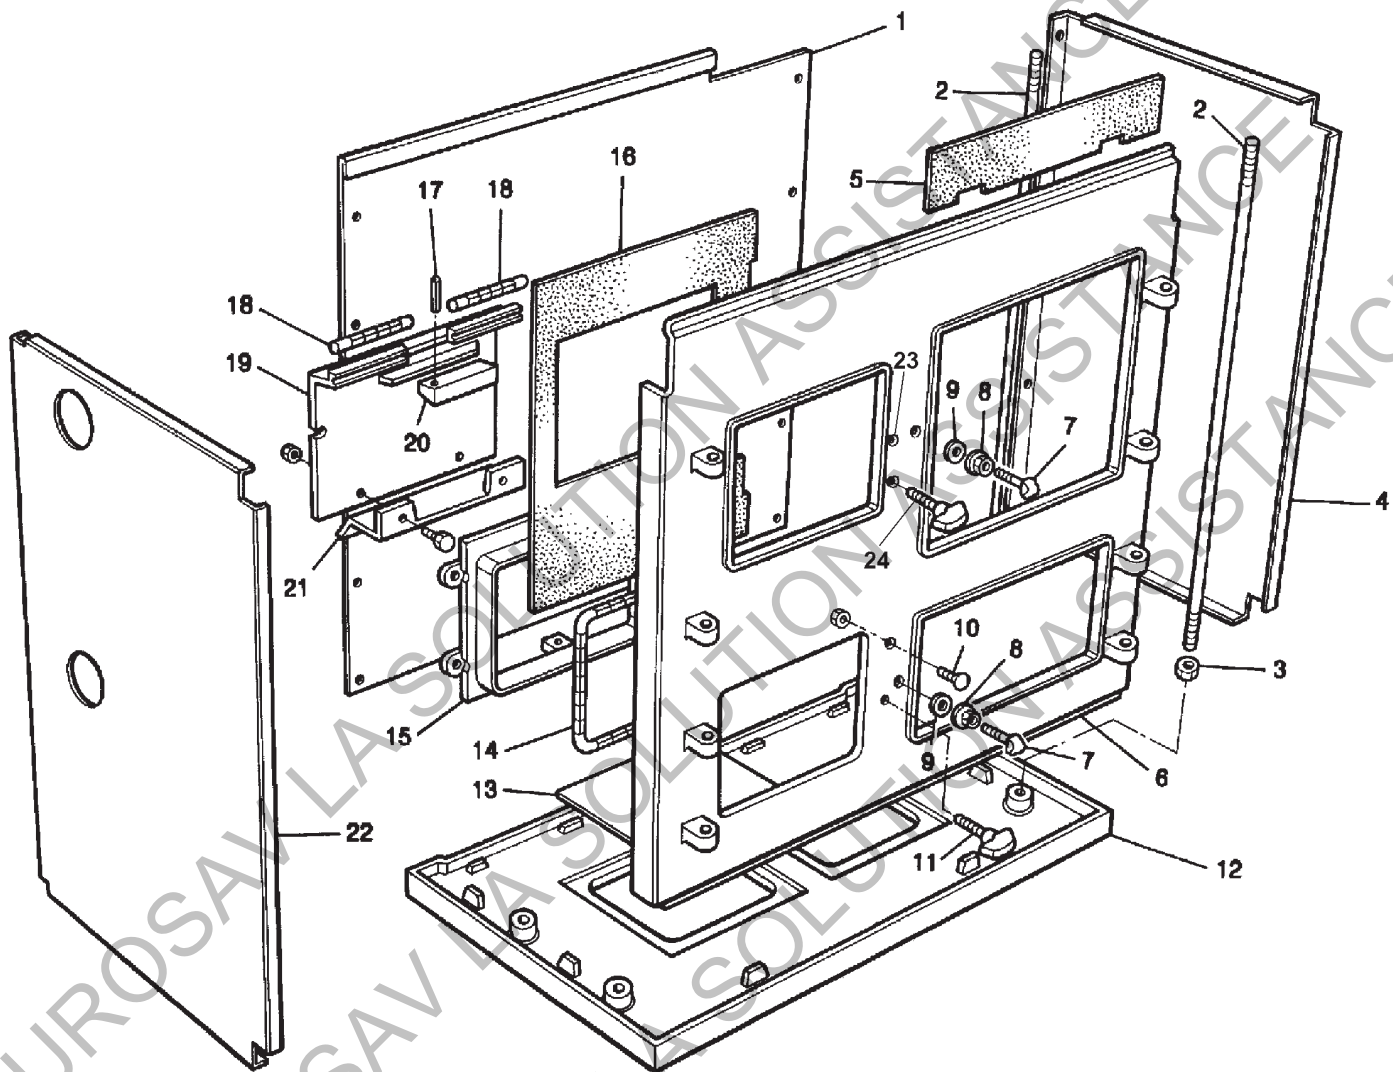


**RAYBURN 216SFW COOKER**  
**FRONT PLATE, SIDE PLATES, BACK PLATE, BASE PLATE**

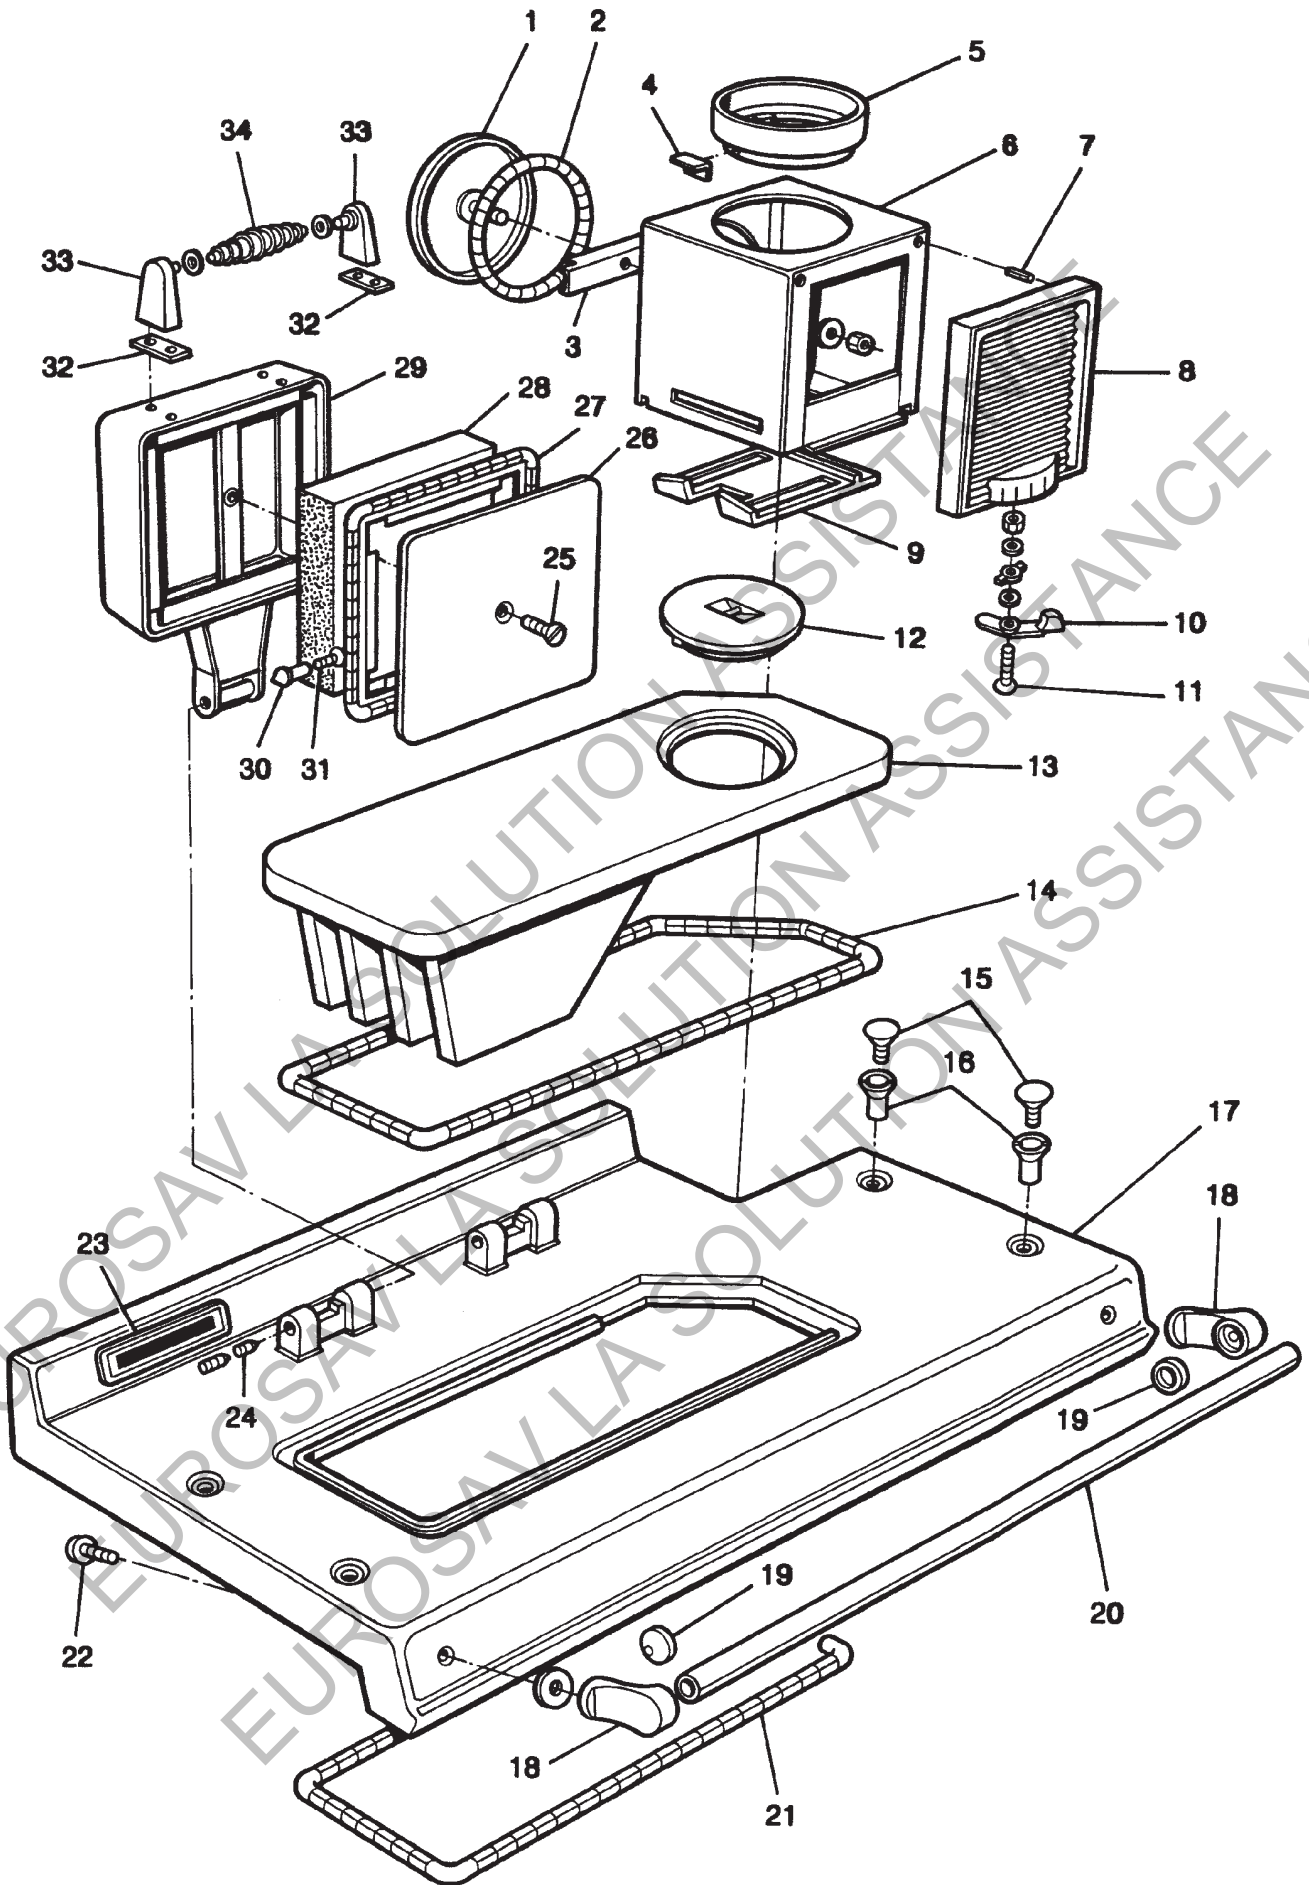

**RAYBURN 216SFW COOKER - UP TO M04-039  
HOB PLATE, INSULATING COVERS & FLUE CHAMBER**

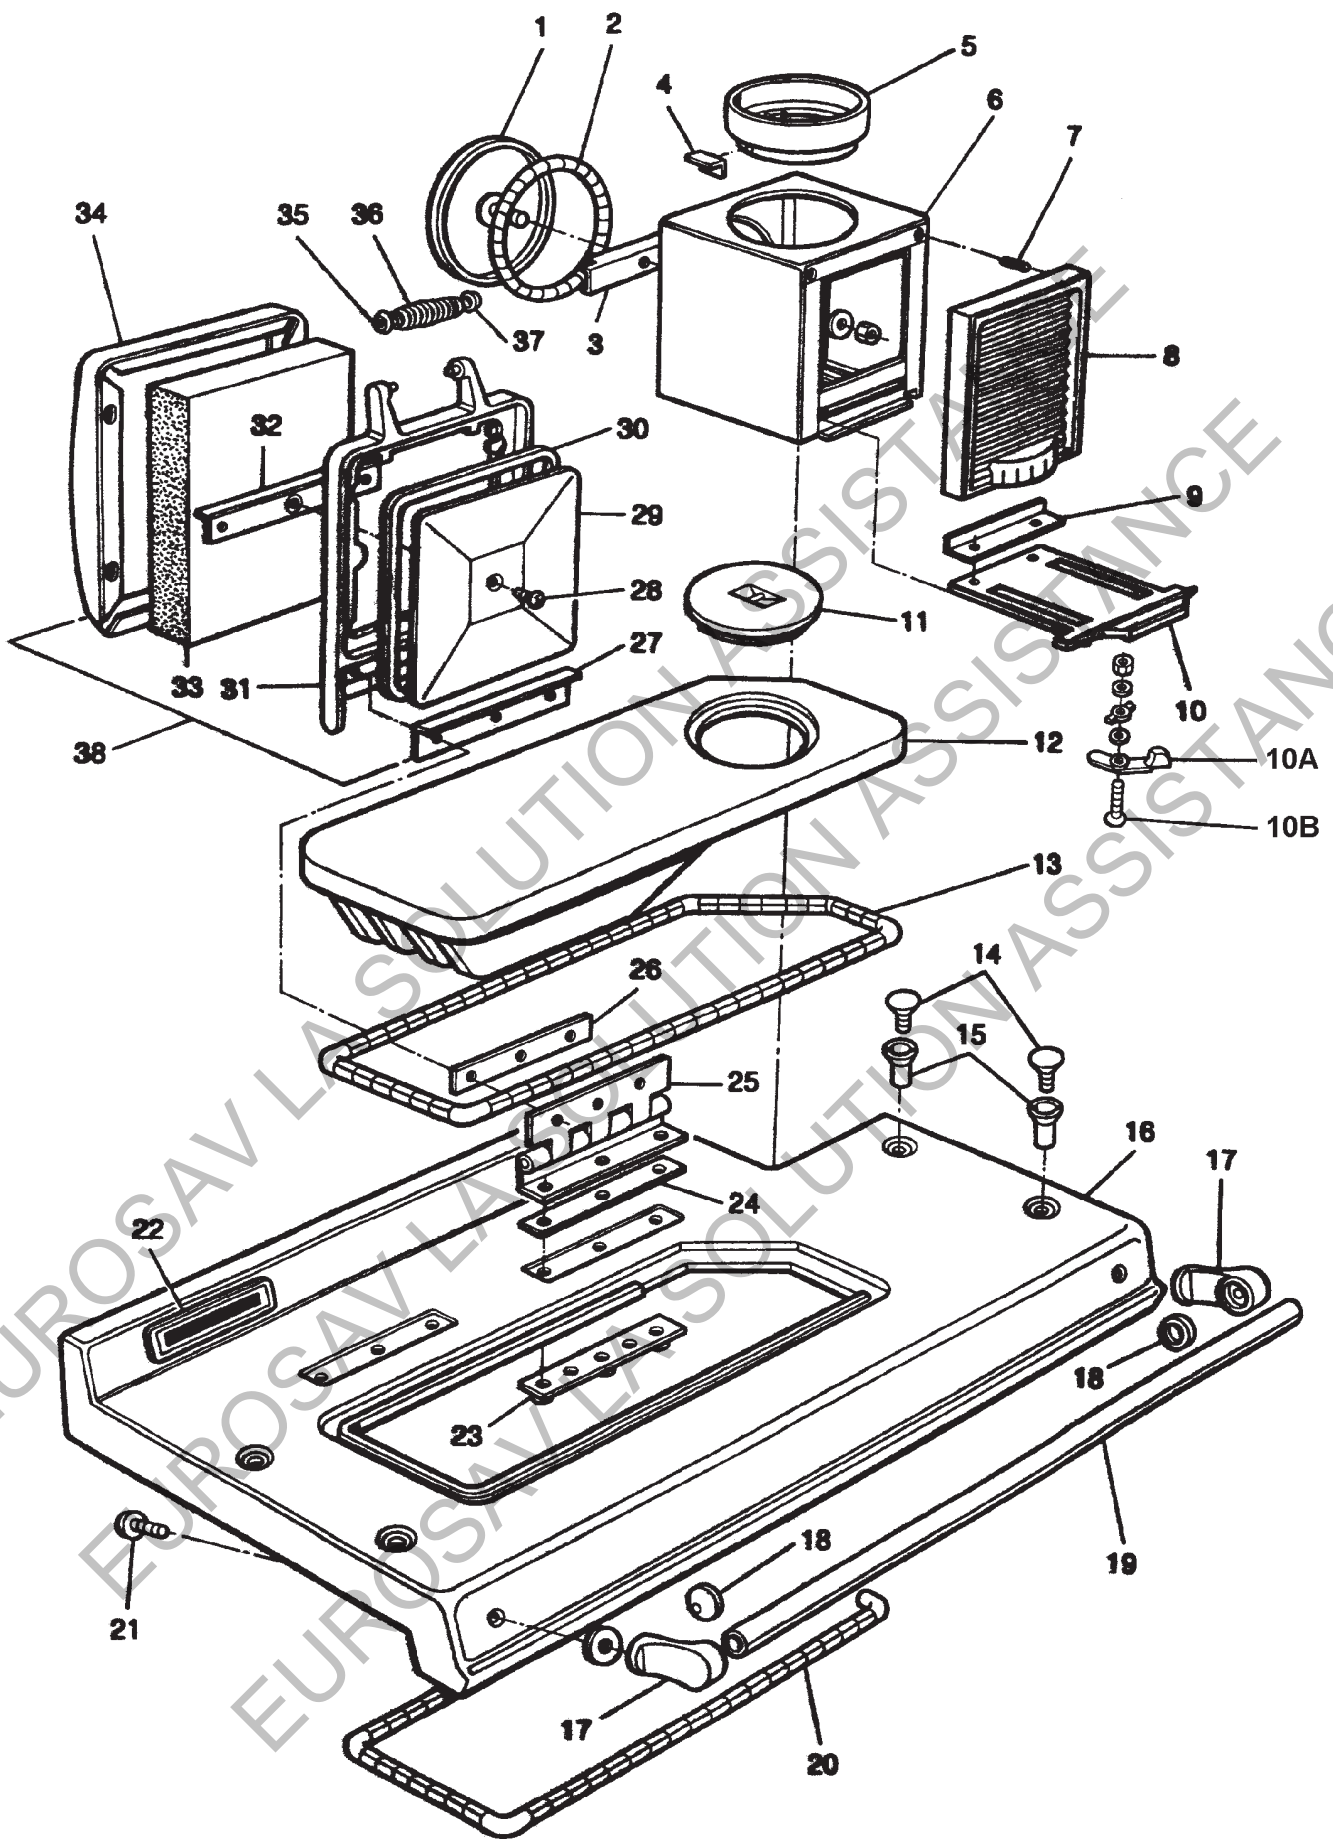


**RAYBURN 216SFW COOKER - FROM M04-039**  
**HOB PLATE, INSULATING COVERS & FLUE CHAMBER**

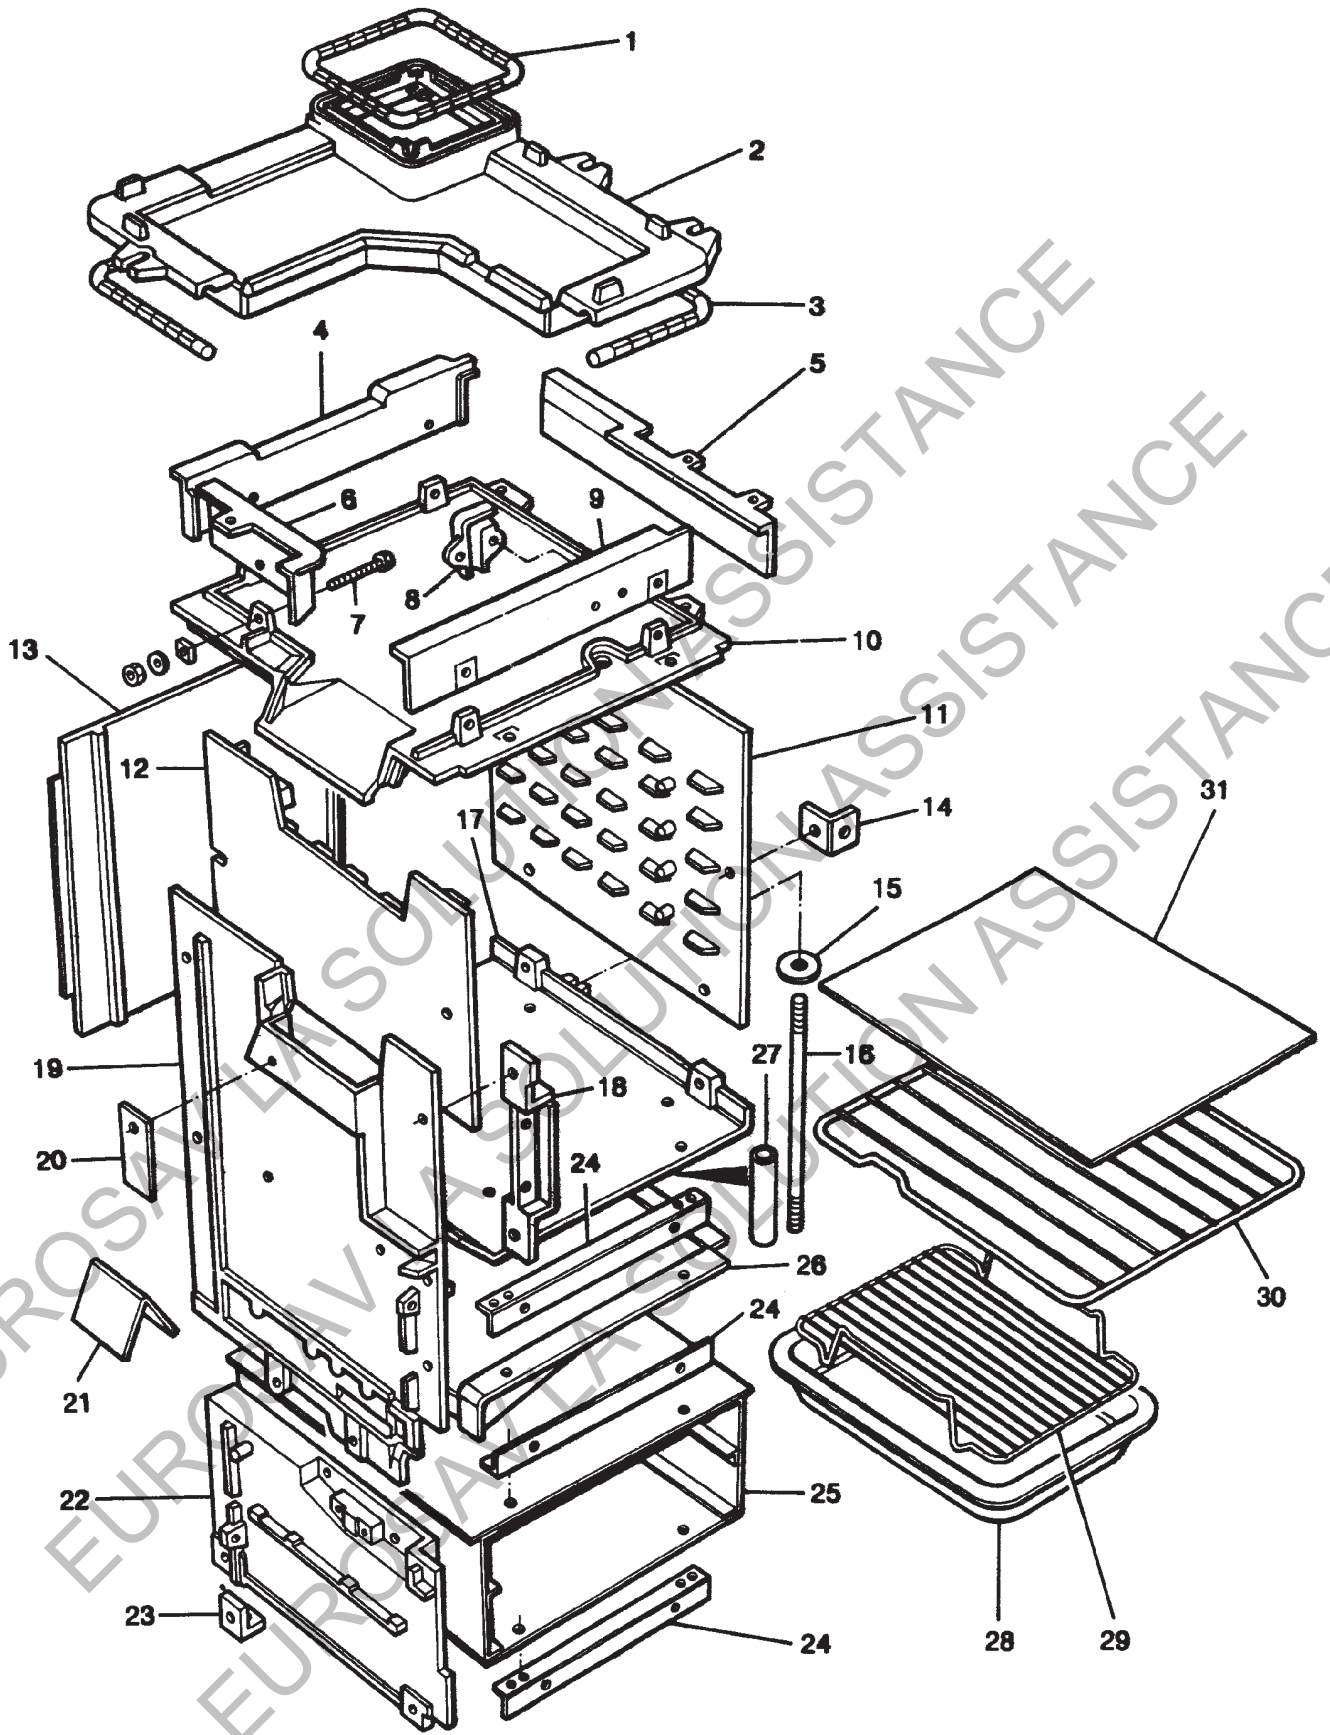


**RAYBURN 216SFW COOKER  
HOB PROTECTOR PLATE, TOP OVEN & WARMING OVEN**

EUROSAX LA SOLUTION ASSISTANCE

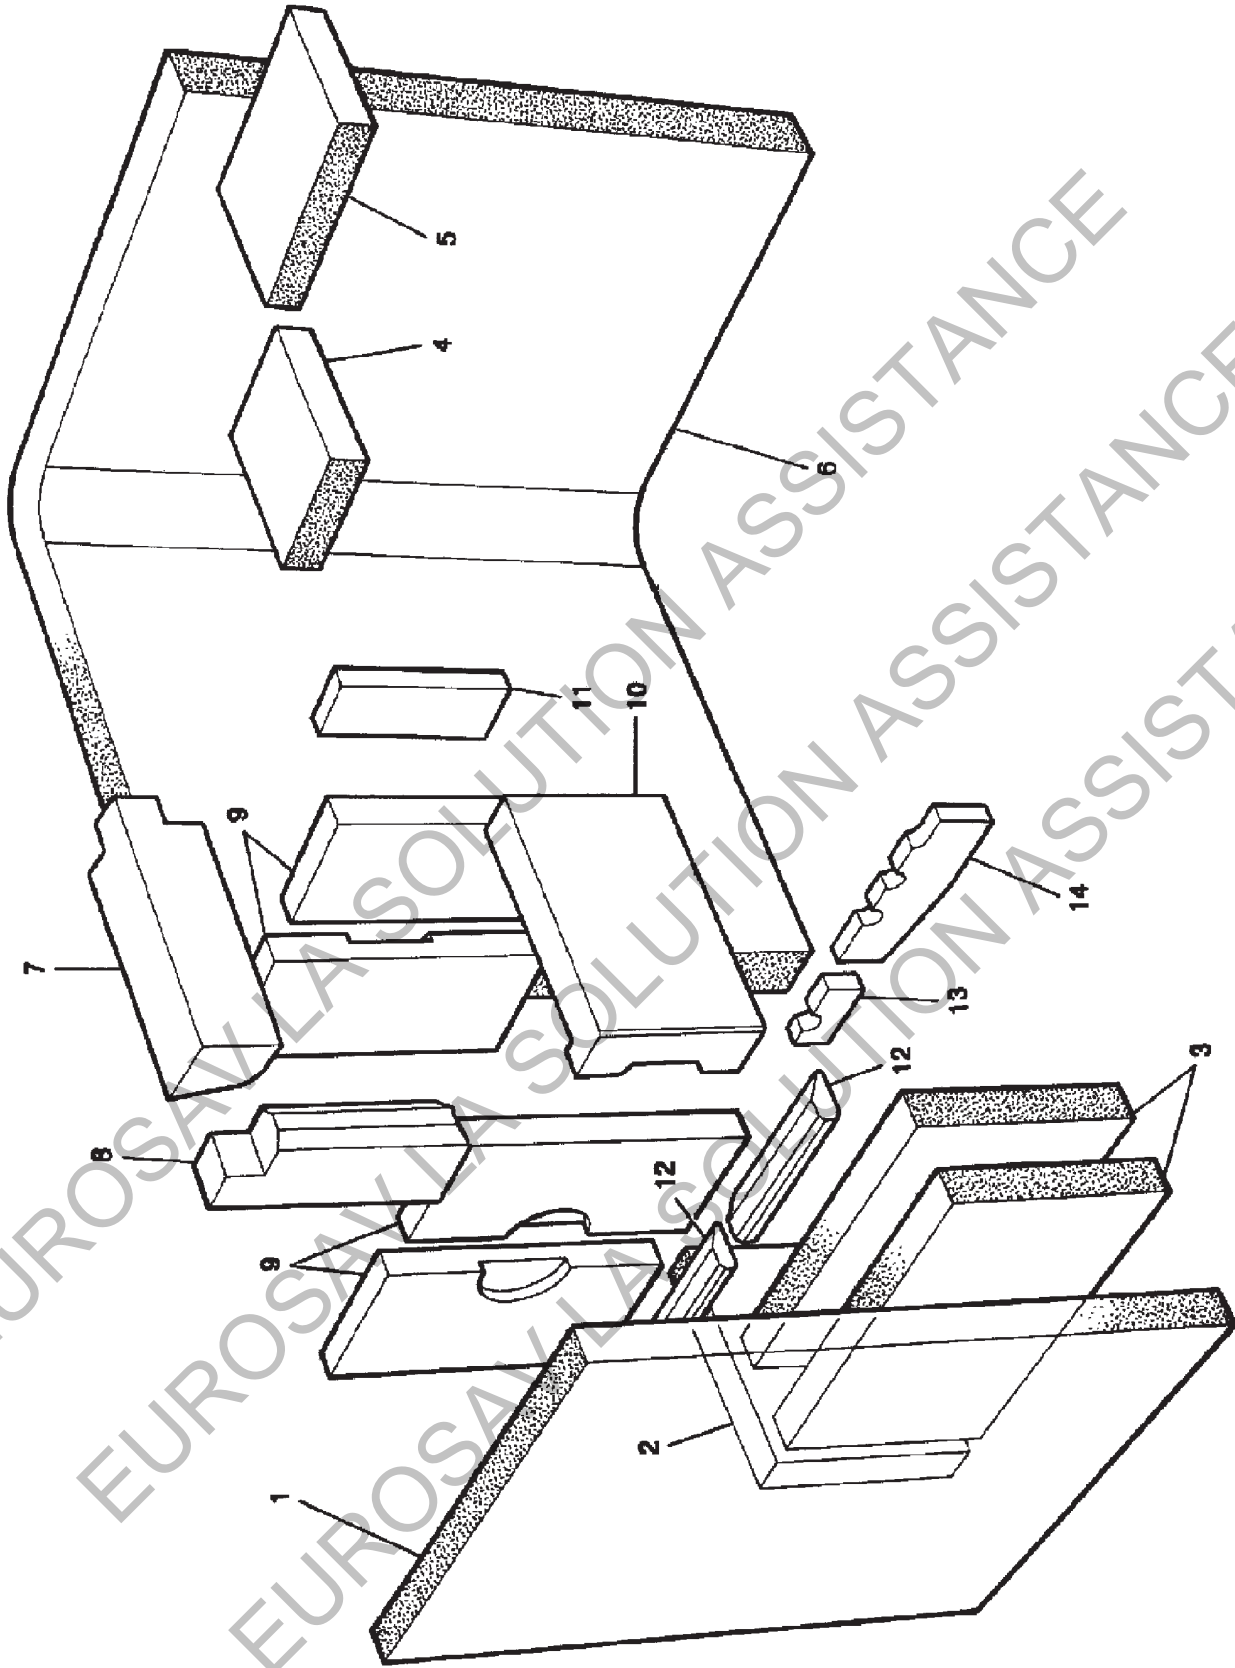

**RAYBURN 216SFW  
FIREBRICKS AND INSULATION**

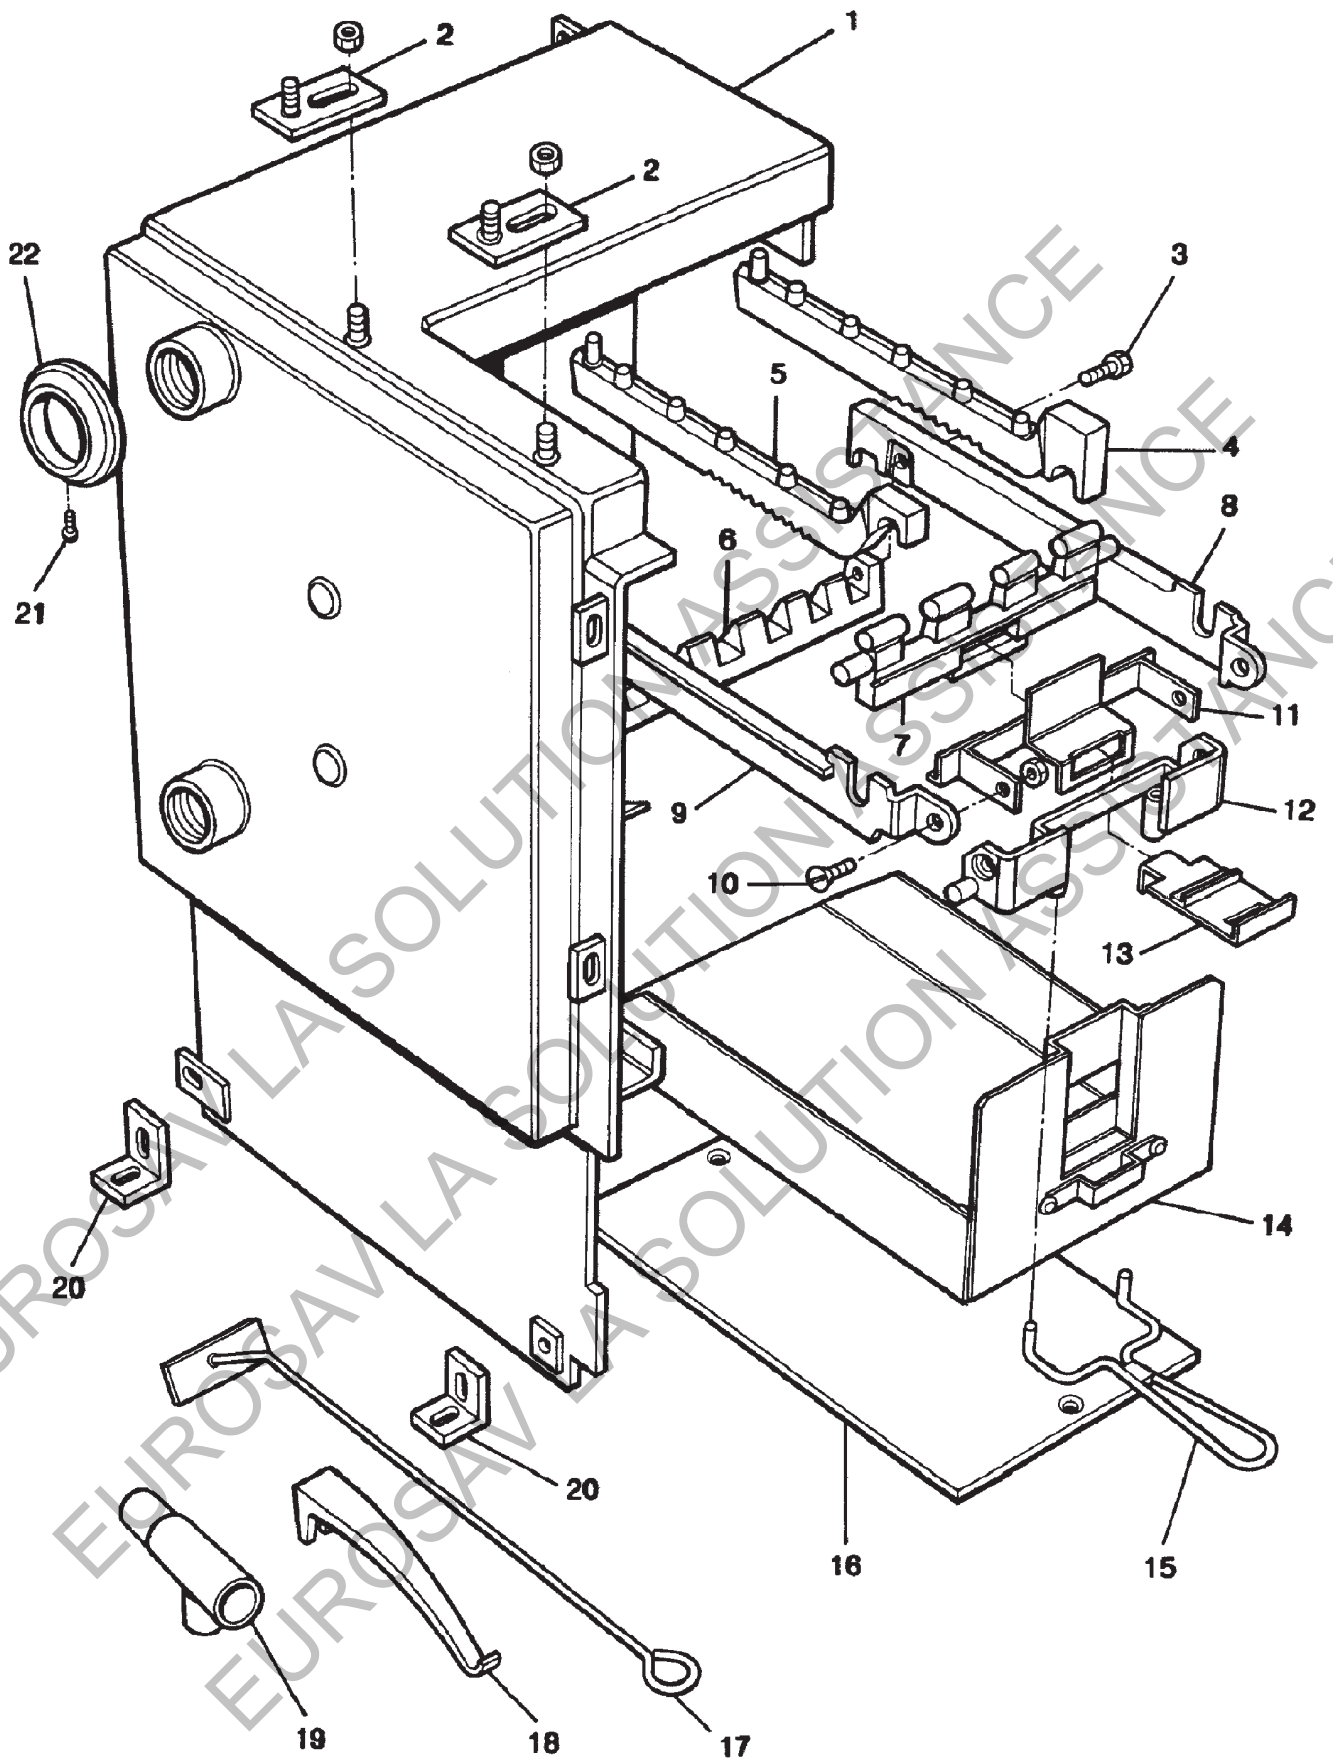

**RAYBURN 216SFw COOKER  
BOILER, DAMPERS, GRATE AND RIDDLING ASSEMBLIES**