



**AGA ELECTRIC (AIMS)
EC COOKER**


***SPARE PARTS
MANUAL***

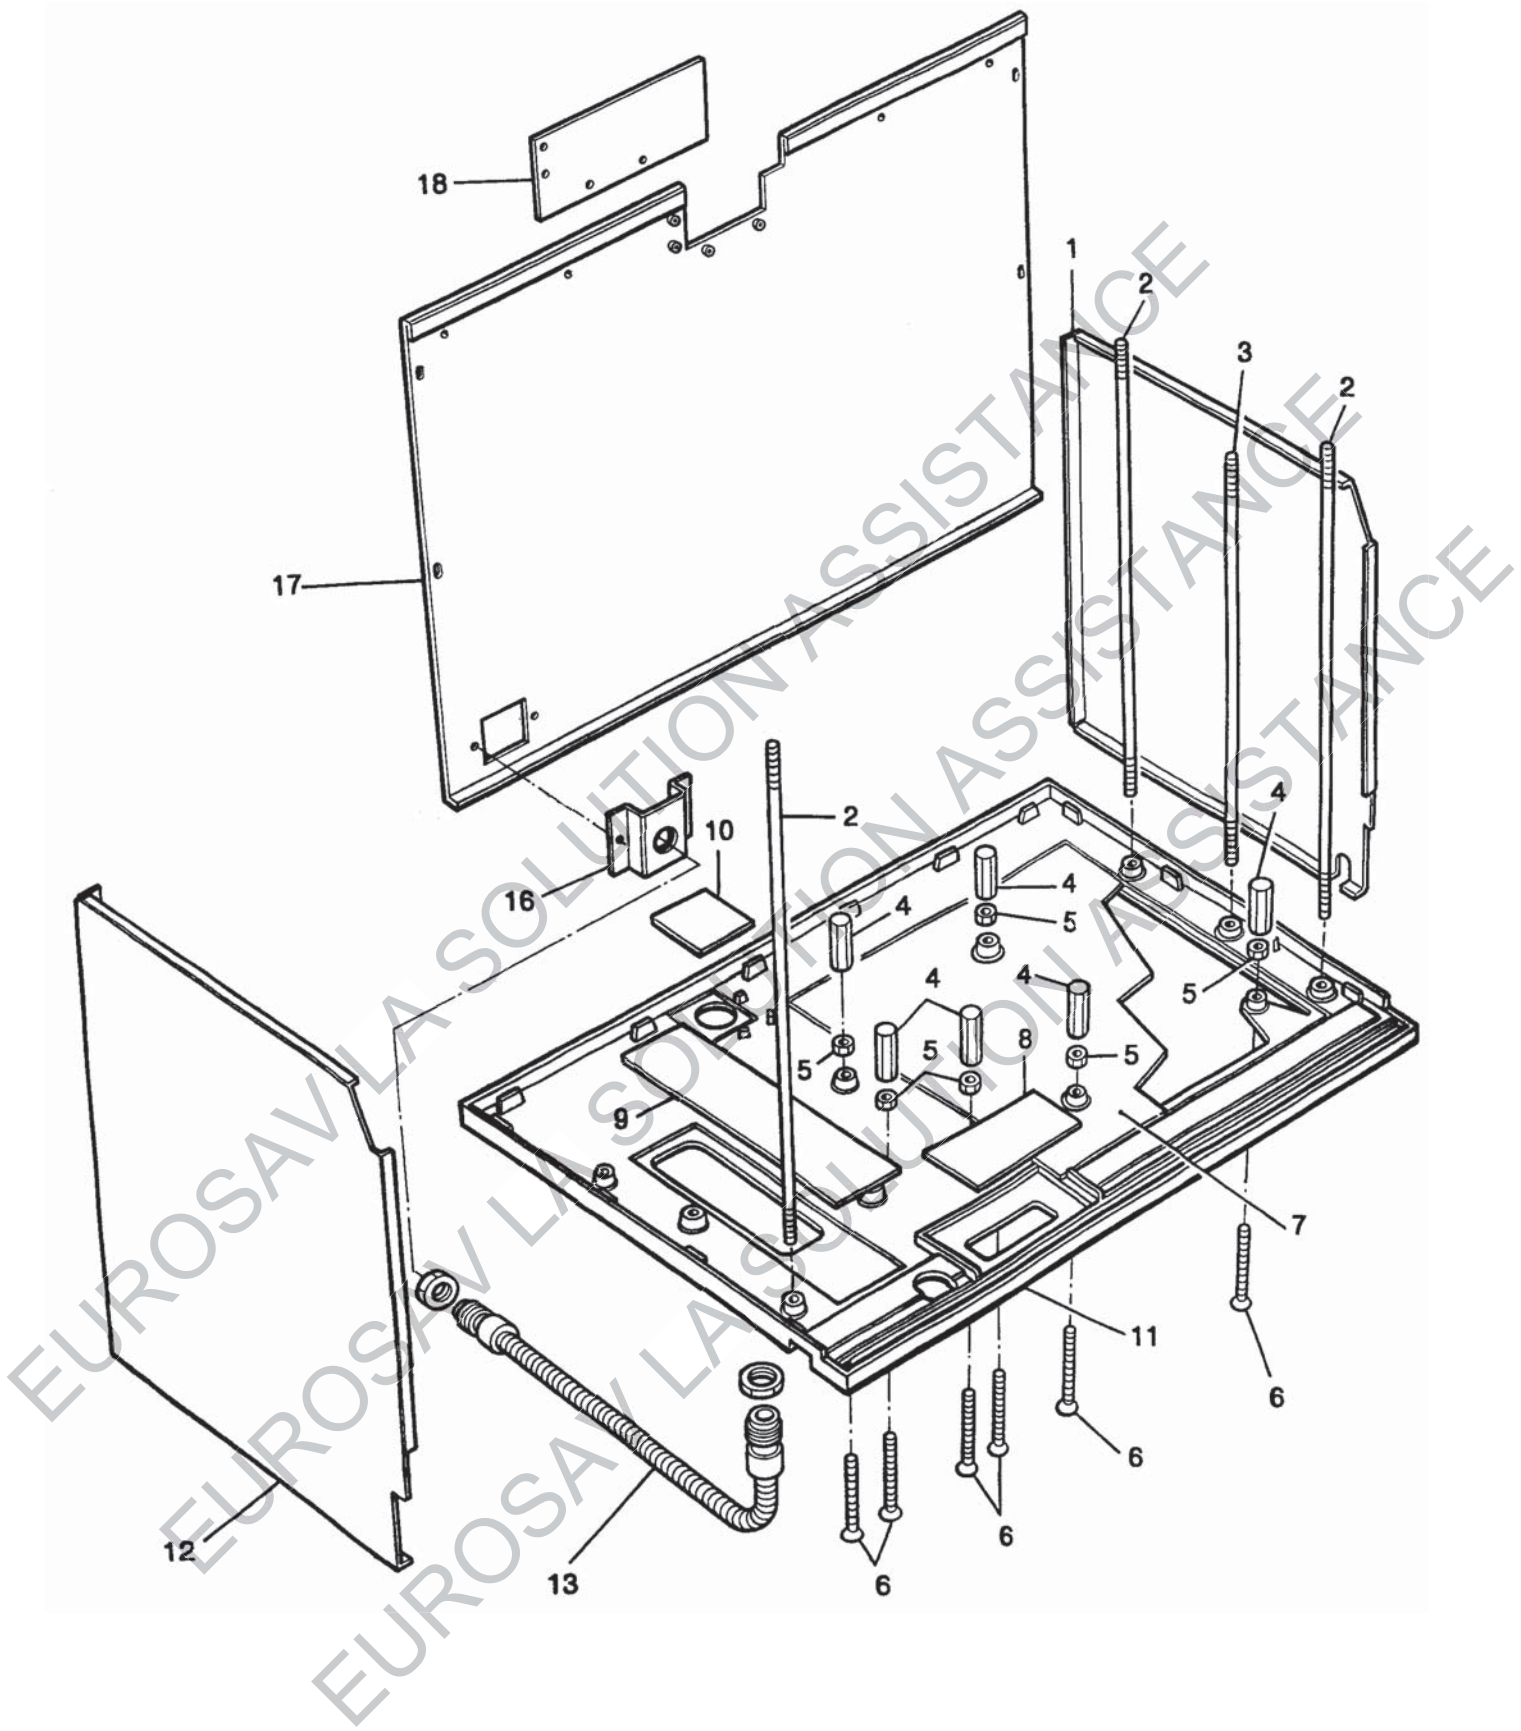


AGA ELECTRIC AIMS - EC COOKER
BASE, SIDES AND BACKPLATE

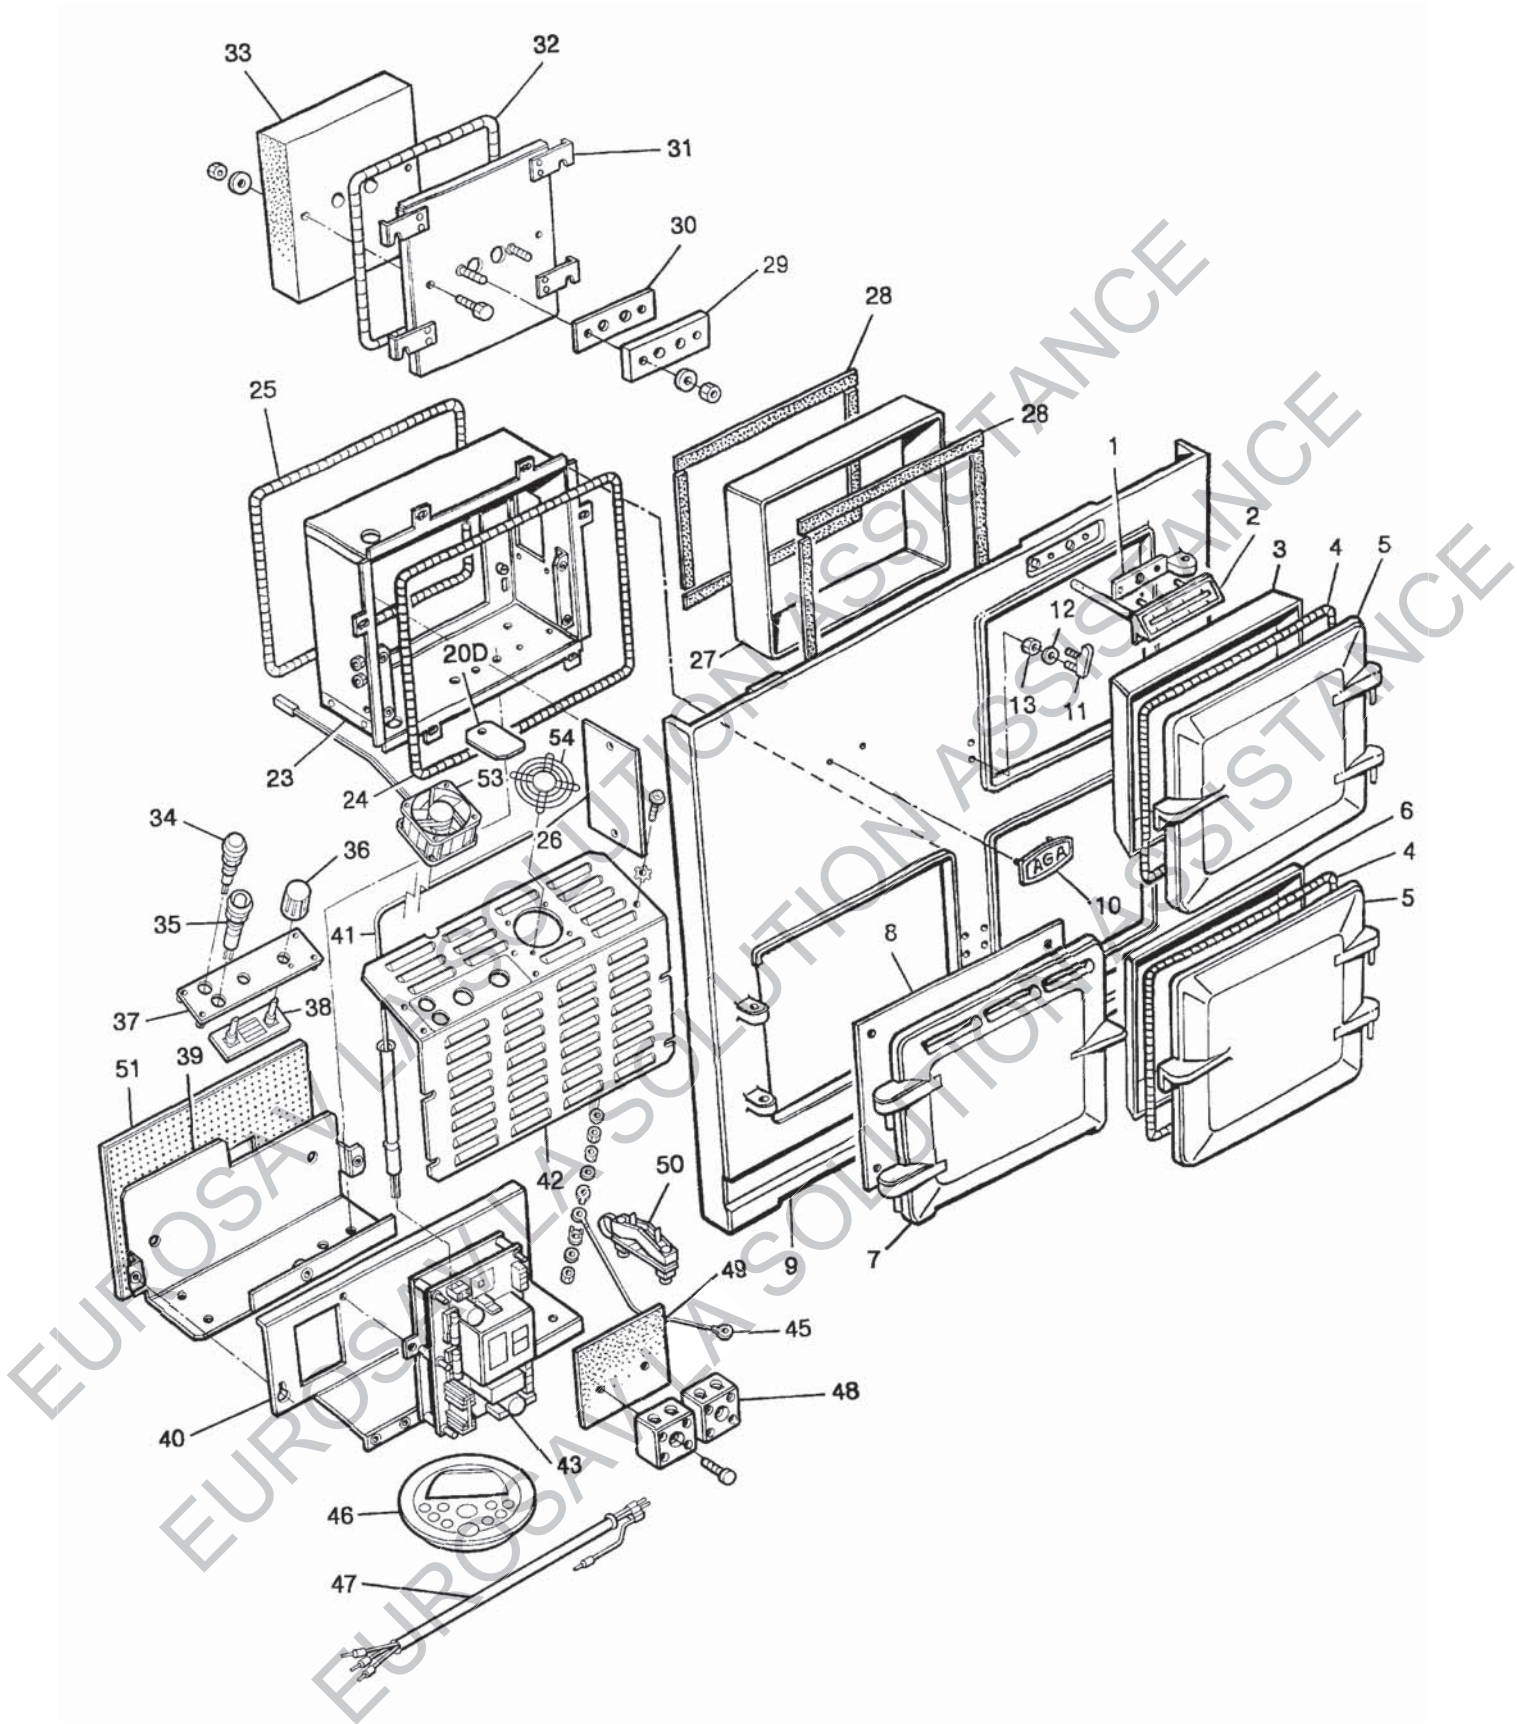


AGA ELECTRIC AIMS - EC COOKER
FRONT PLATE & DOORS

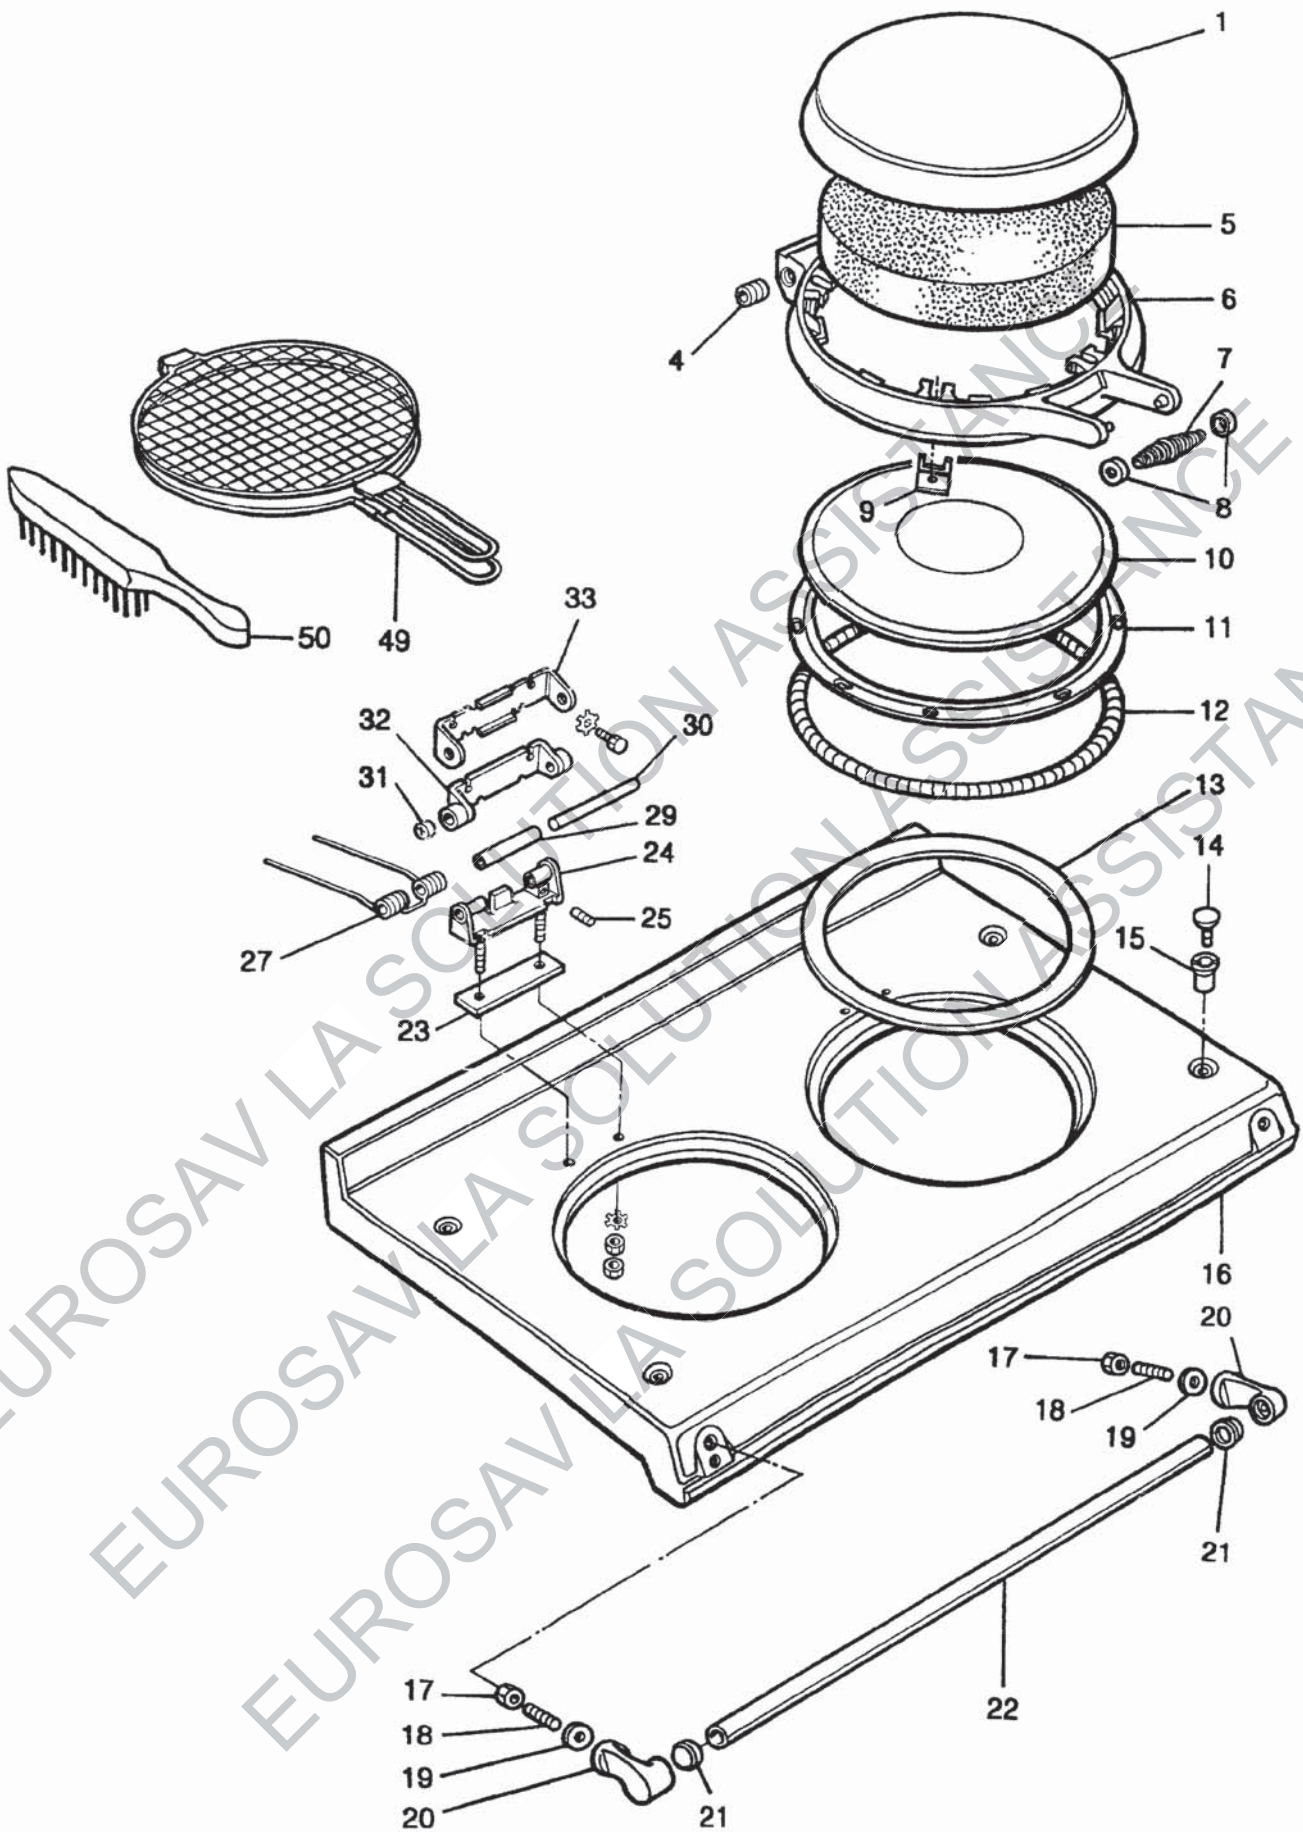


AGA ELECTRIC AIMS - EC COOKER
 TOP PLATE, INSULATING LIDS, SHROUD, WIRING ASSY

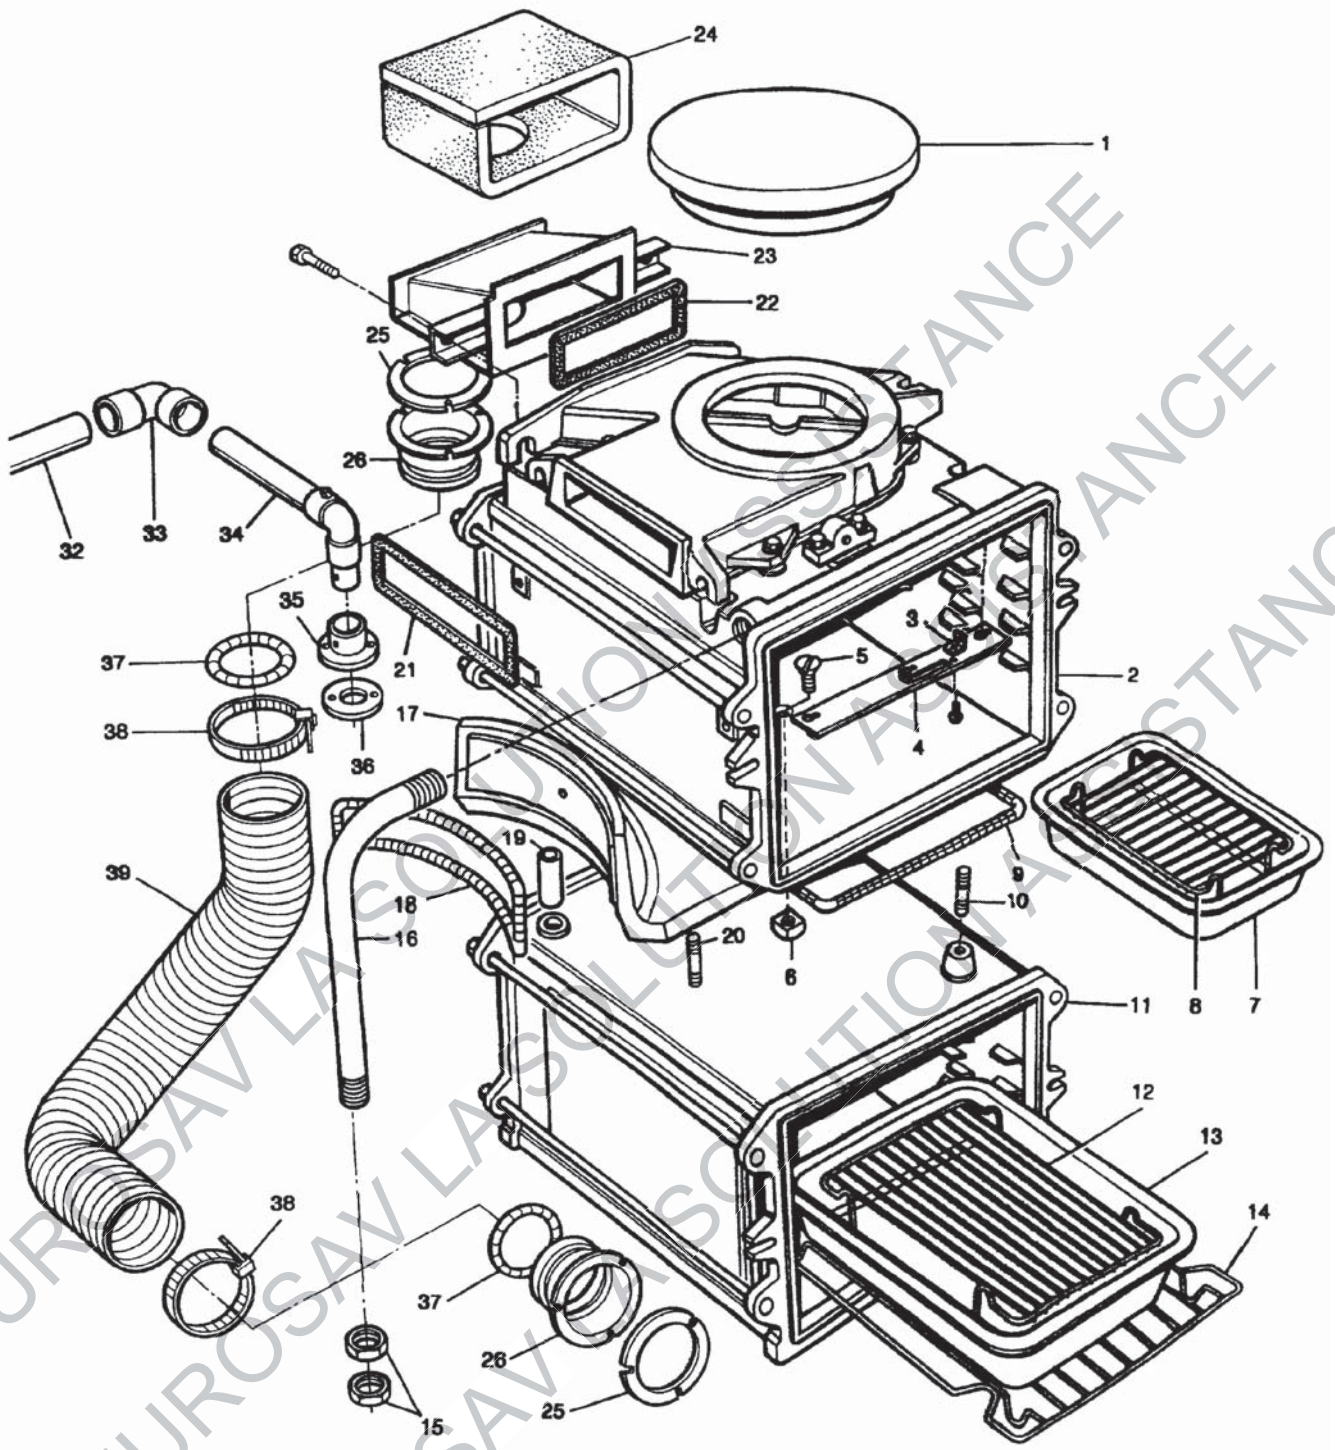


AGA ELECTRIC AIMS - EC COOKER
 OVENS, ACCESSORIES, SIMMERING PLATE

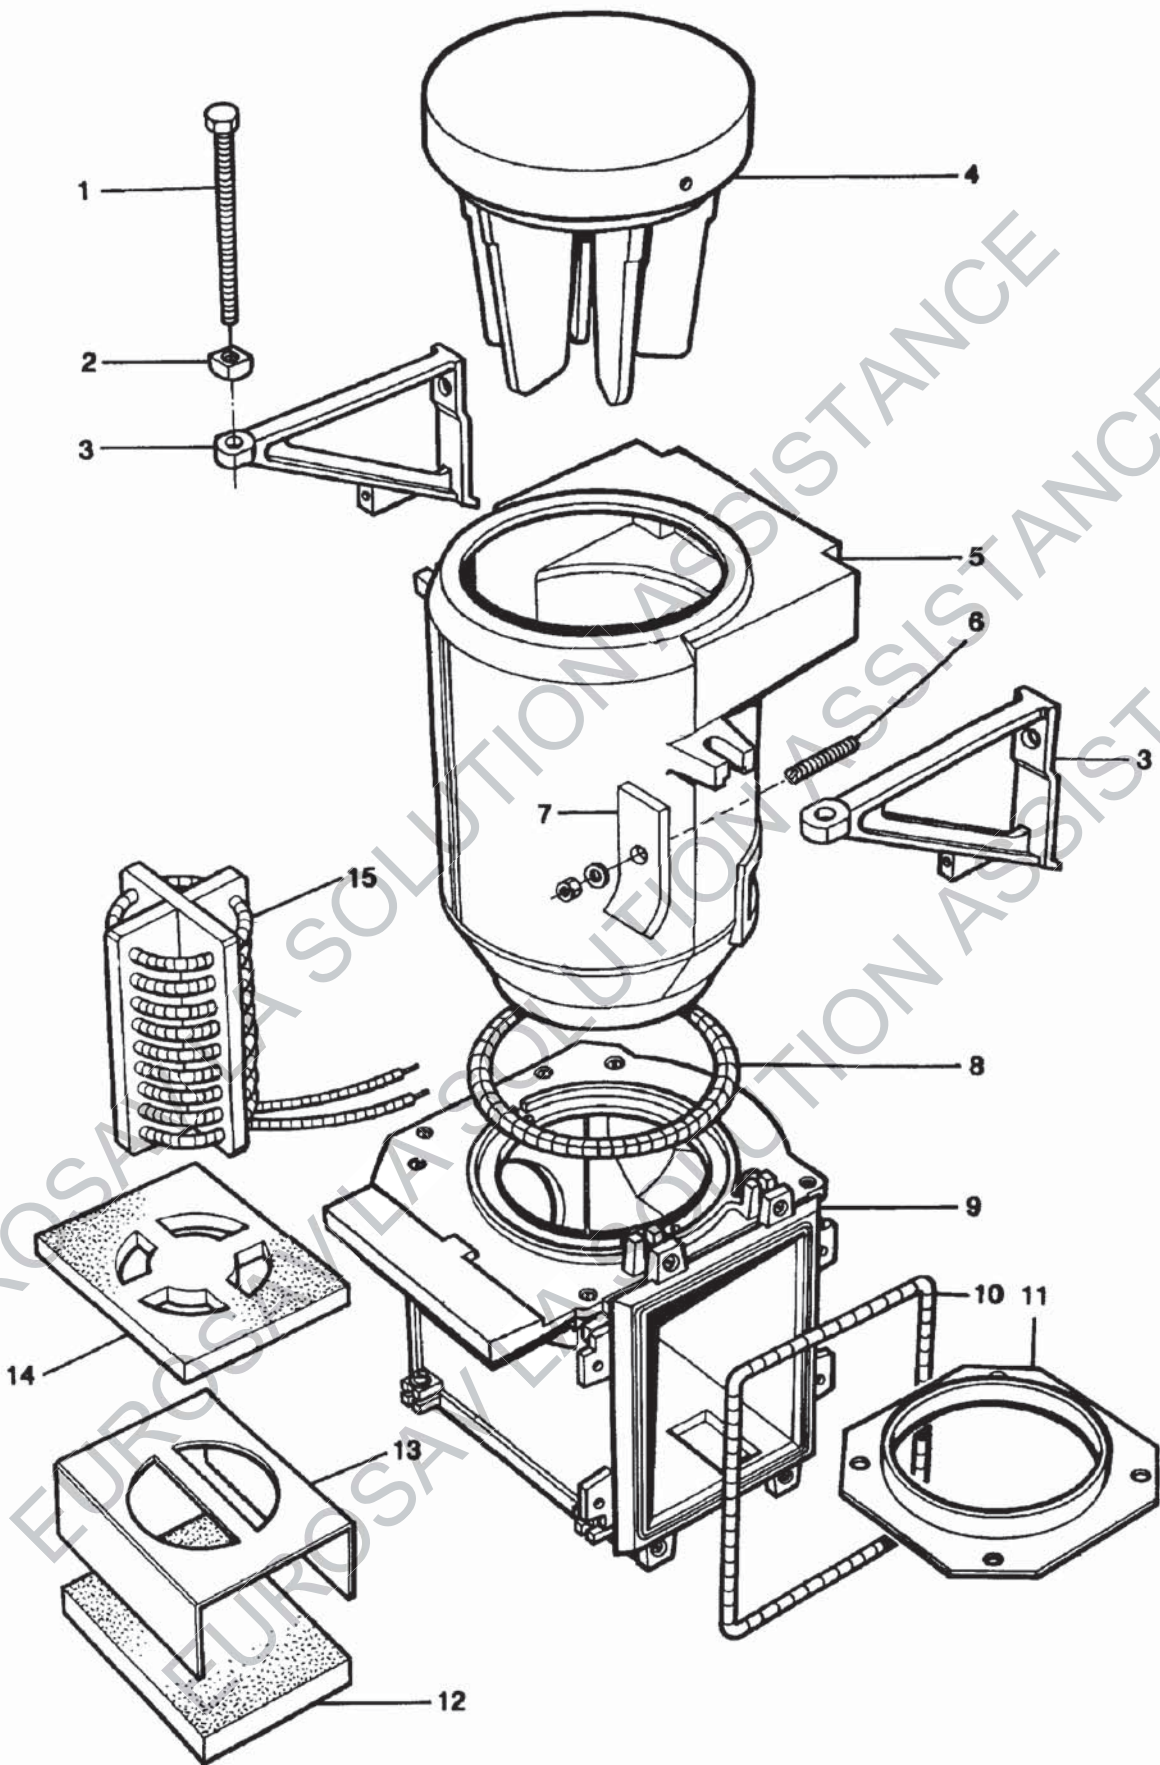


AGA ELECTRIC AIMS - EC COOKER
HOTSPOT, FIRE BARREL & CHAMBER ASSEMBLY

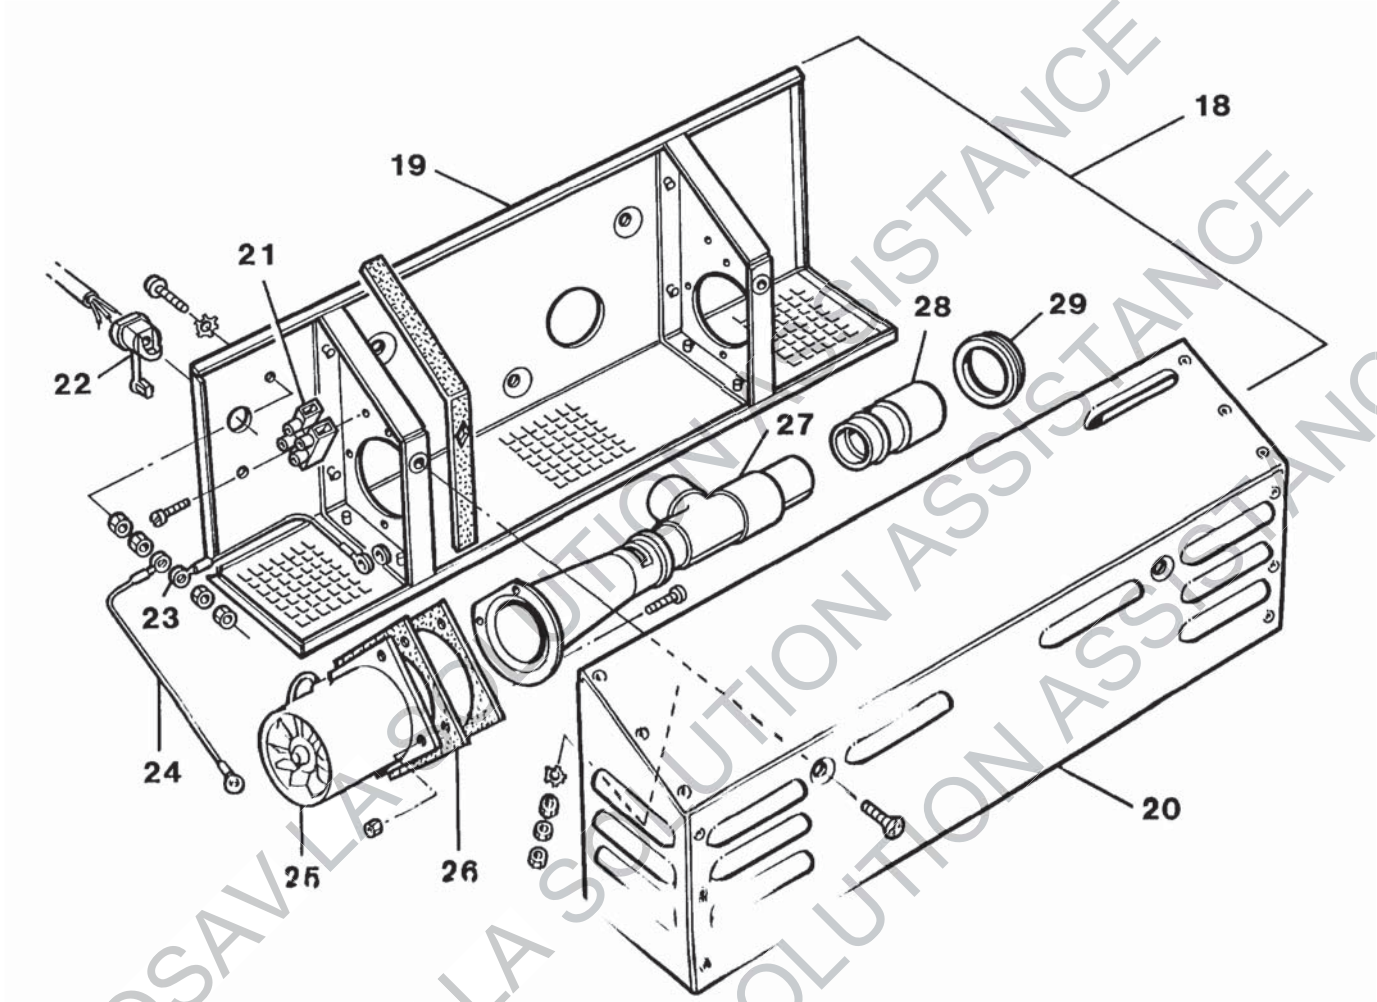

AGA ELECTRIC AIMS - EC COOKER
OVEN VENT FAN ASSY - UP TO M08-003

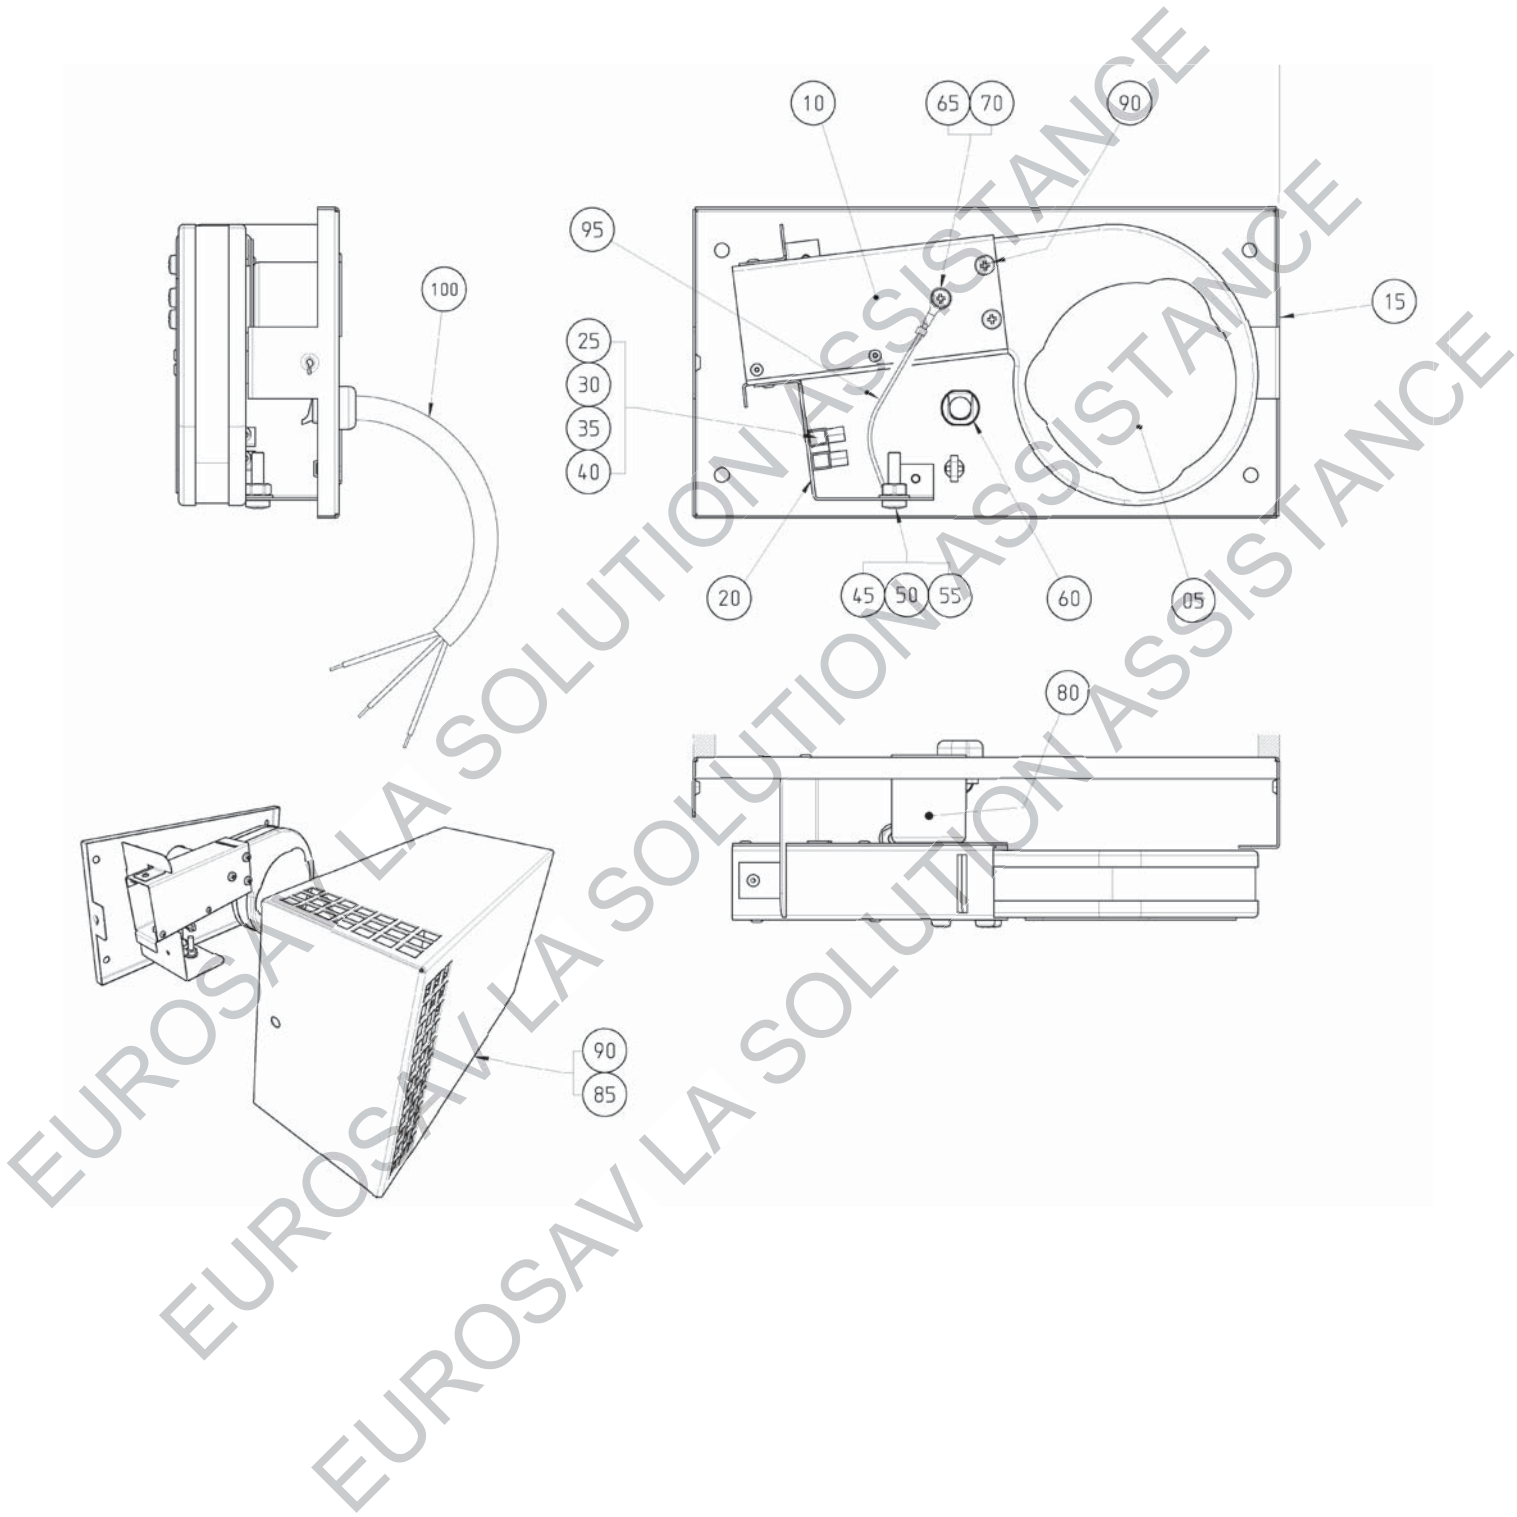

AGA ELECTRIC AIMS - EC COOKER
OVEN VENTING FAN ASSY - FROM M08-003 TO M08-174

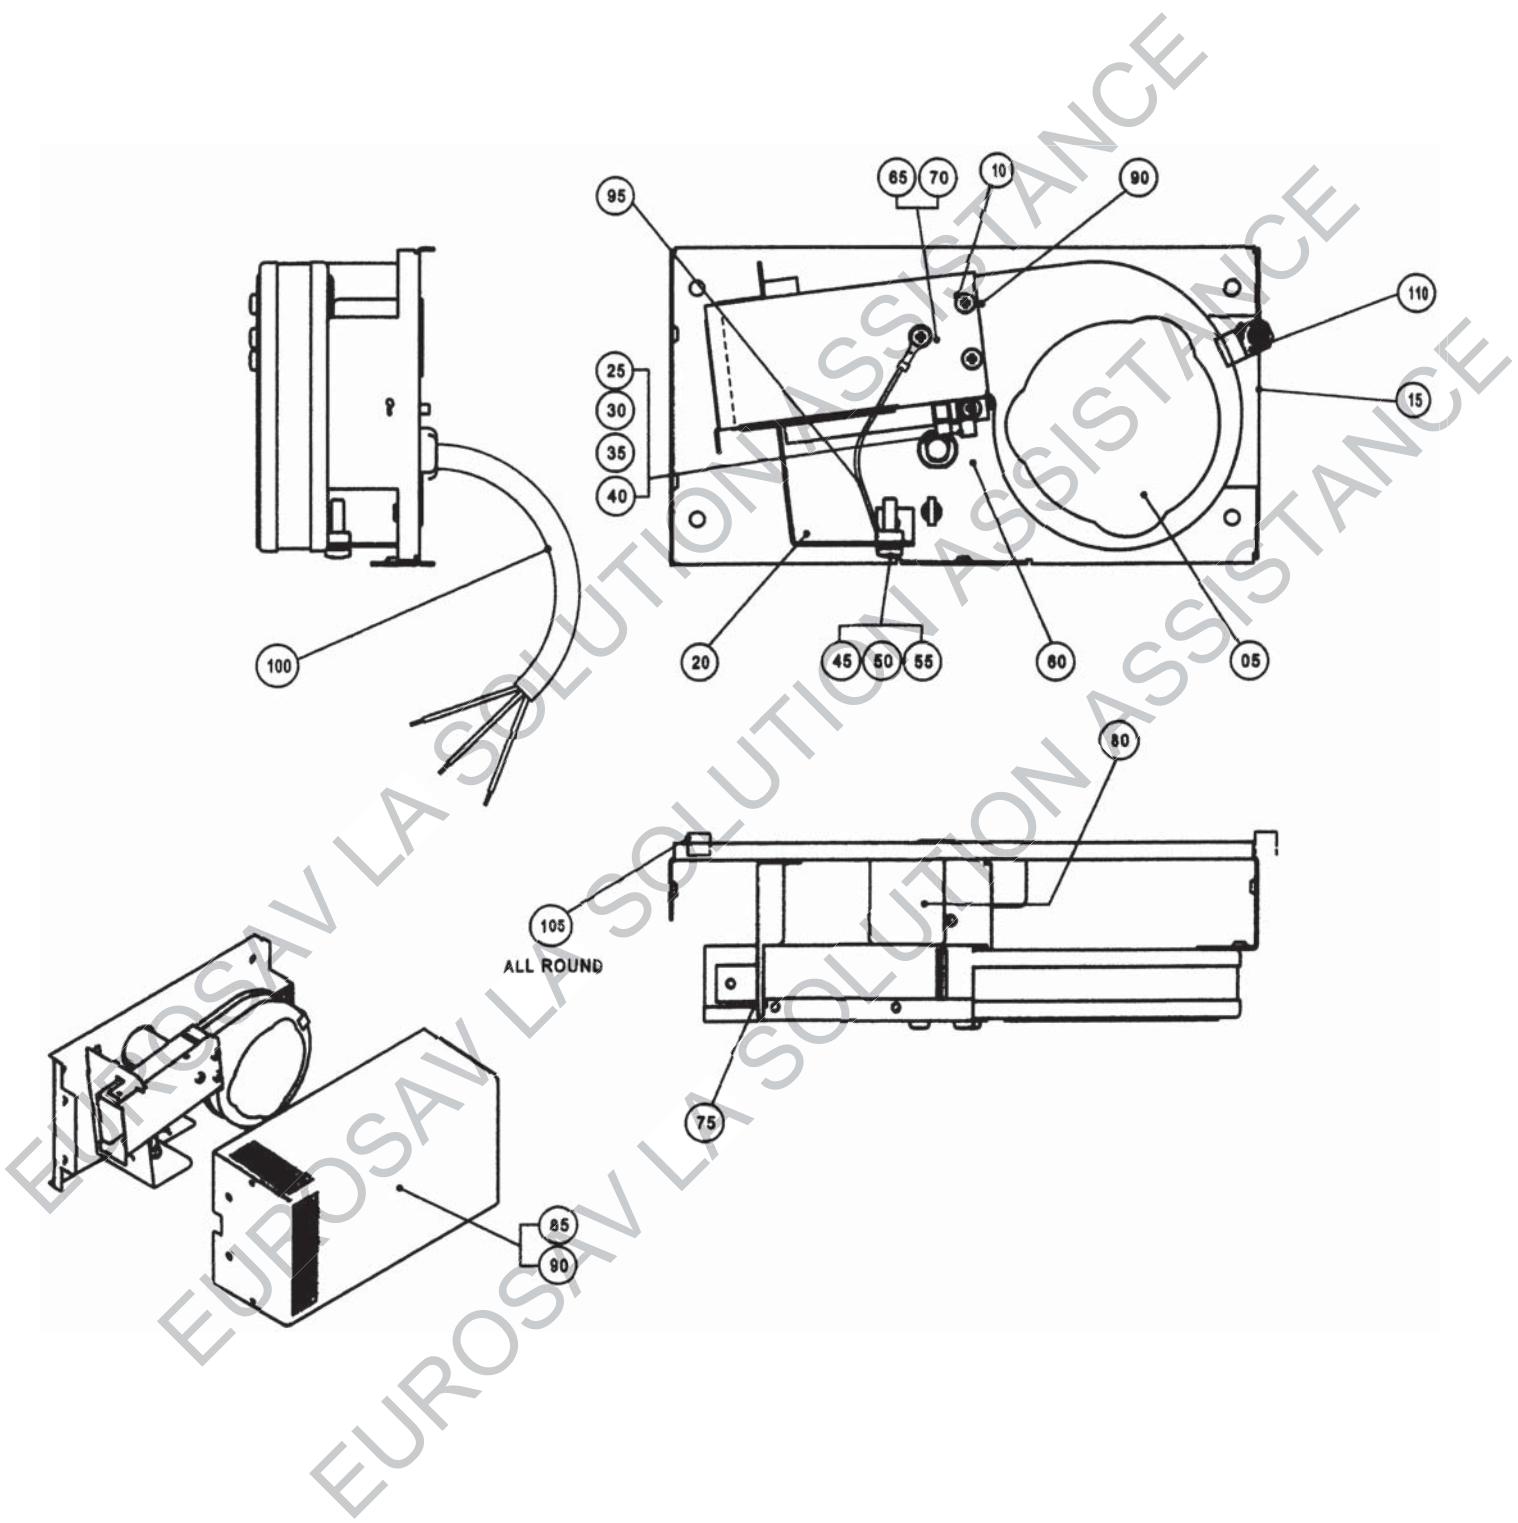

AGA ELECTRIC AIMS - EC COOKER
OVEN VENTING FAN ASSY - FROM M08-174