

 
**LECKFORD DELUXE 90 DF FSD**

**DSL0790 P00**


ISSUE: 02

DATE: 02.10.2019











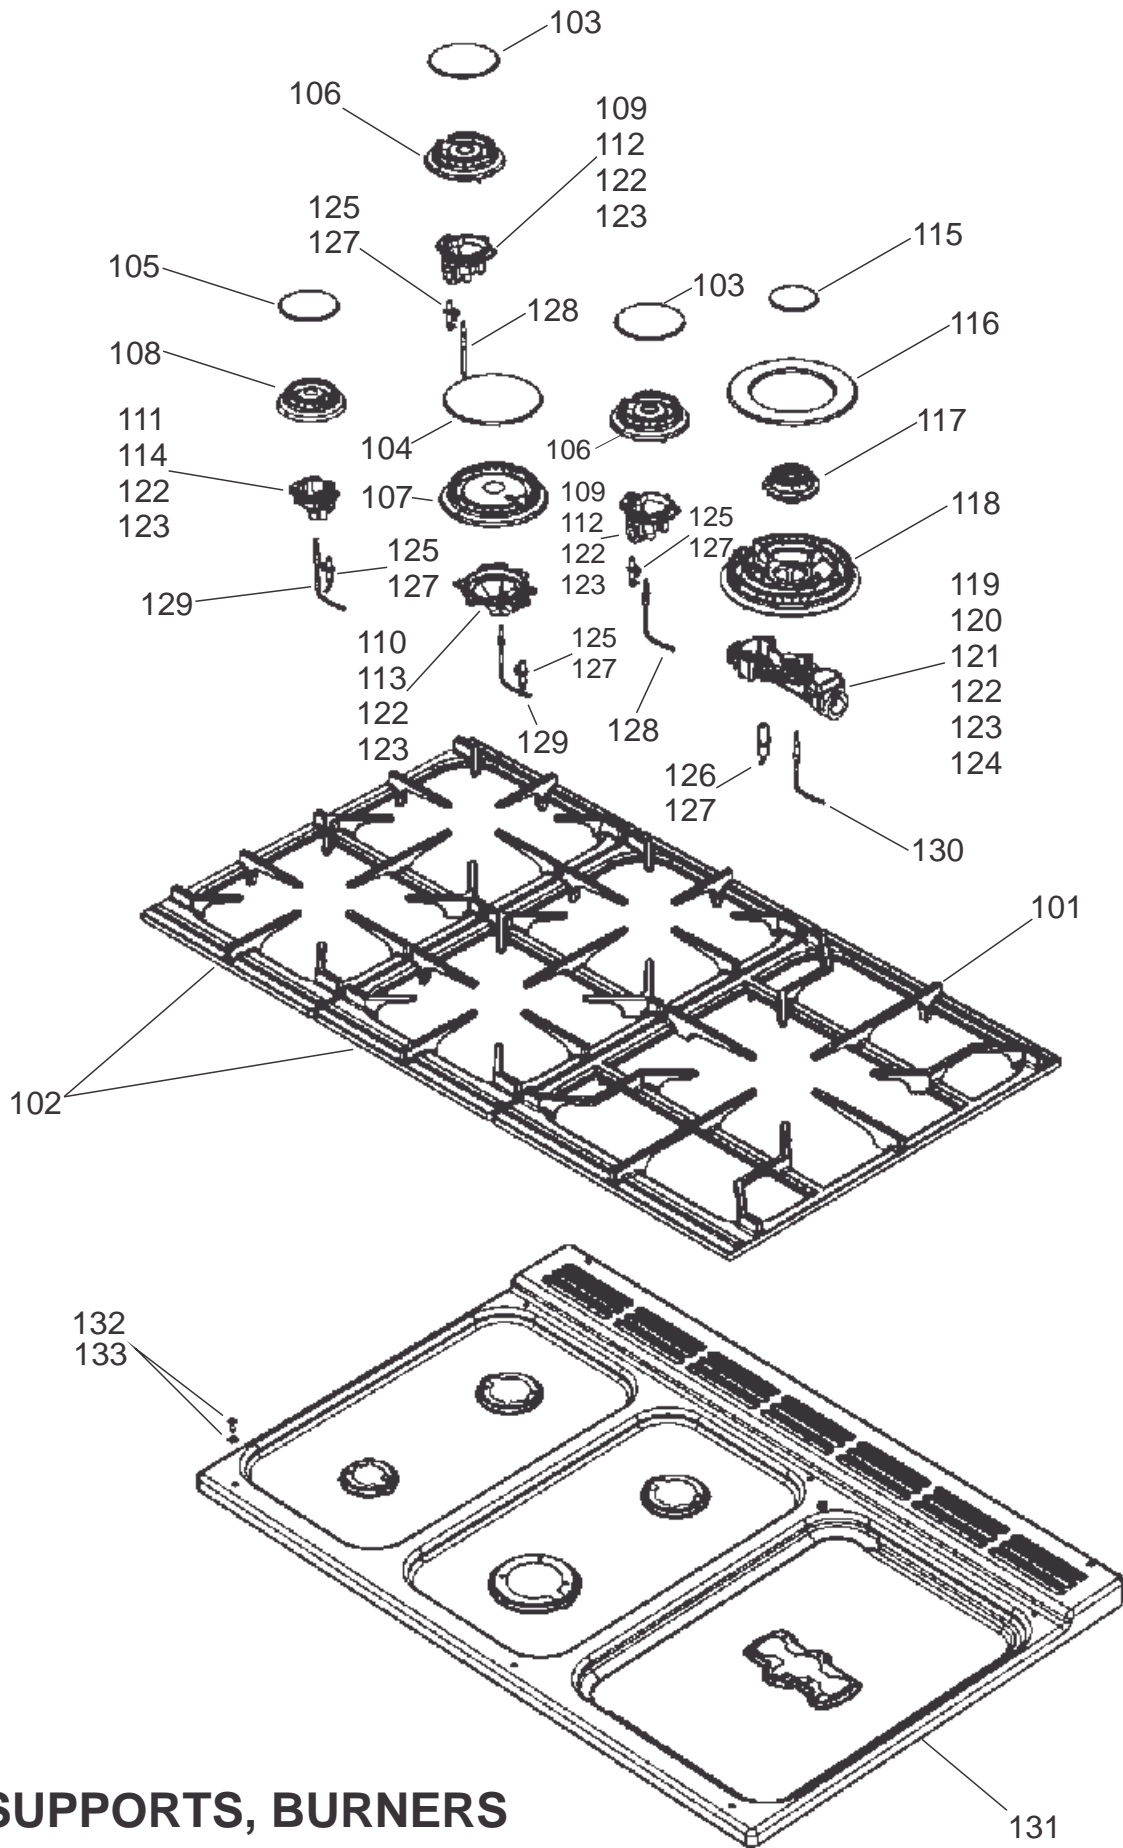


**PAN SUPPORTS, BURNERS AND HOTPLATE ASSEMBLY**

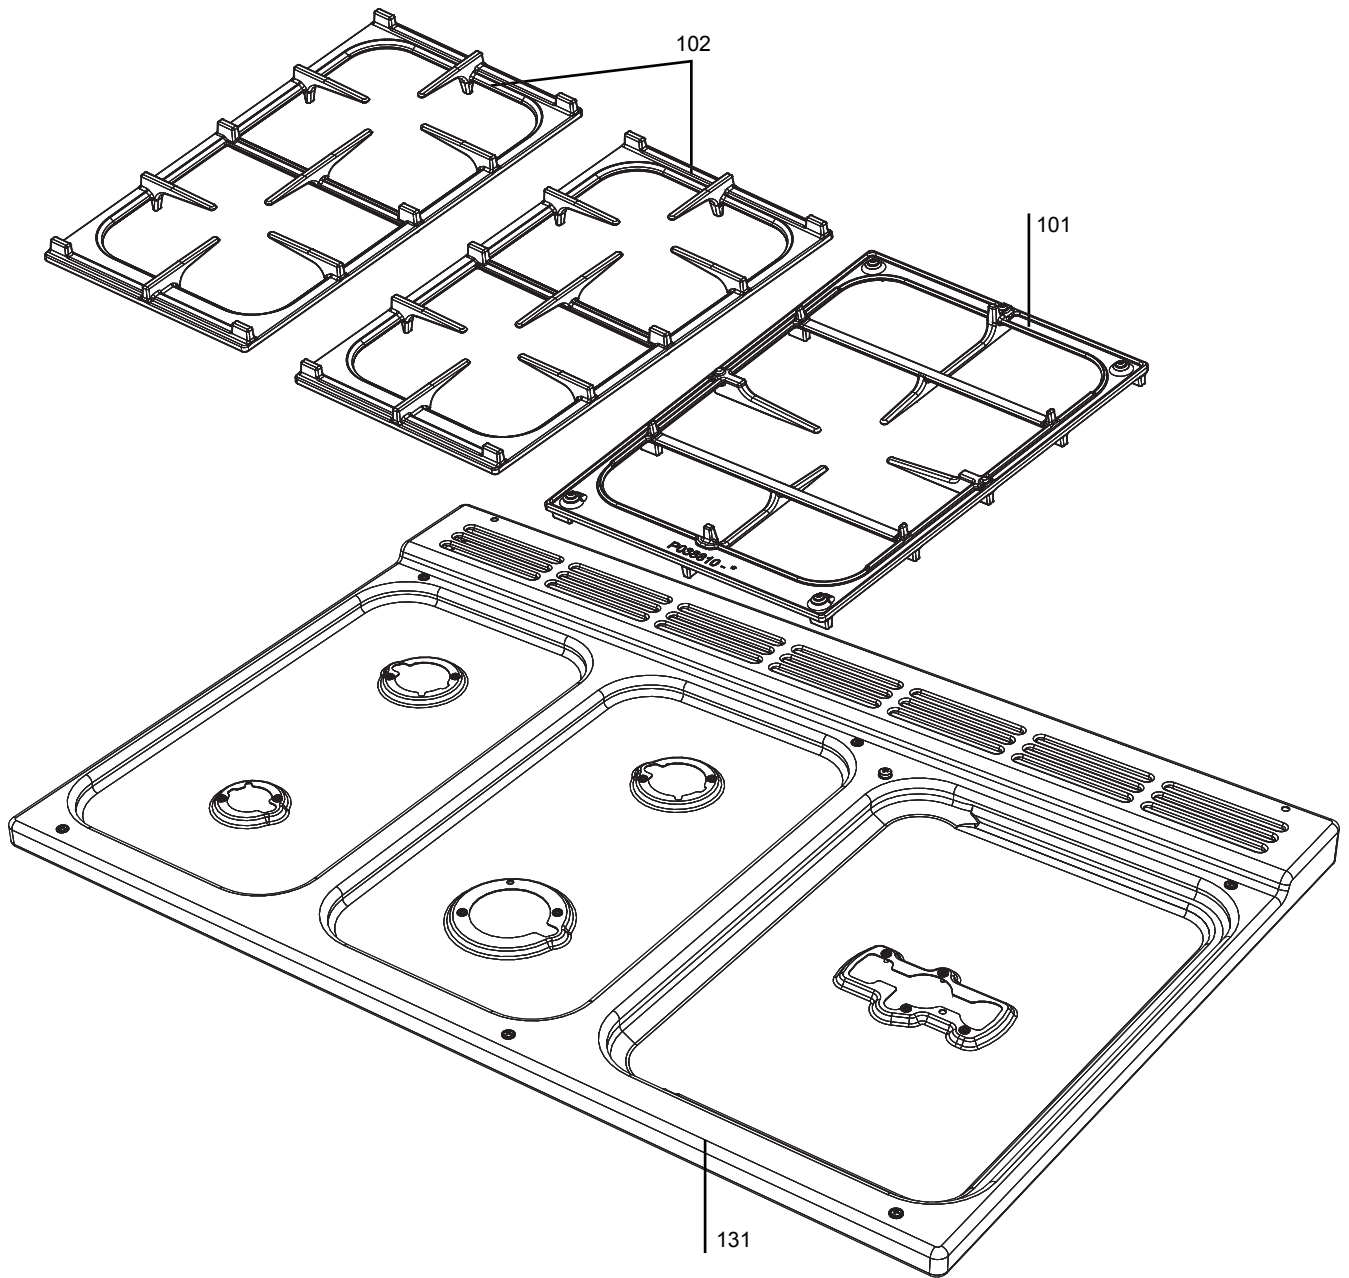 


## HOTPLATE ASSEMBLY

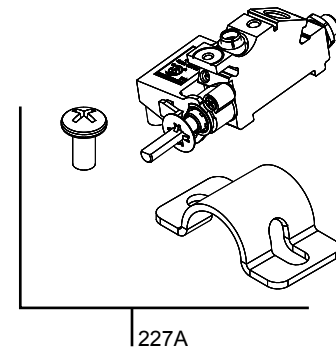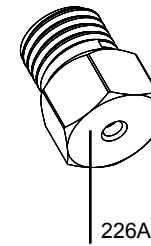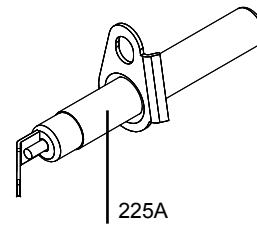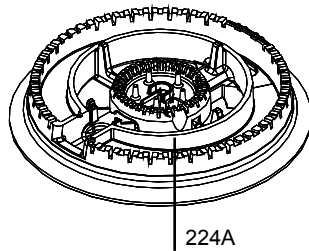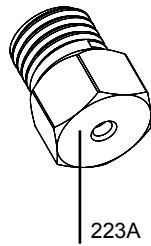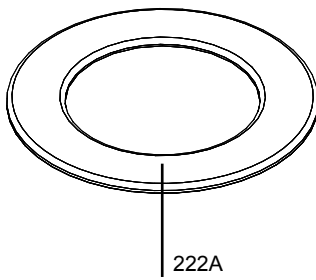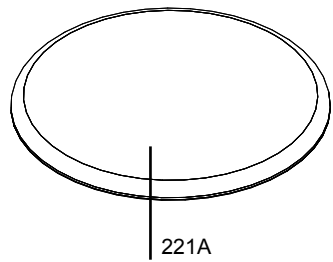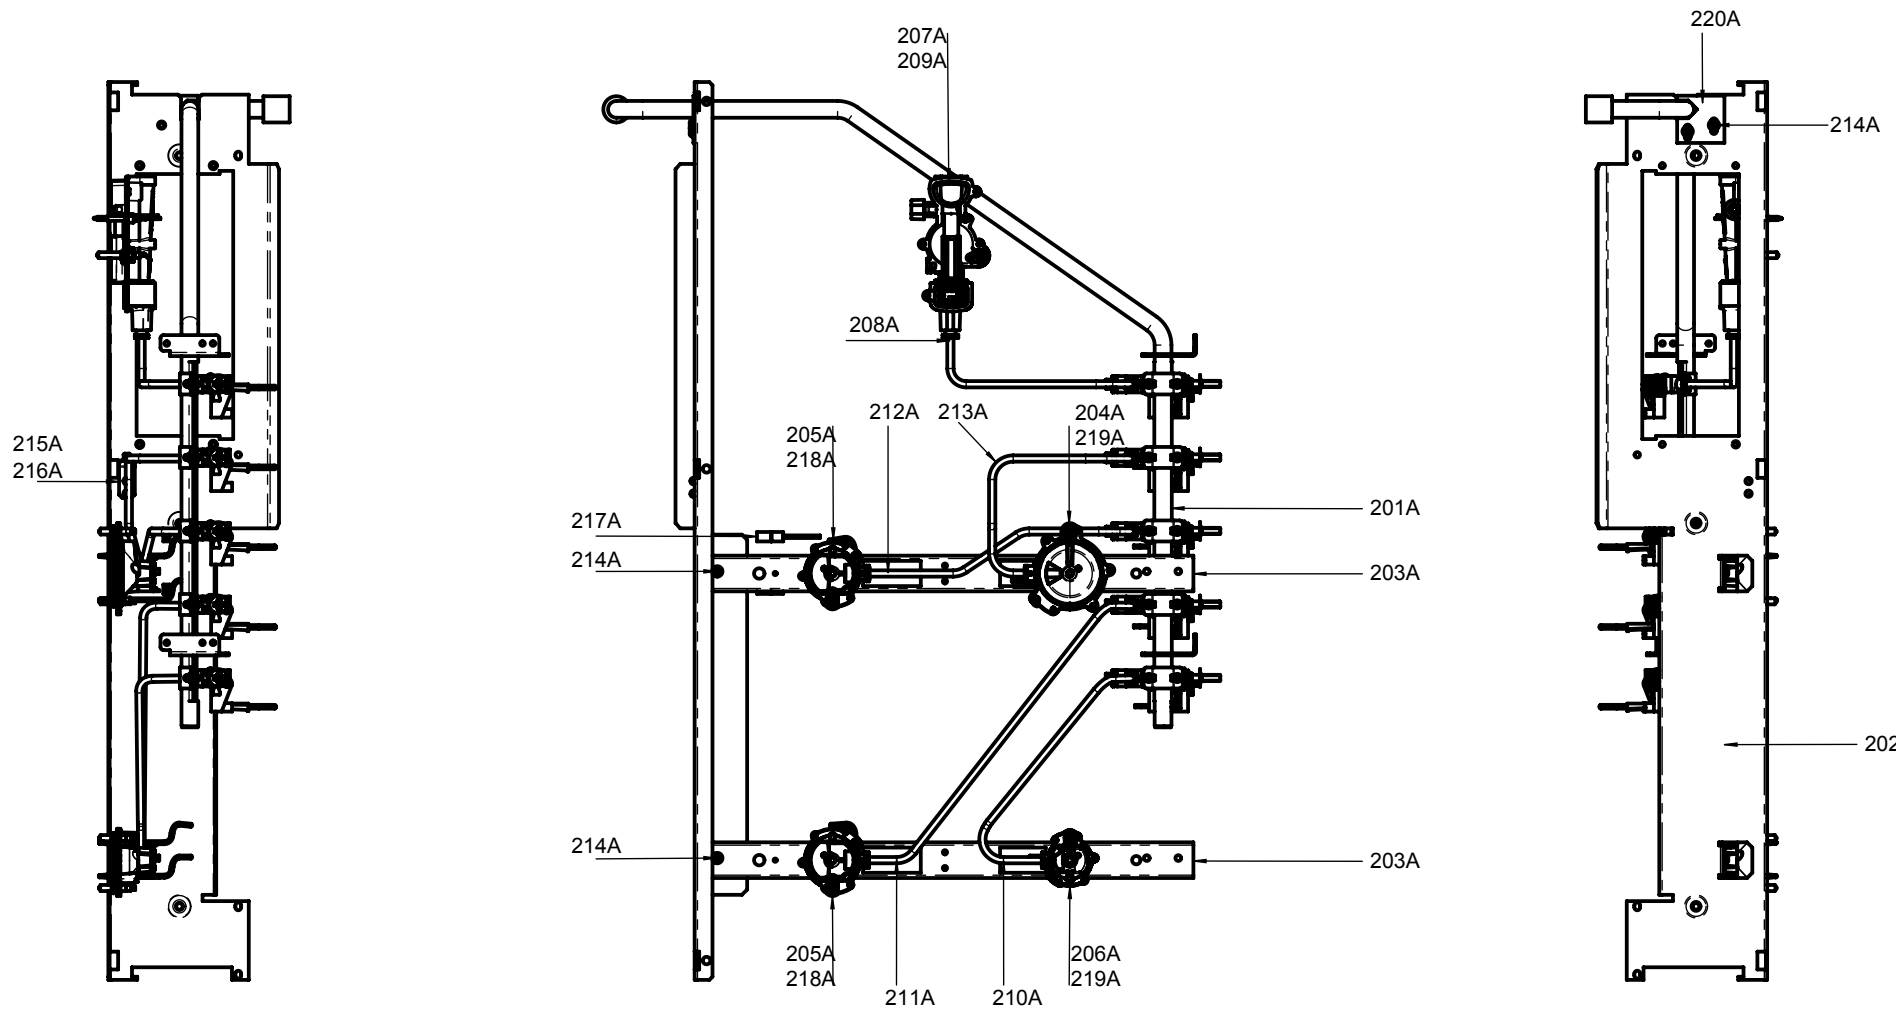        

# GAS RAIL ASSEMBLY

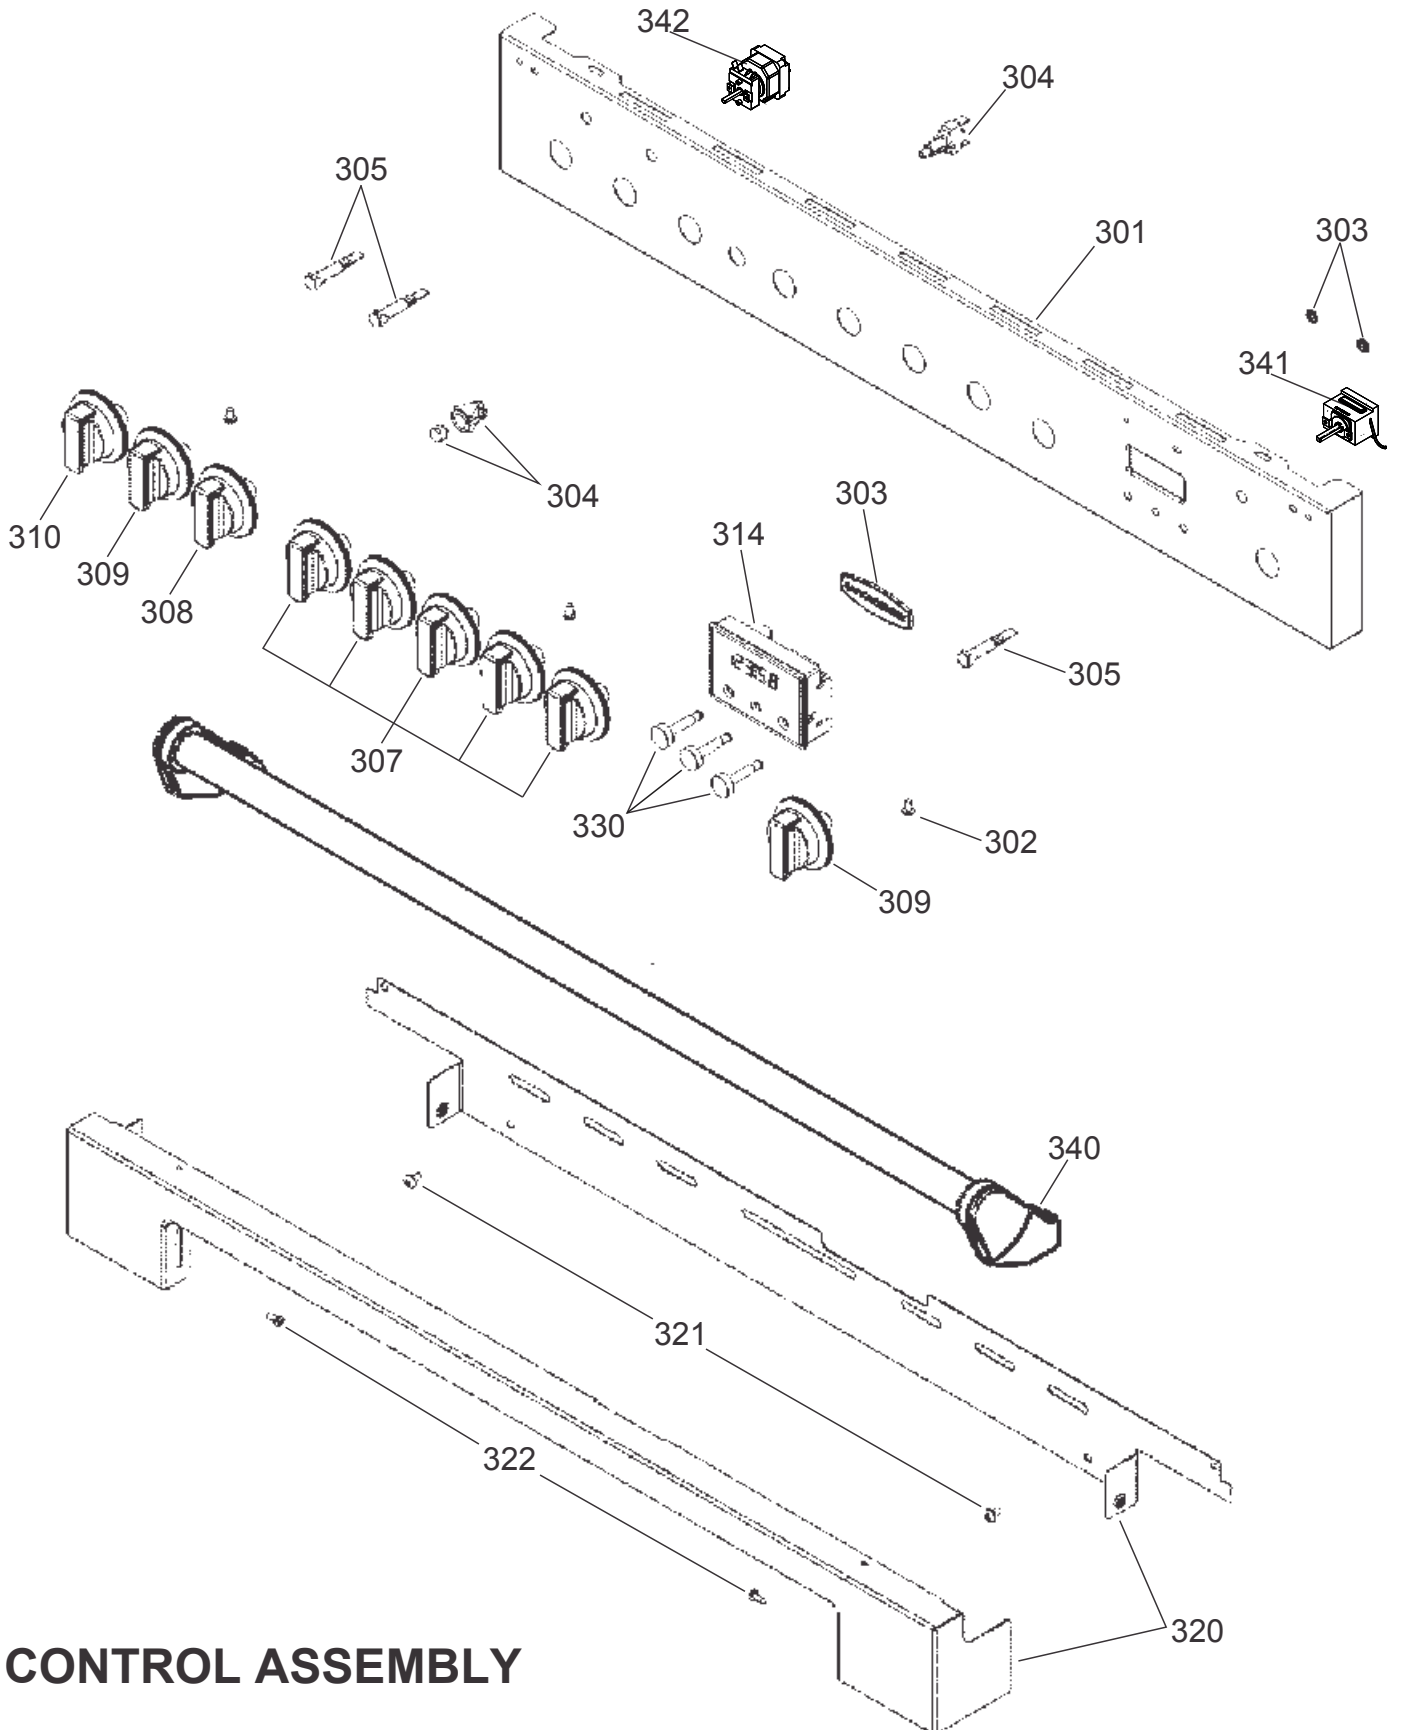 


CONTROL ASSEMBLY

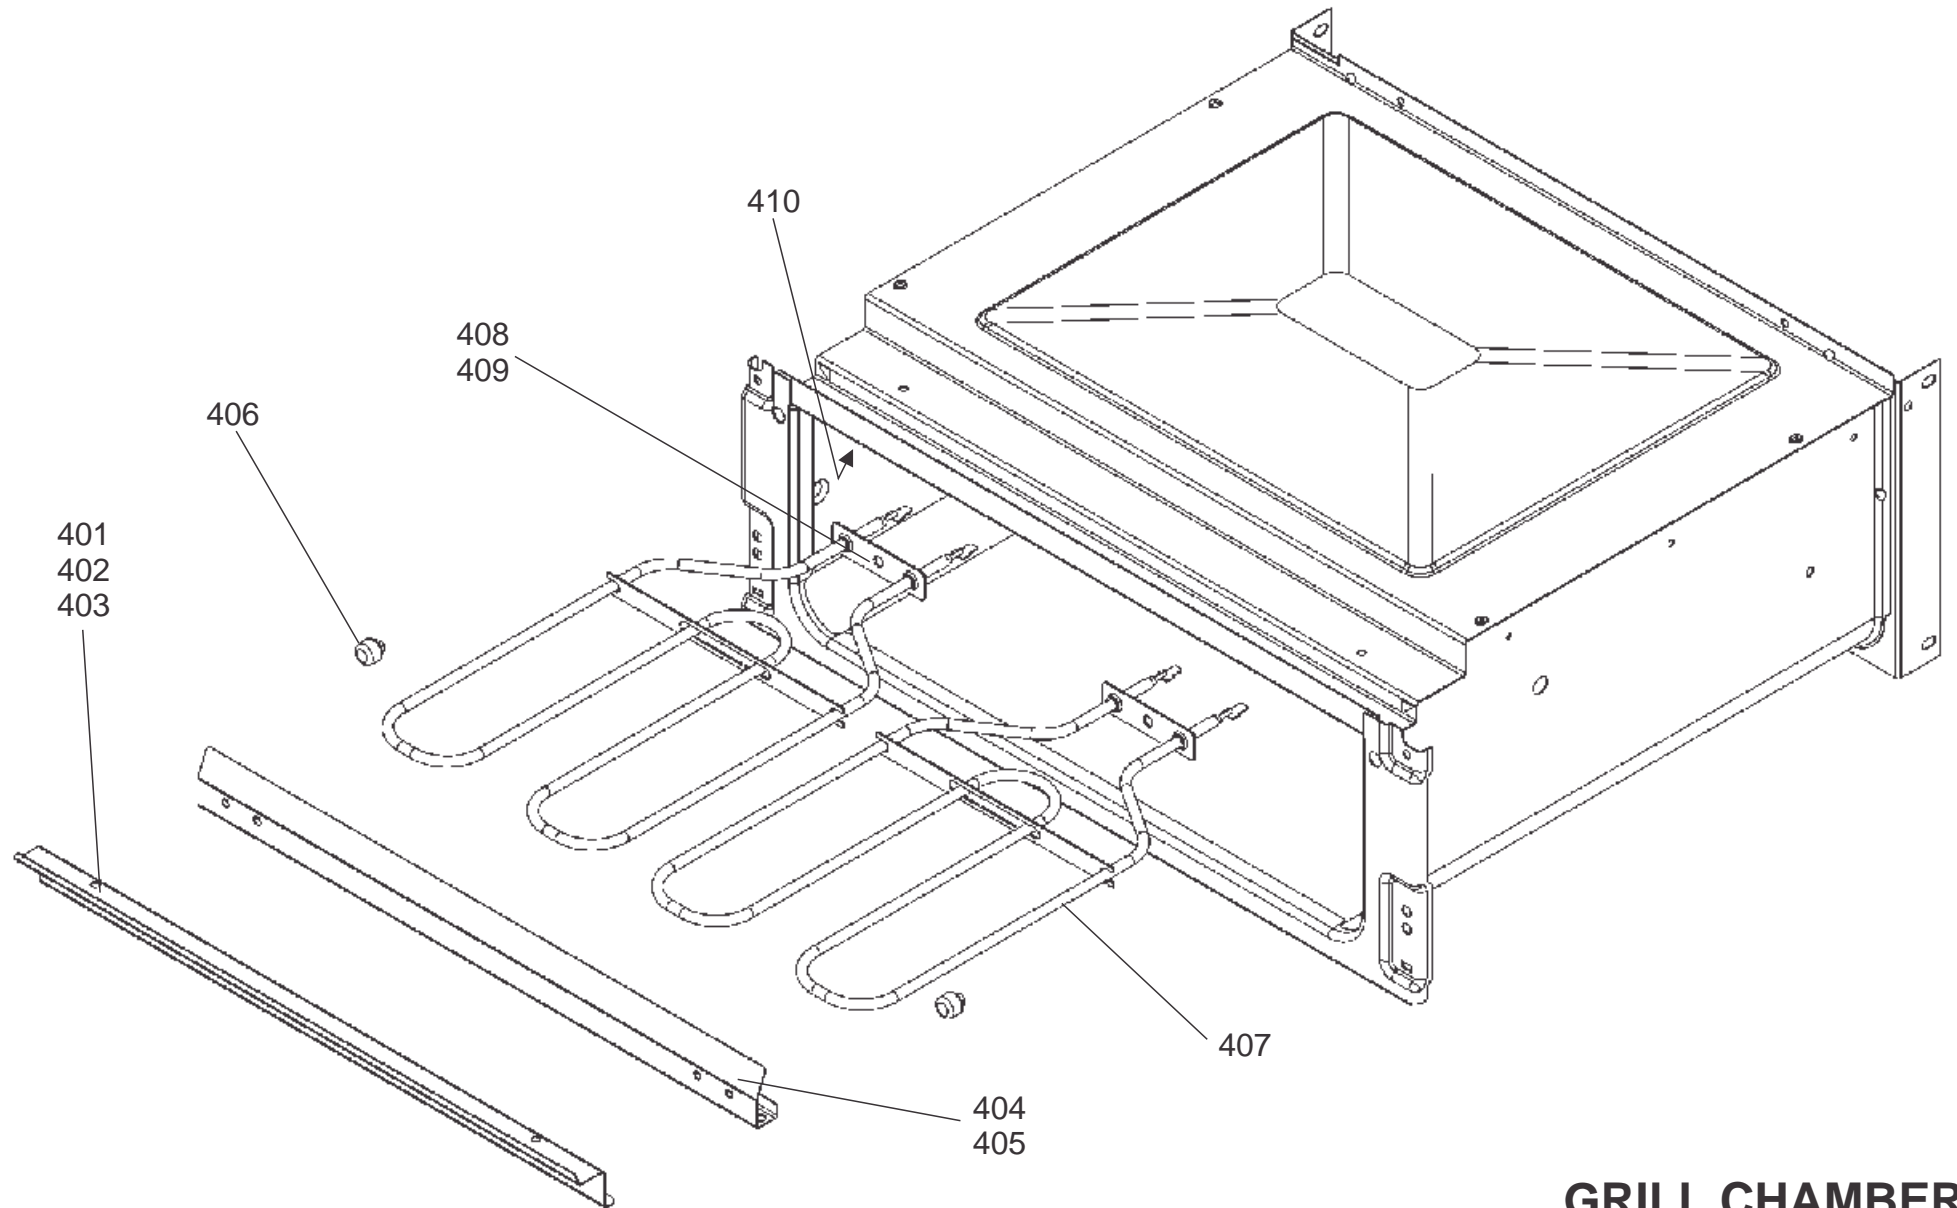 


**GRILL CHAMBER**



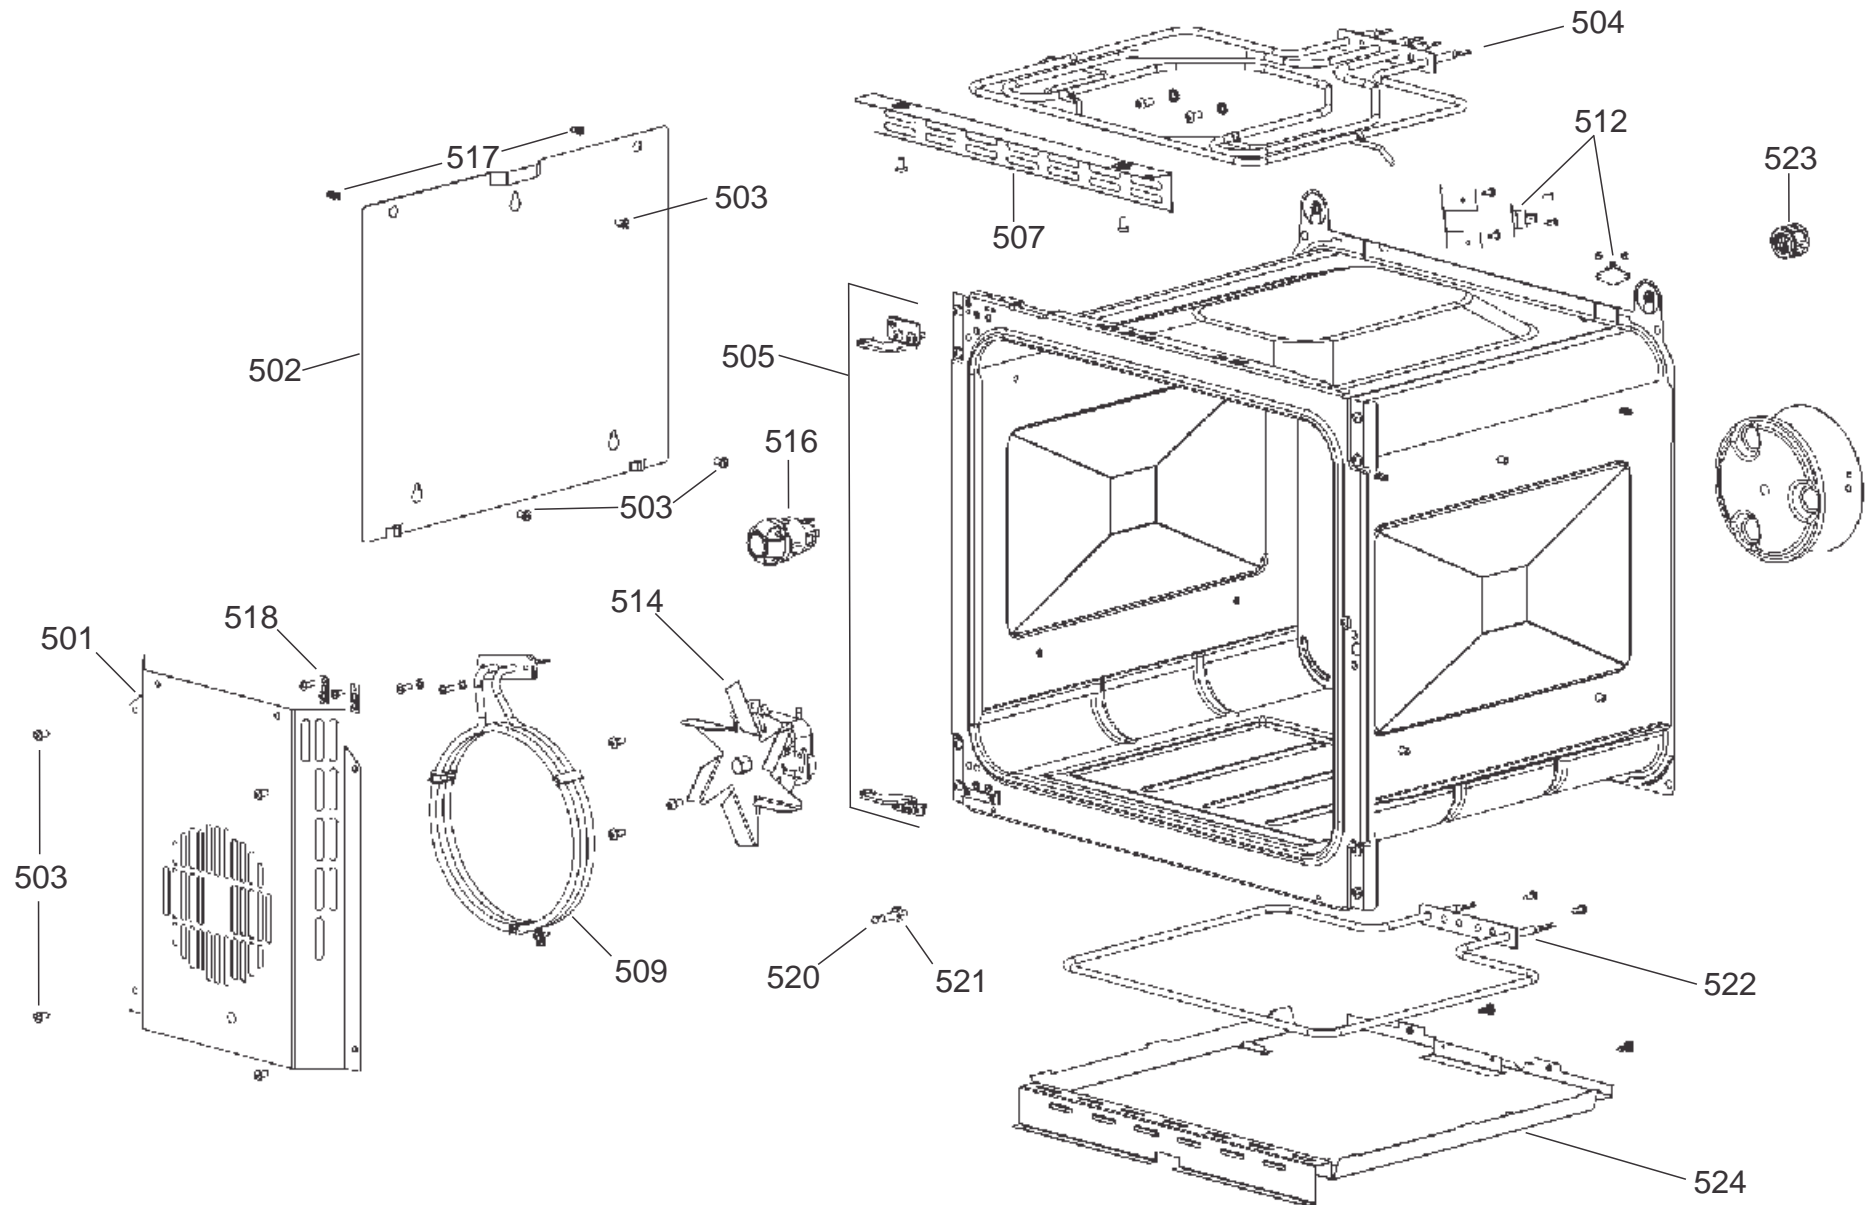 


LEFT HAND OVEN (MULTI-FUNCTION & LIGHT)

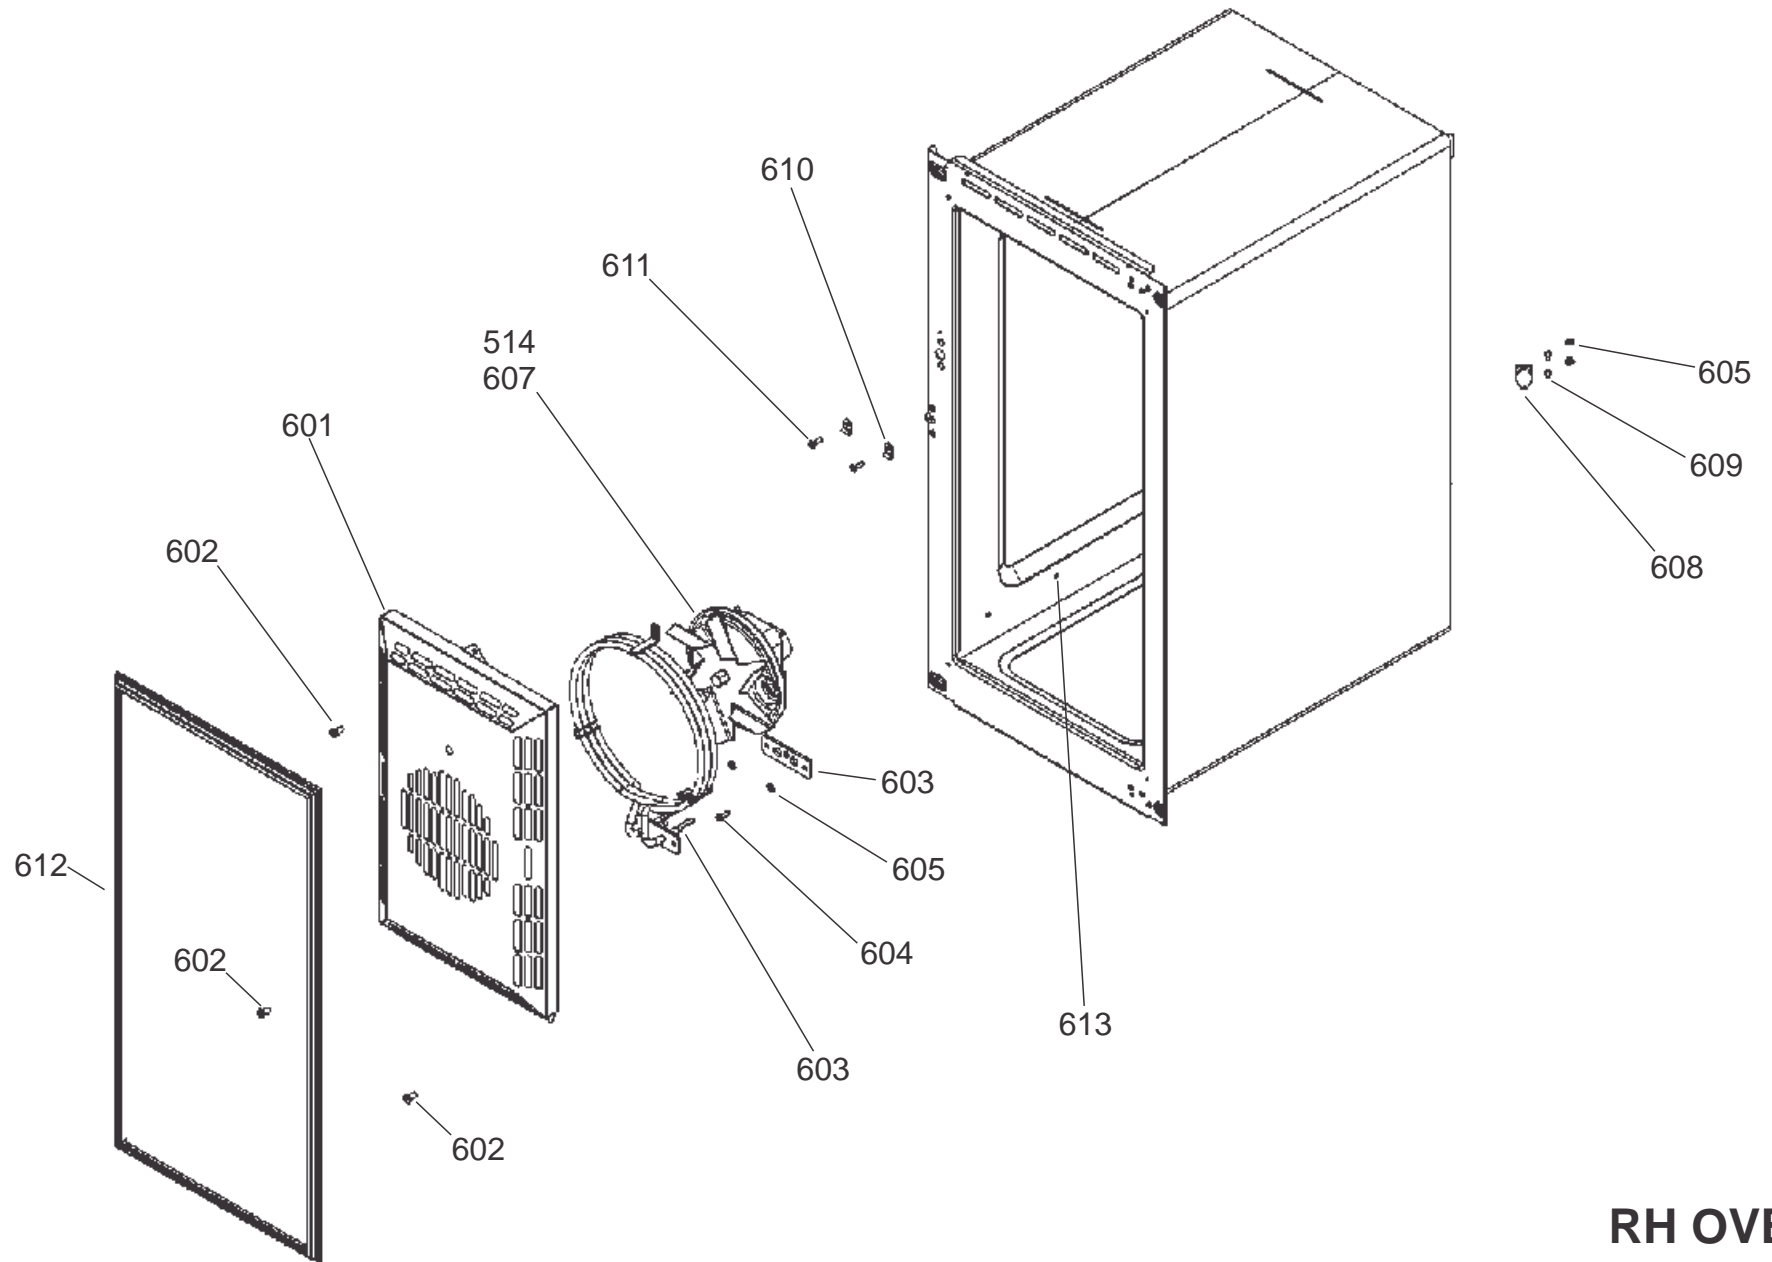 


**RH OVEN**




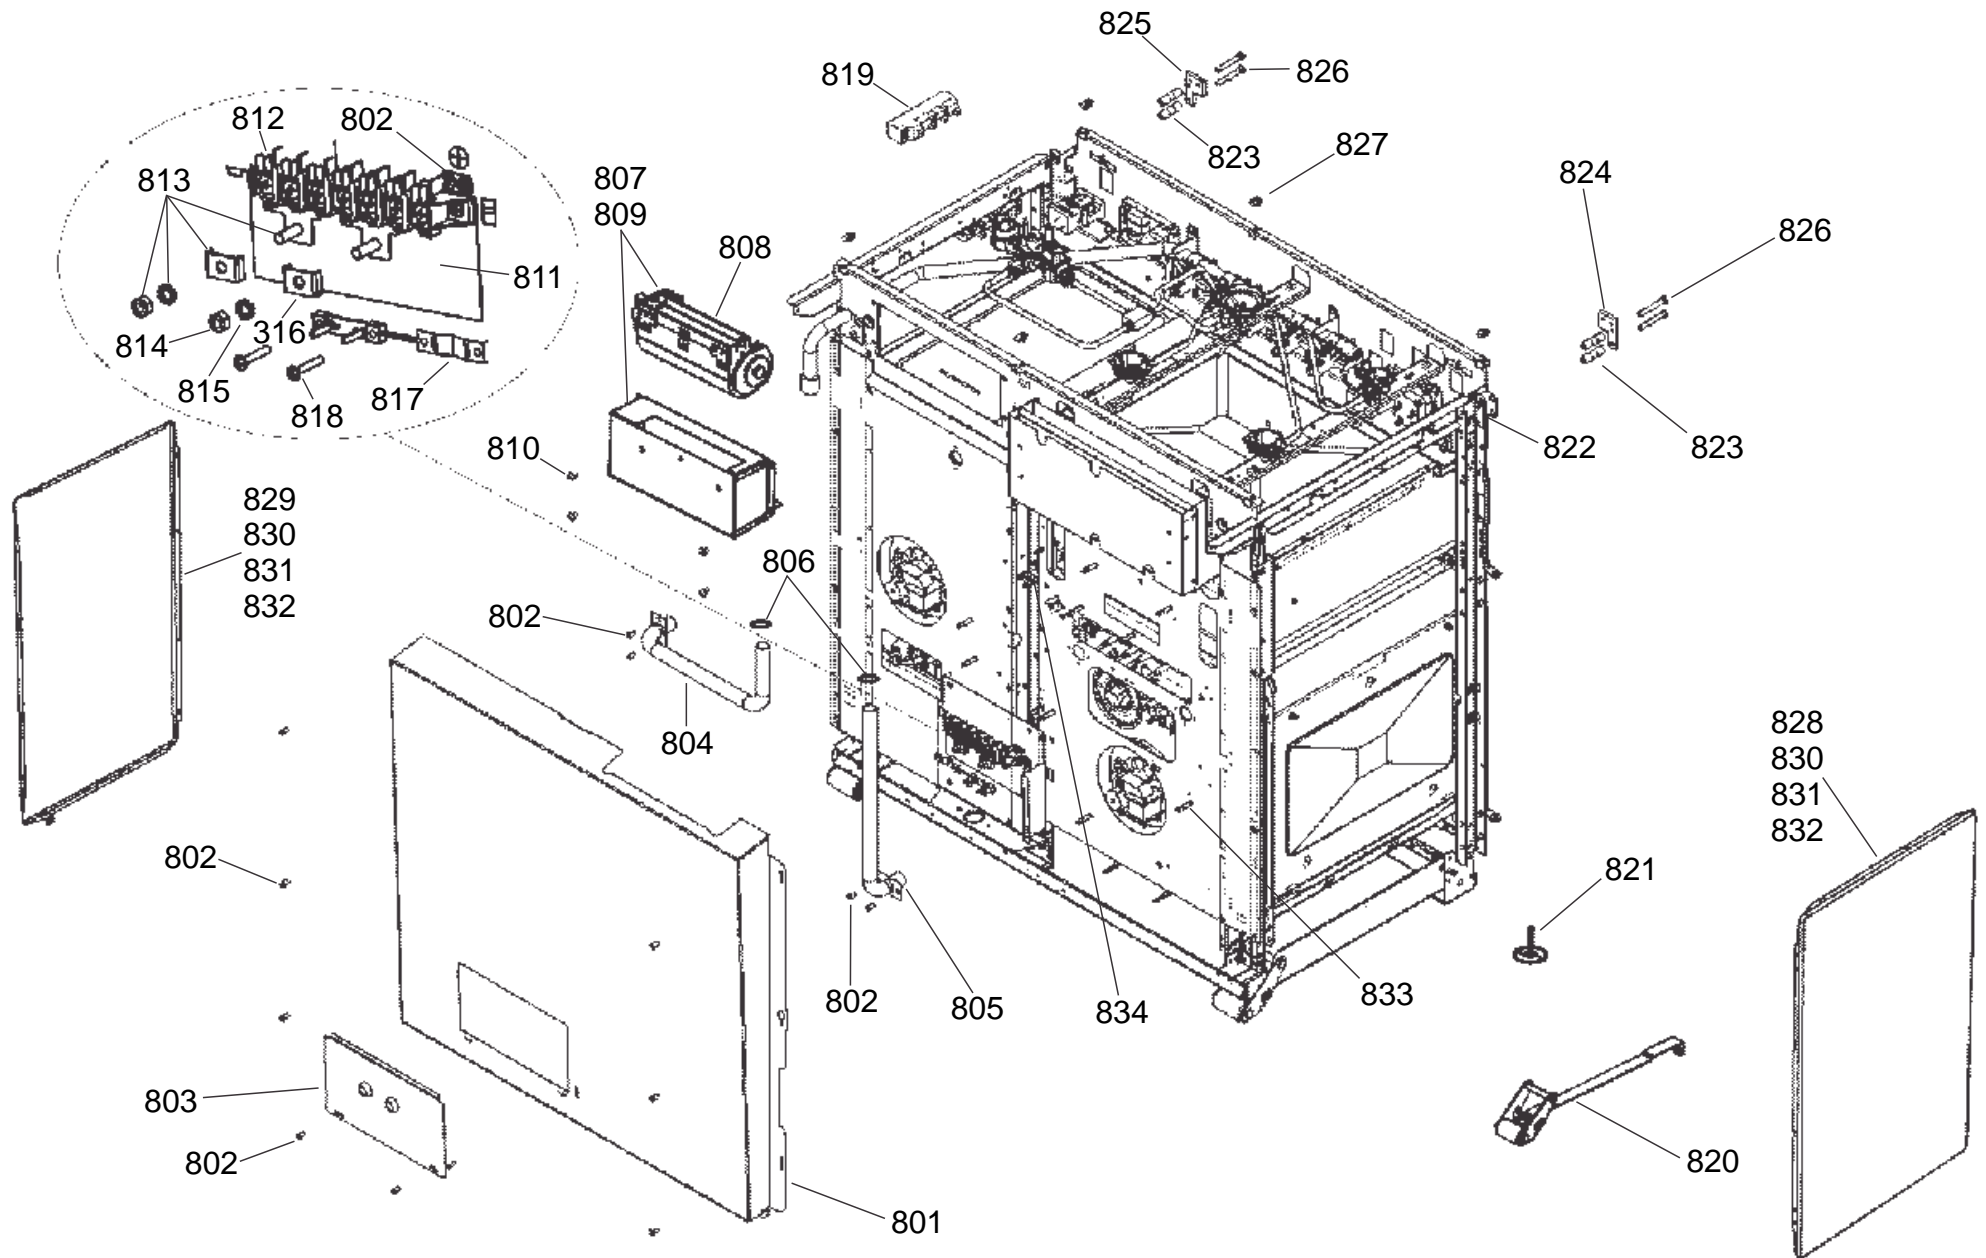 


APPLIANCE REAR

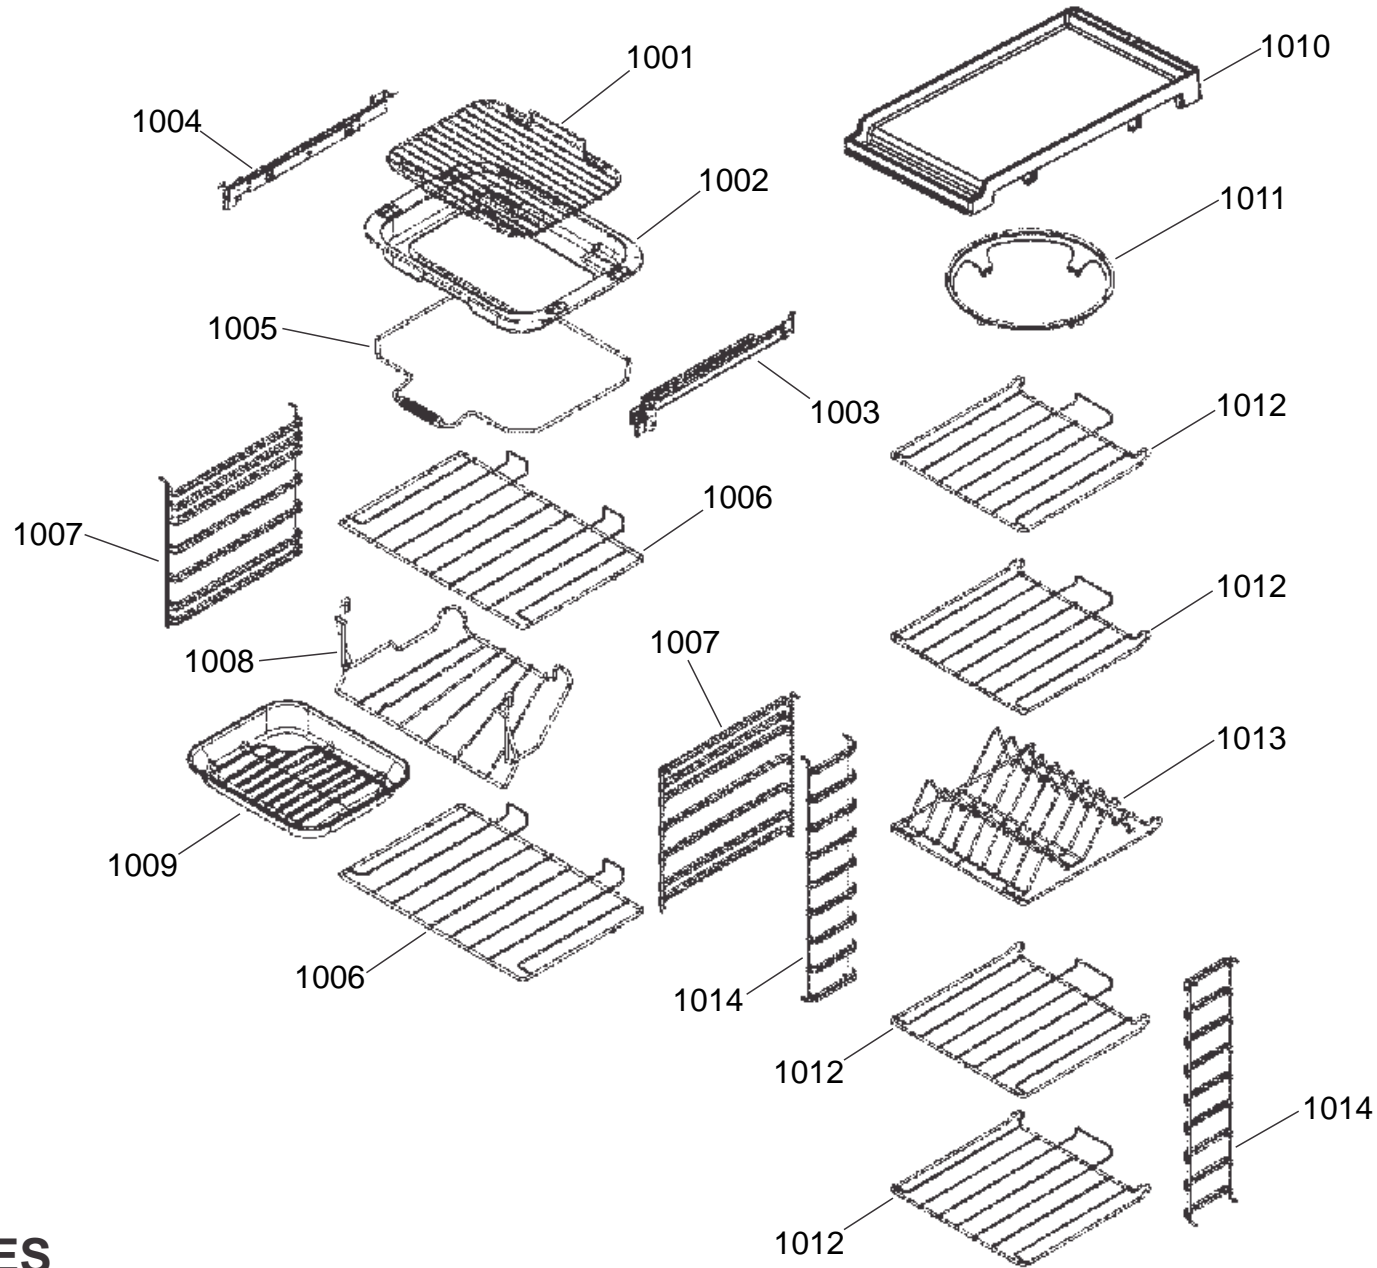 


ACCESSORIES

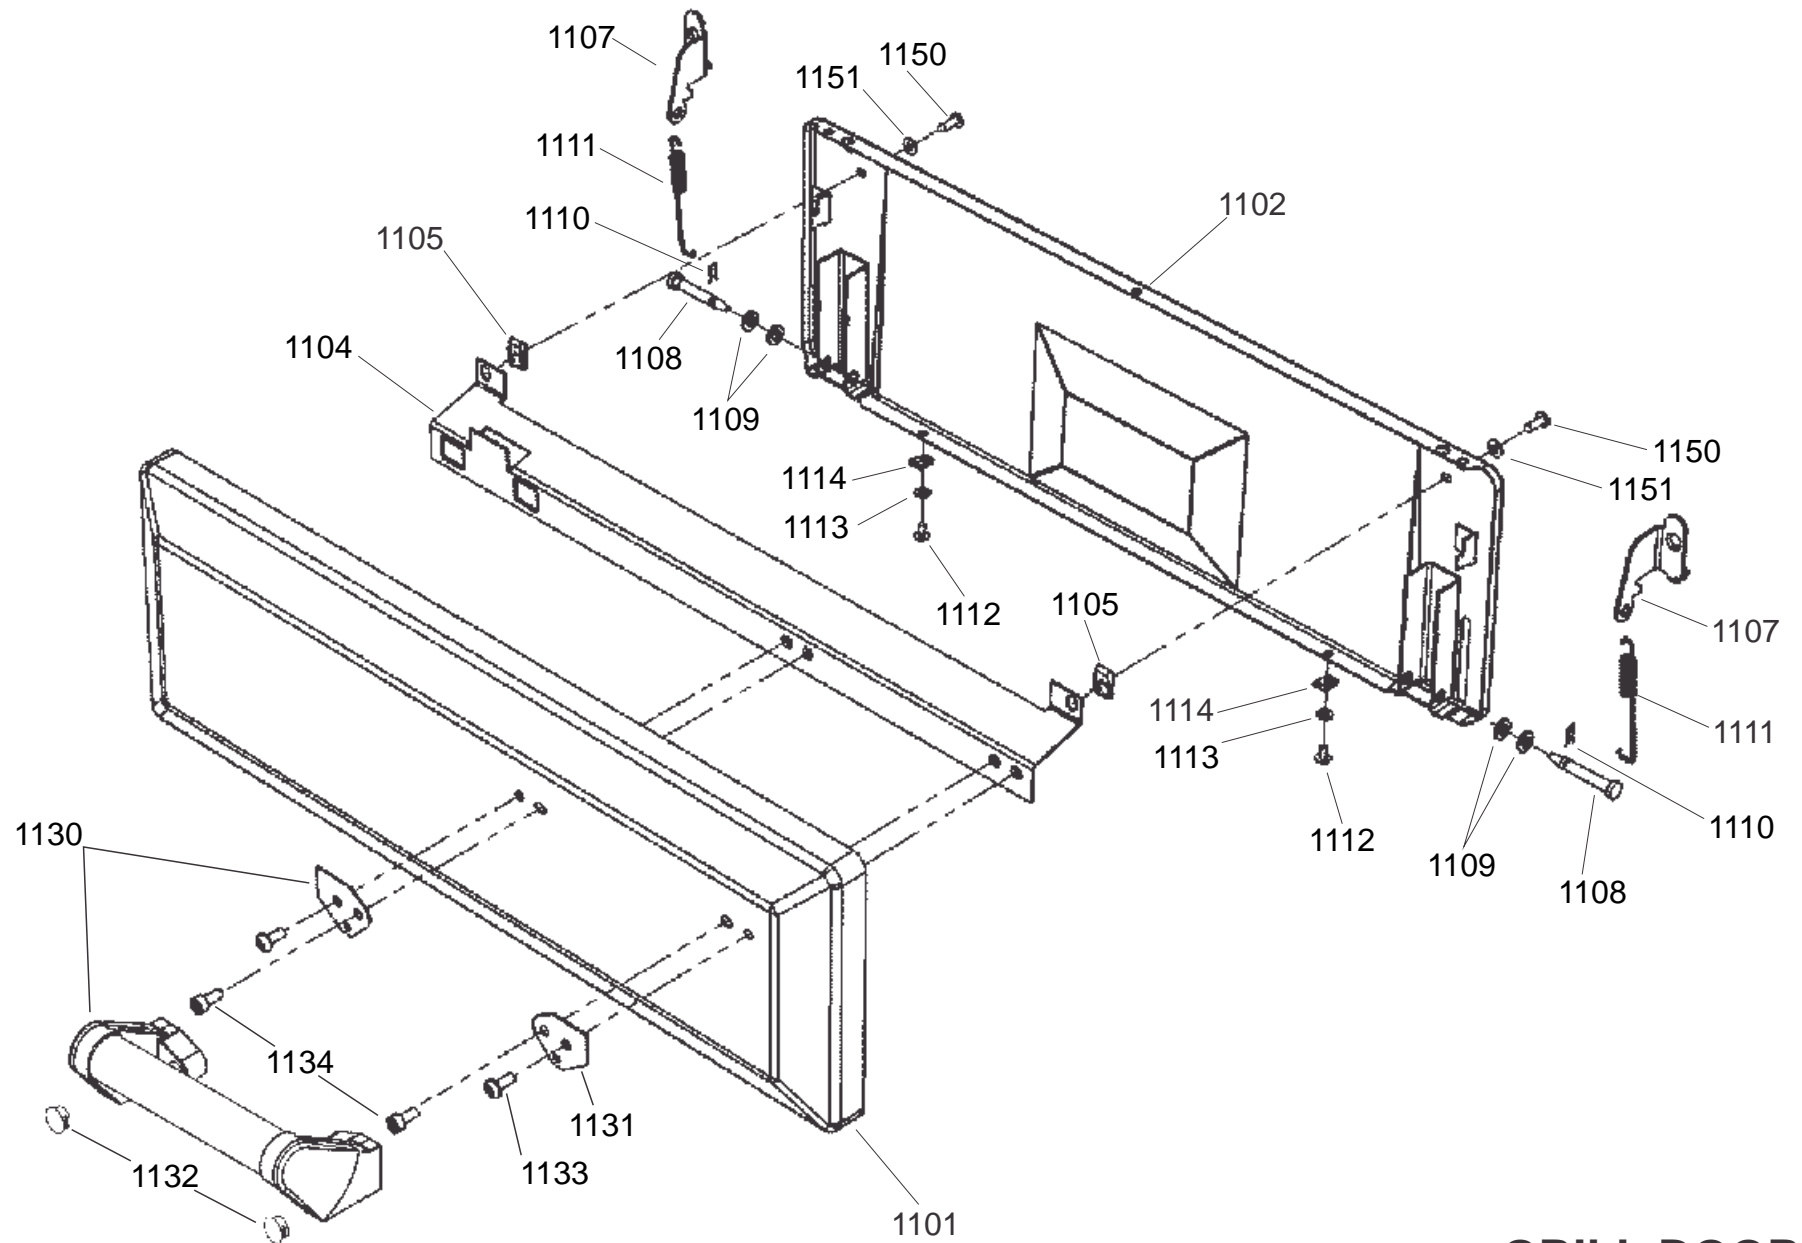 


**GRILL DOOR**

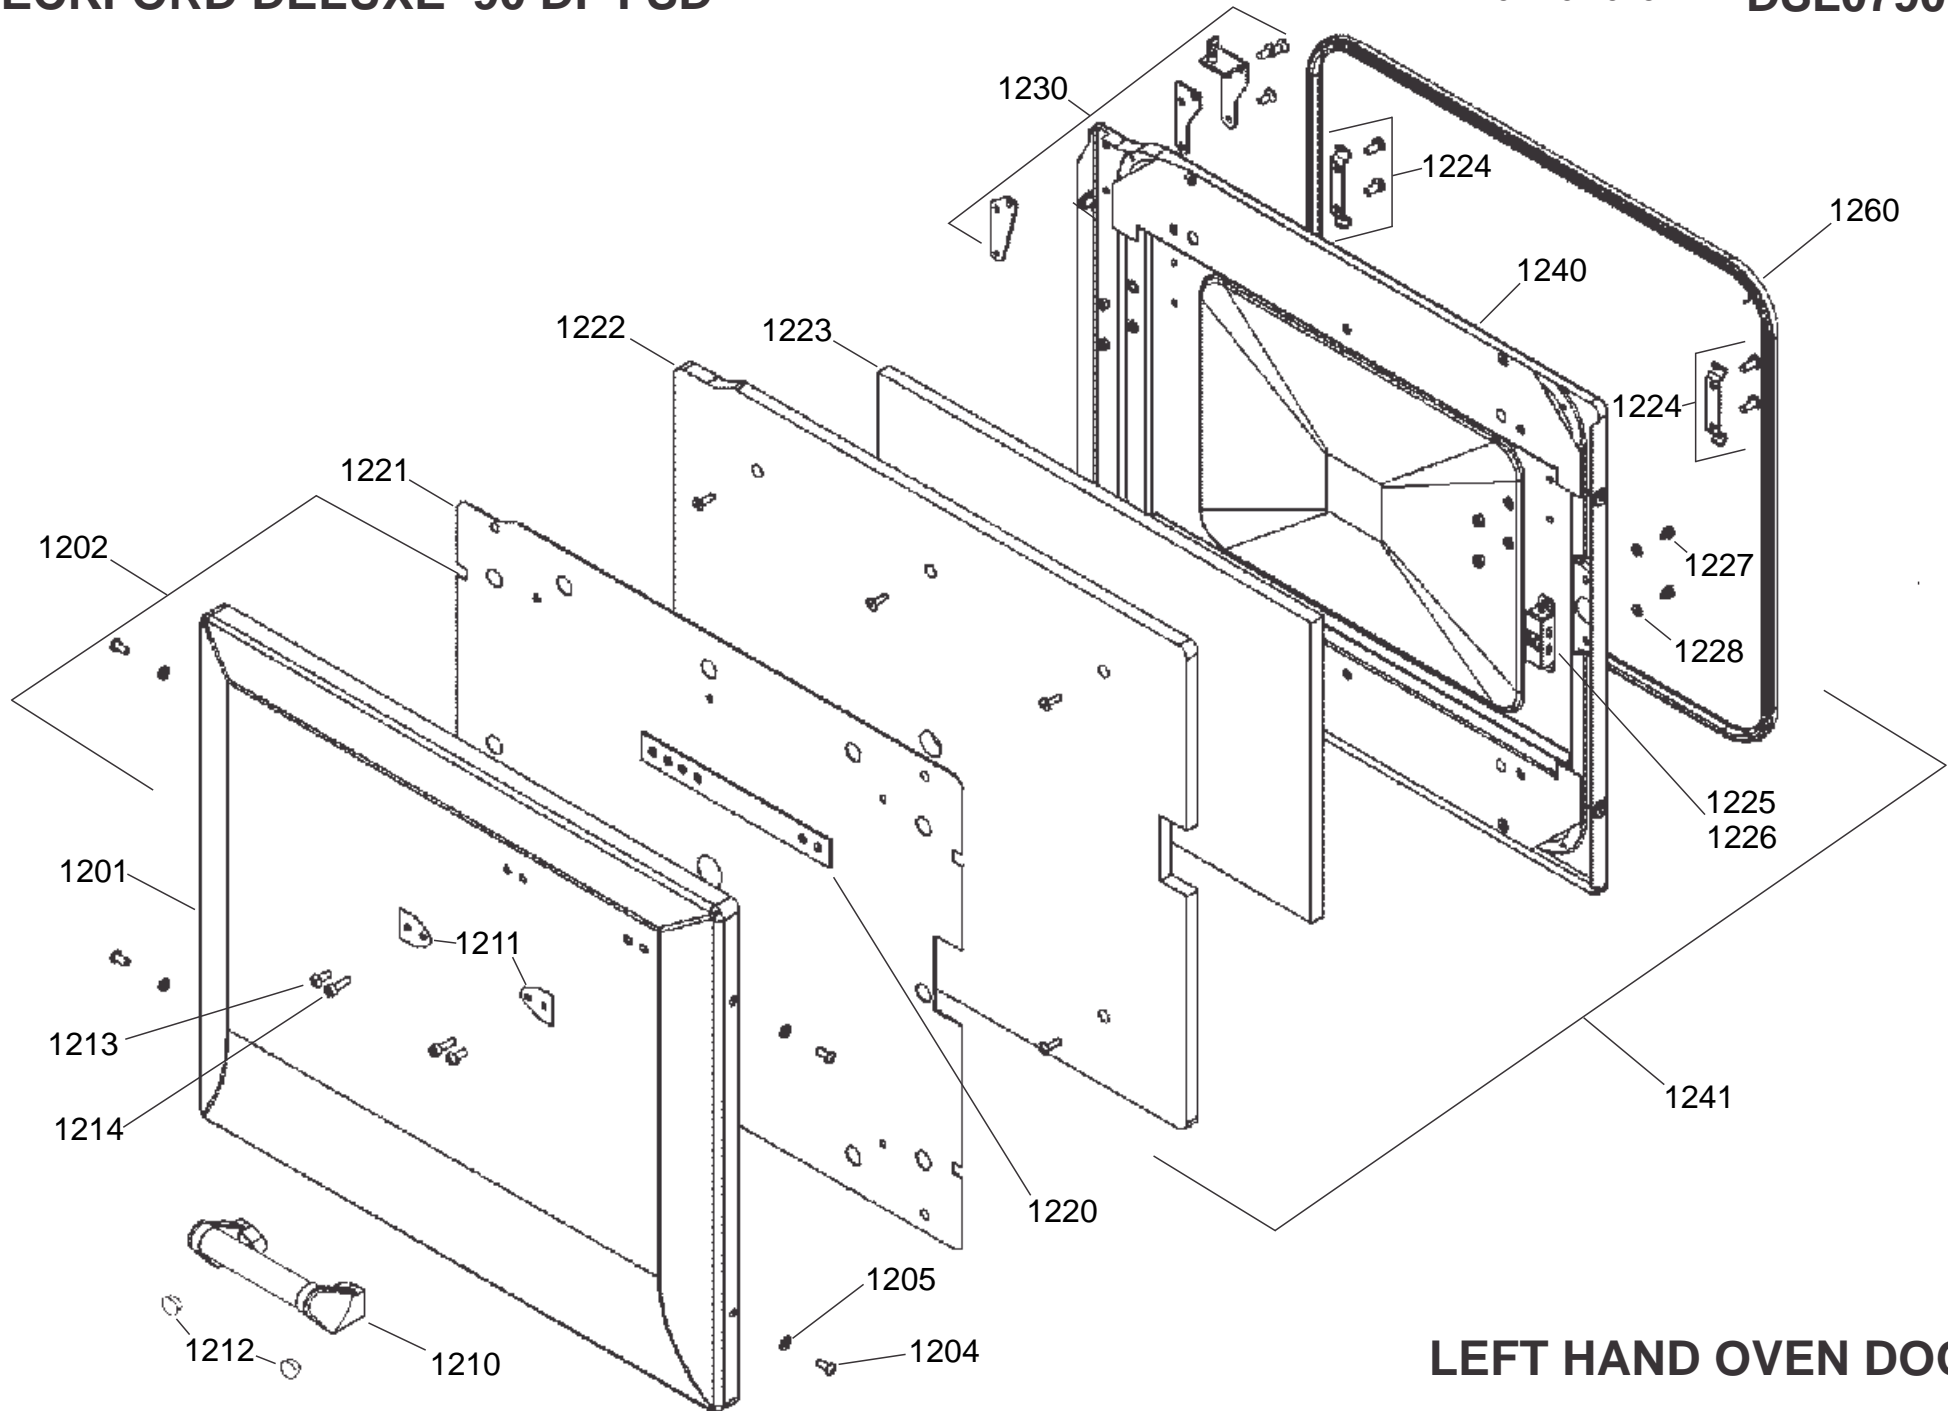 


LEFT HAND OVEN DOOR

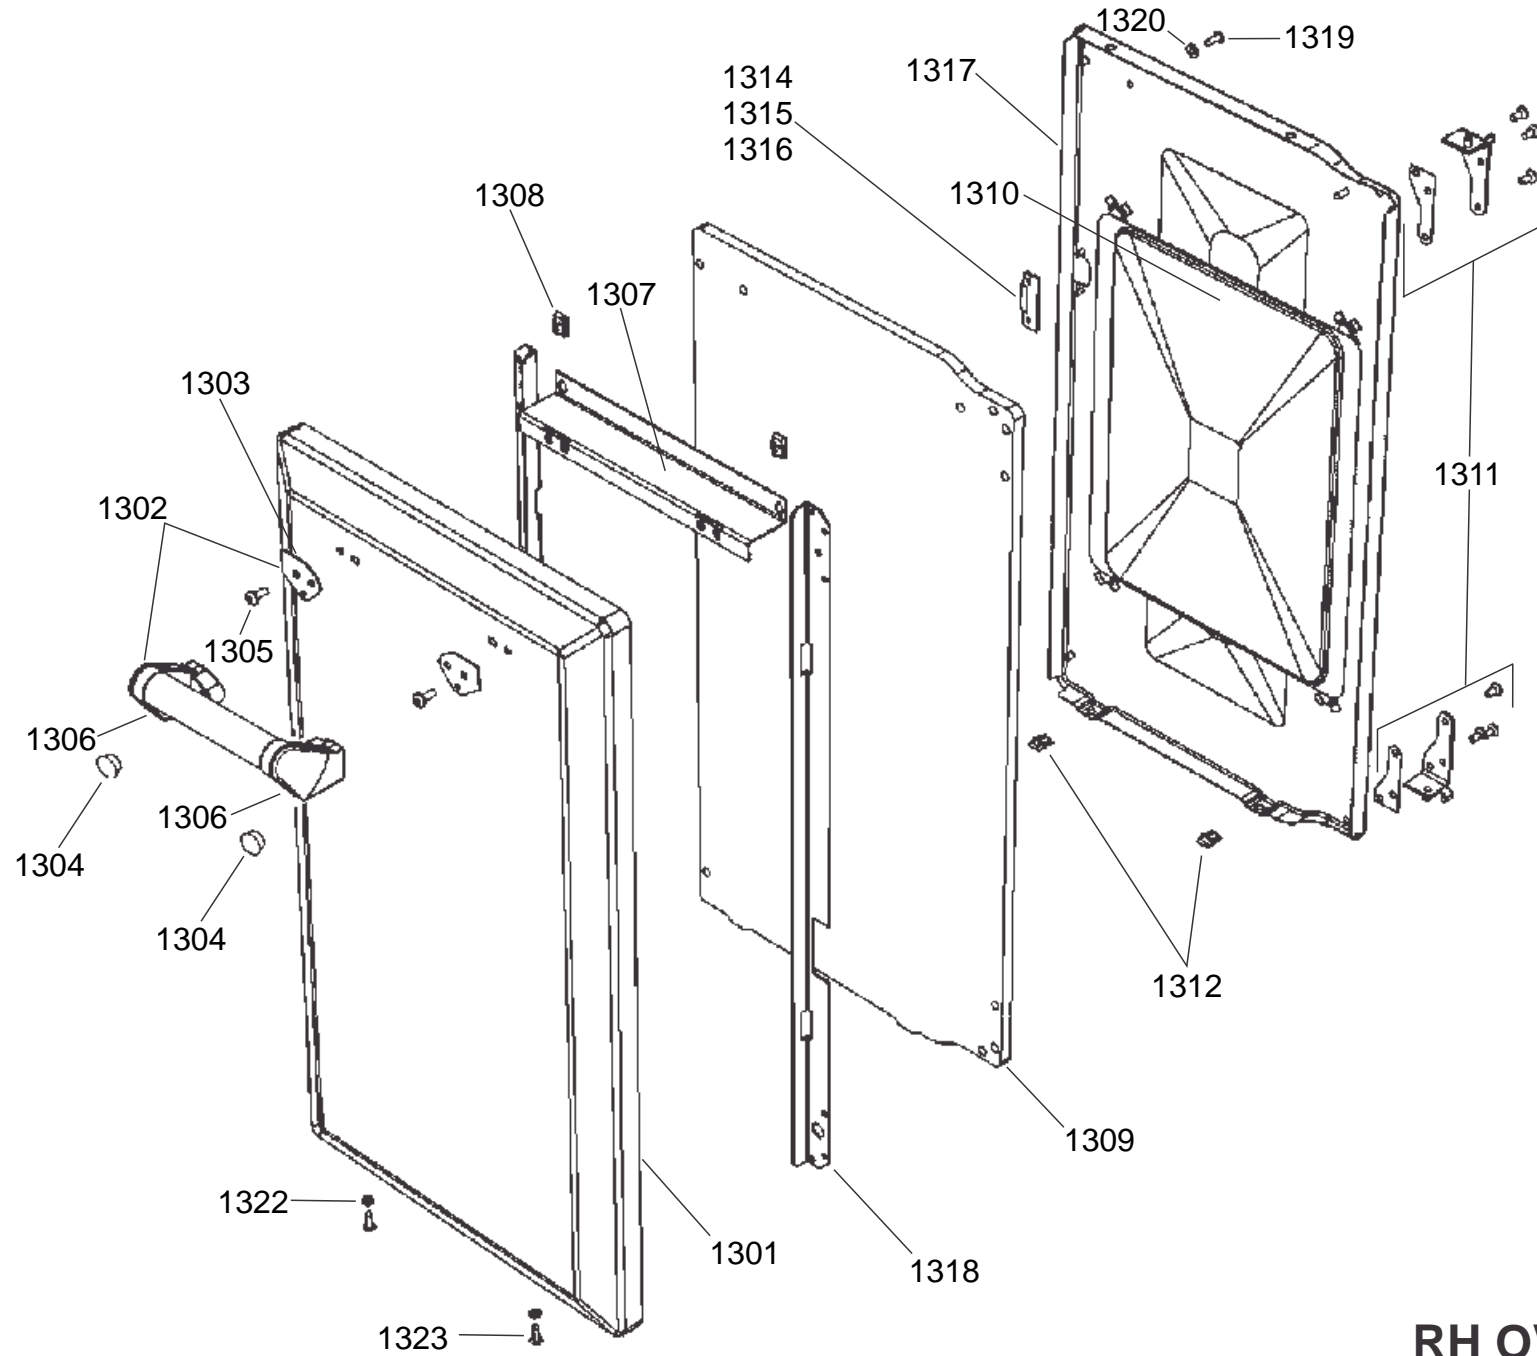 

RH OVEN DOOR

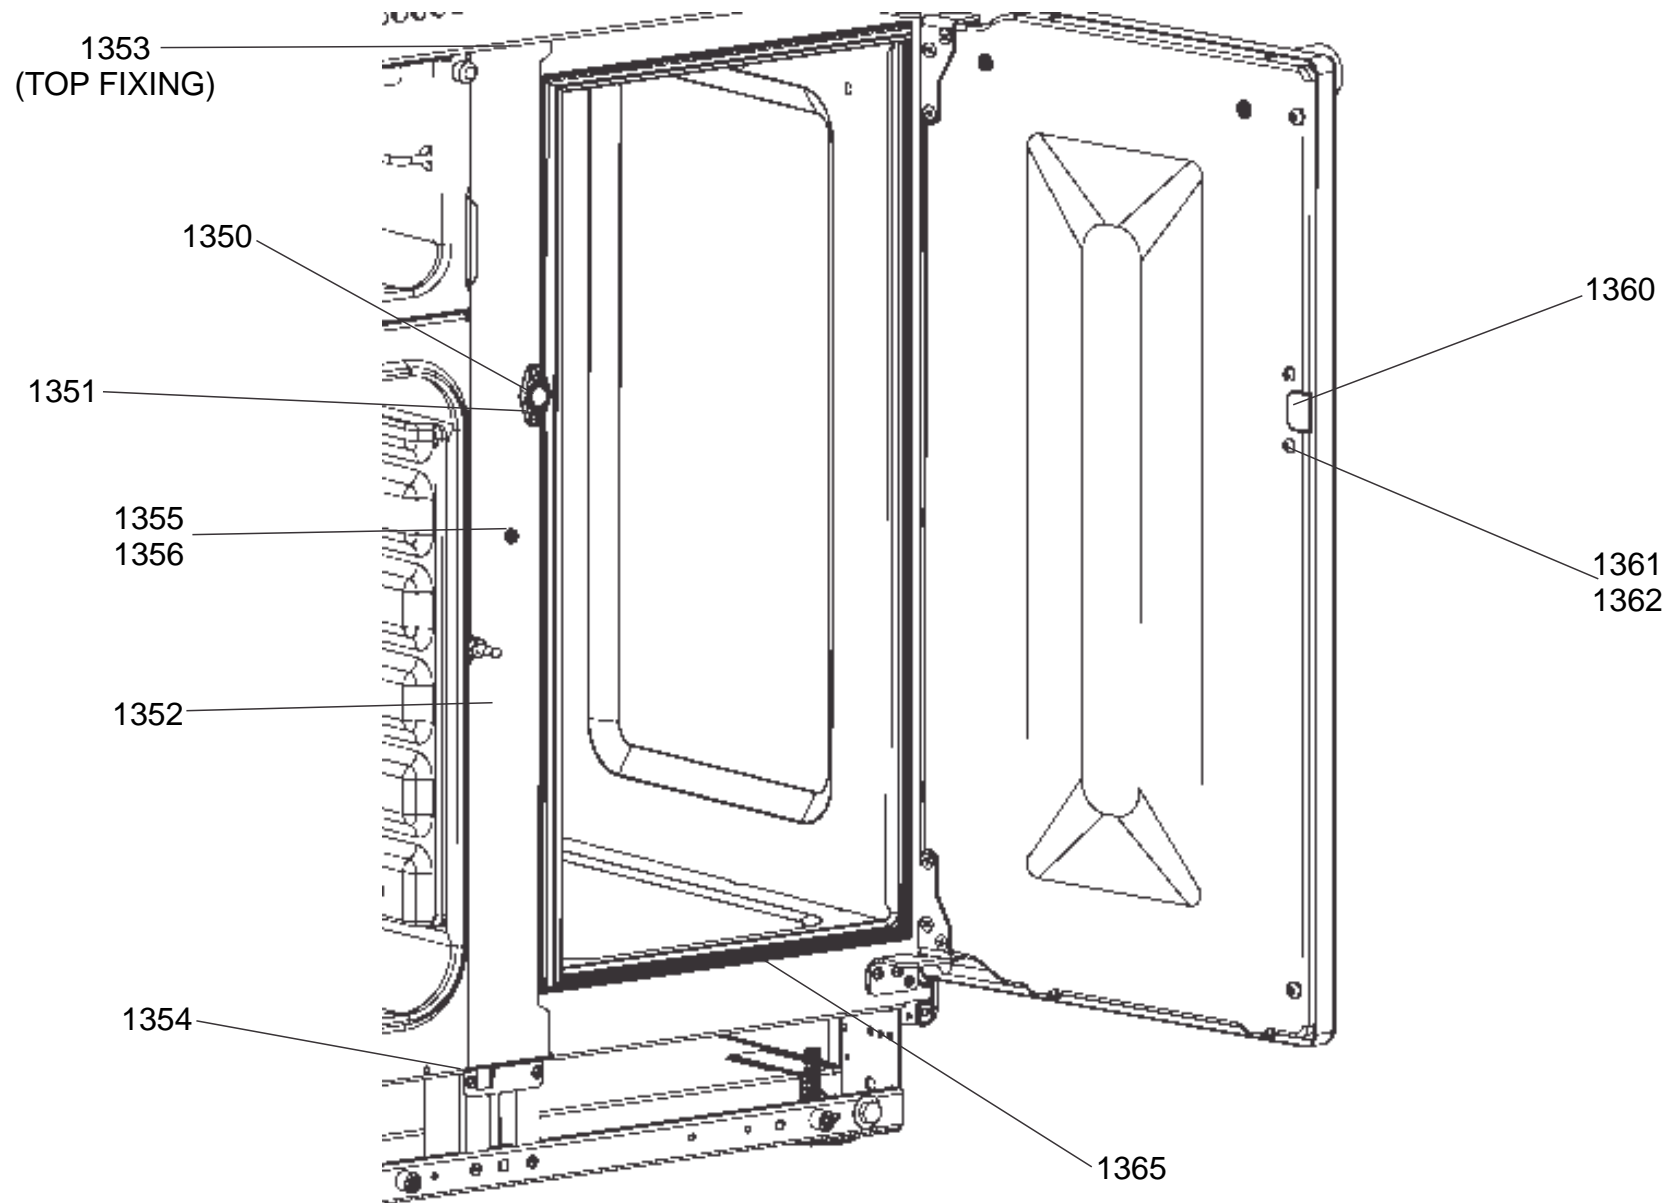 

RH DOOR AND INFILL

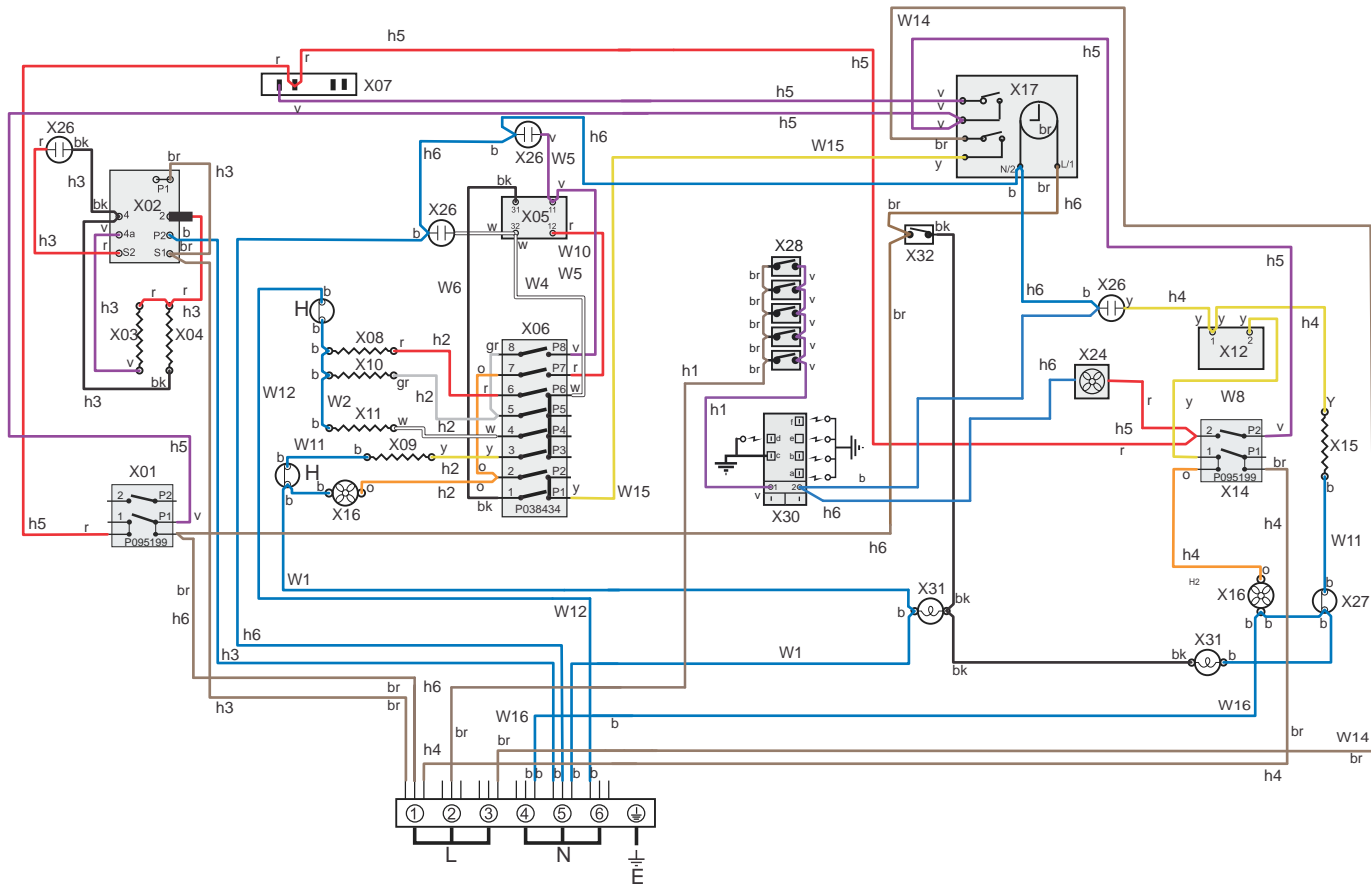 

WIRING DIAGRAM

Code	Description
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
g/y	Green / Yellow

Code	Description
X01	Grill Front Switch
X02	Grill Energy Regulator
X03	Grill Elements
X05	Left Hand Oven Thermostat
X06	Left Hand Oven Switch
X07	Left Hand Oven Front Switch
X08	Left Hand Oven Base Element
X09	Left Hand Oven Fan Element
X10	Left Hand Oven Top Outer Element
X11	Left Hand Oven Top Inner Element
X12	Right Hand Oven Thermostat
X14	Right Hand Oven Fan Front Switch
X15	Right Hand Oven Fan Element
X16	Oven Fan
X17	Clock / Timer
X24	Cooling Fan
X26	Neon
X27	Thermal Cut-Out
X28	Ignition Switches
X30	Spark Generator
X31	Oven Light
X32	Oven Light Switch