



**LH OVEN
(MULTI - LIGHT)**

**FROM SERIAL NUMBER 171000
UP TO SERIAL NUMBER 181999**

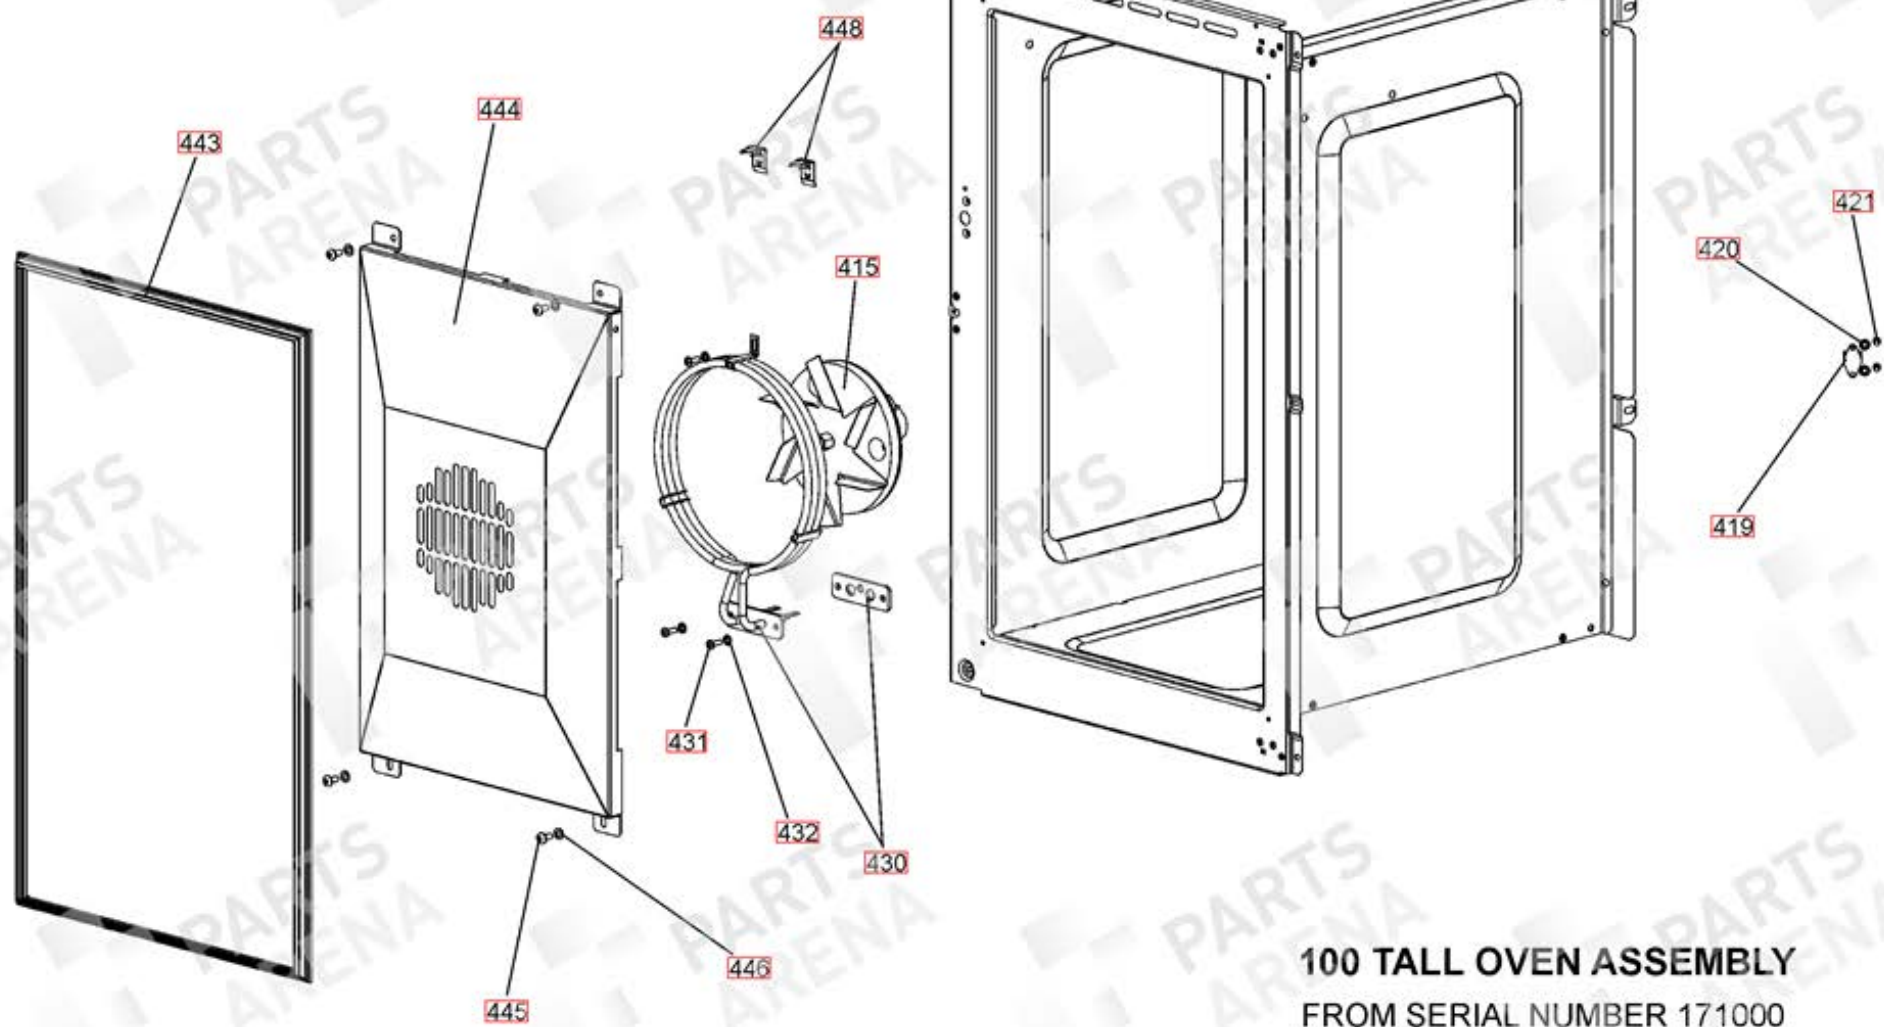


100 TALL OVEN ASSEMBLY
FROM SERIAL NUMBER 171000
UP TO SERIAL NUMBER 175999

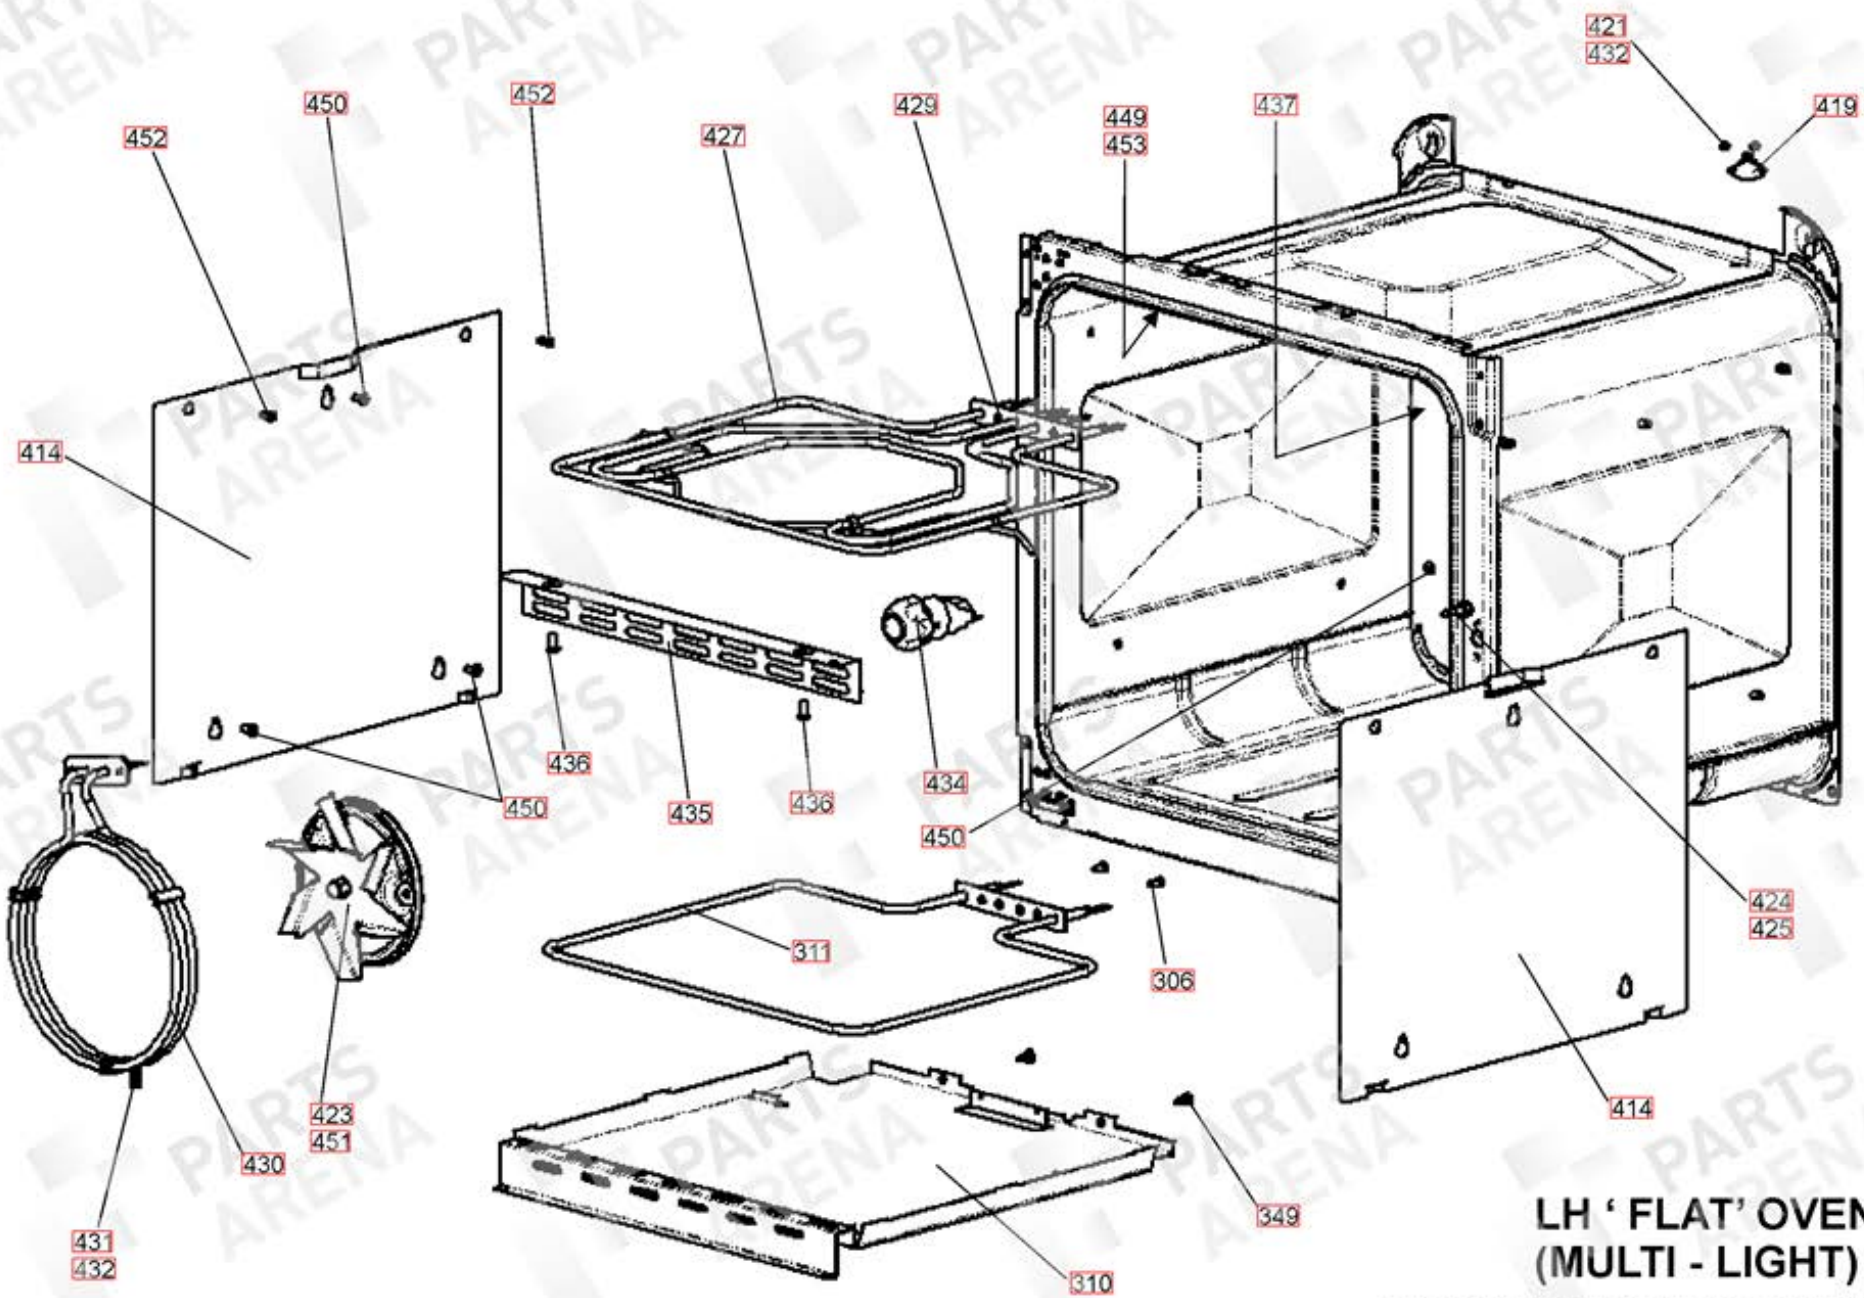


LH 'FLAT' OVEN
(MULTI - LIGHT)


FROM SERIAL NUMBER 182000

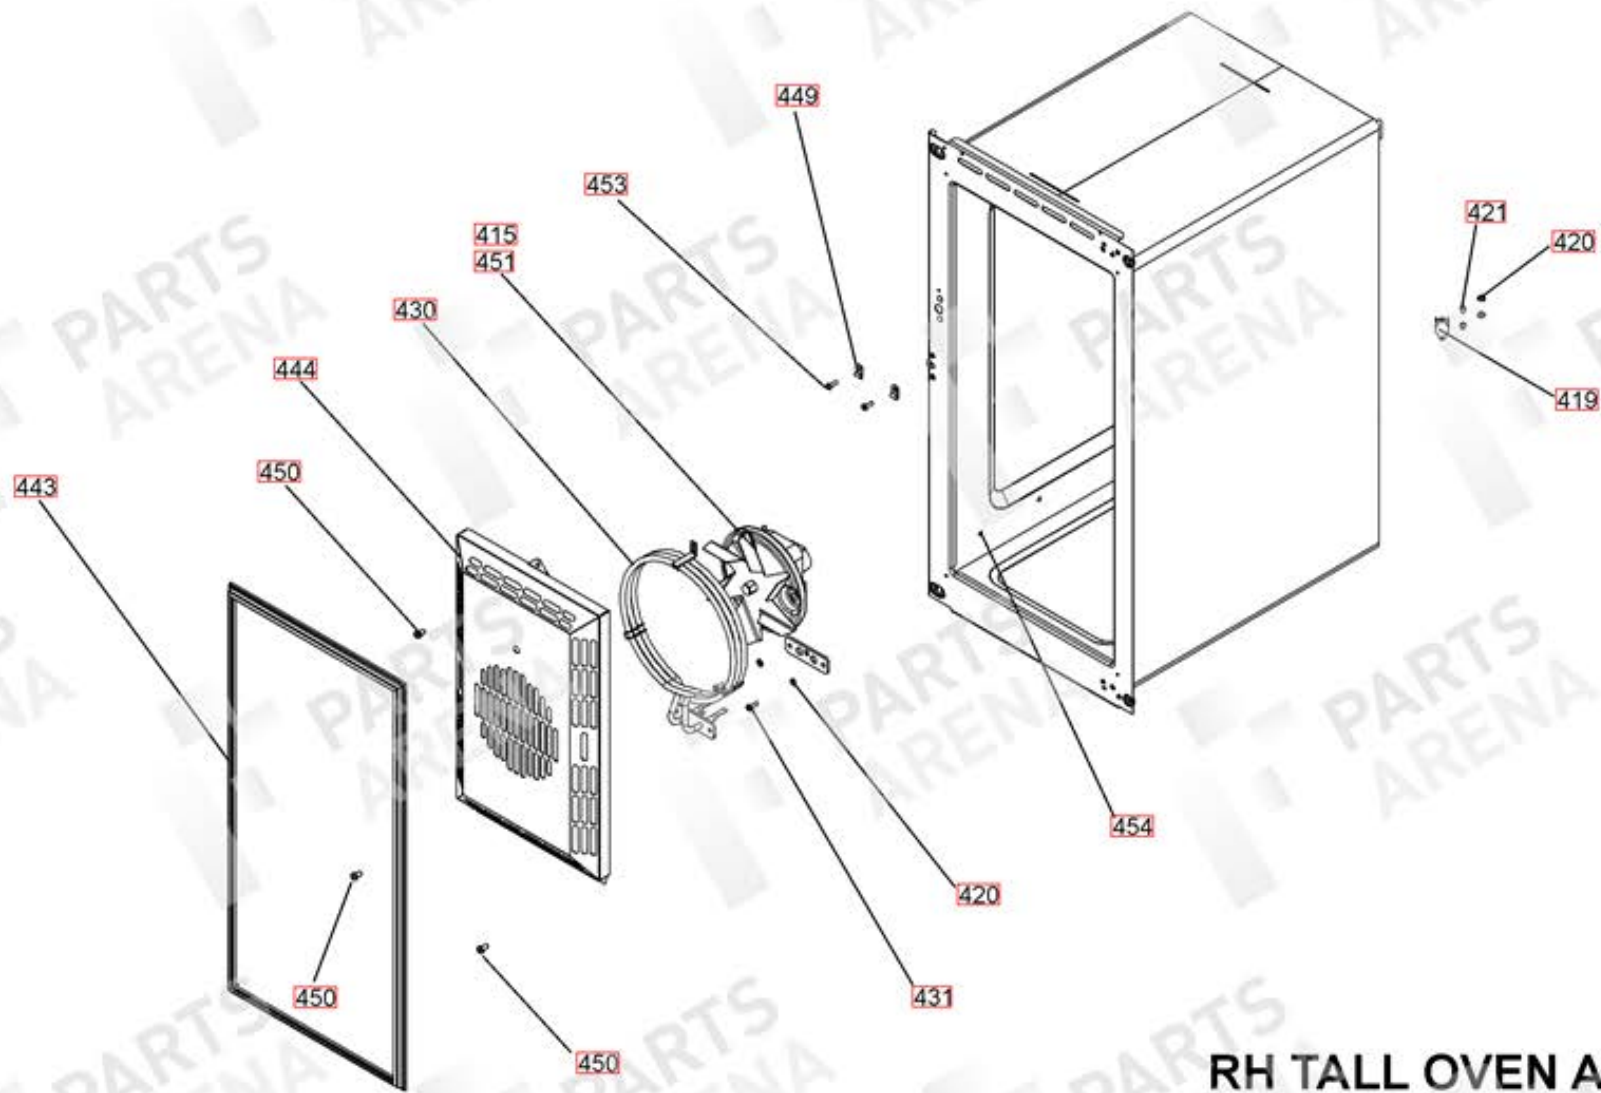


RH TALL OVEN ASSEMBLY
FROM SERIAL NUMBER 176000

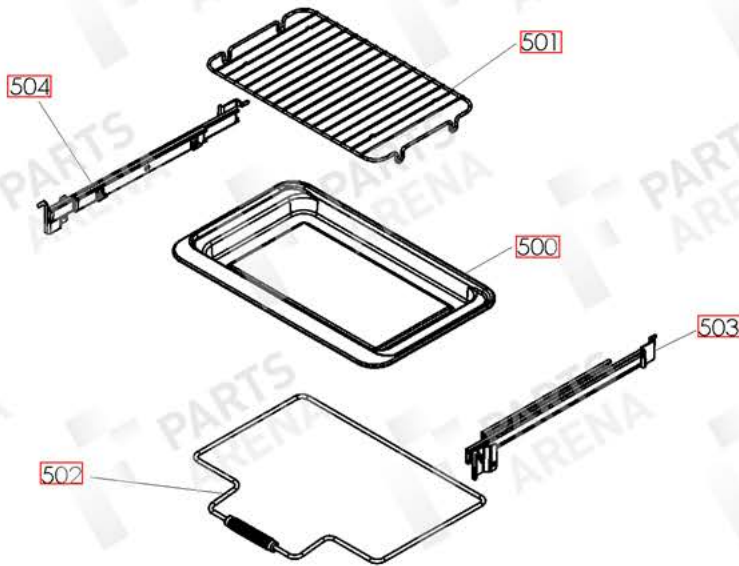

NOTE! SHELVES AND LADDERS SHOWN UP TO SERIAL NUMBER 175999

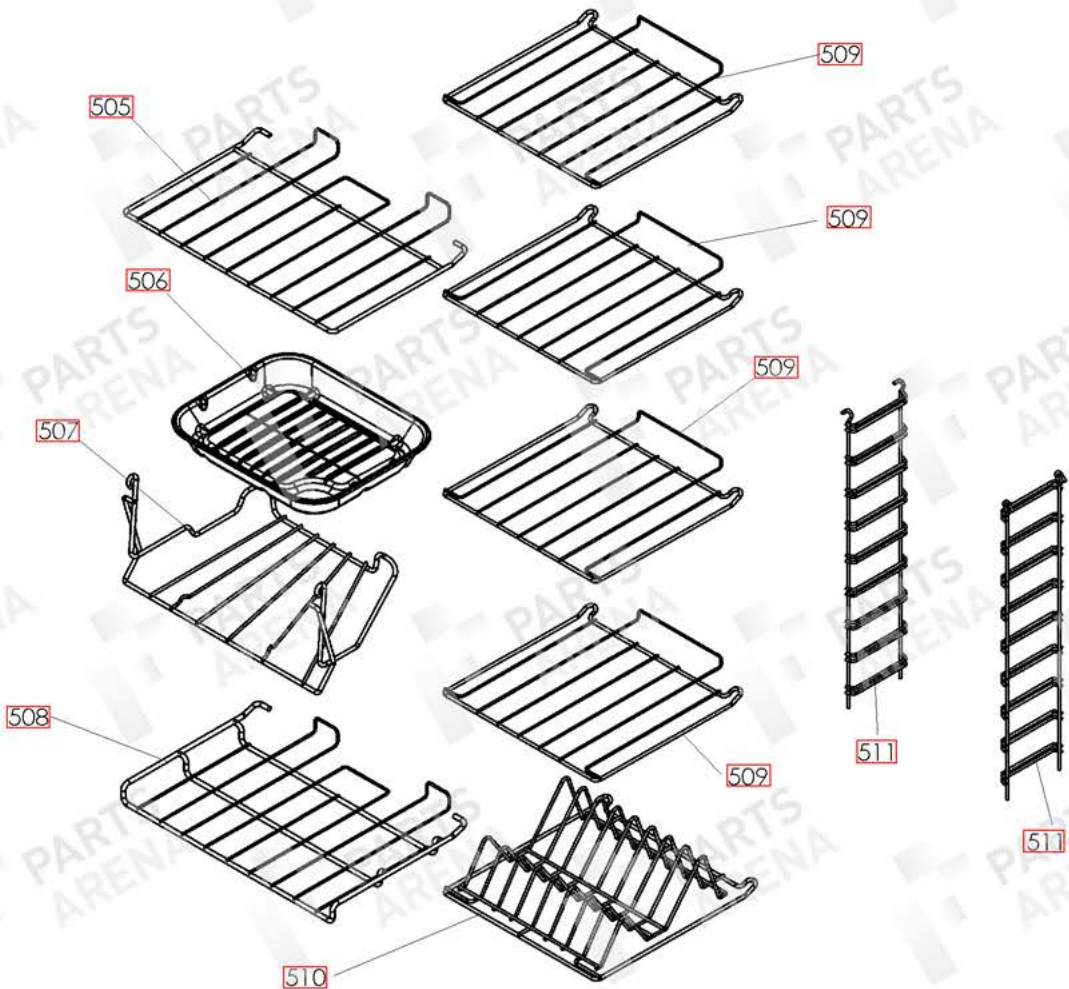


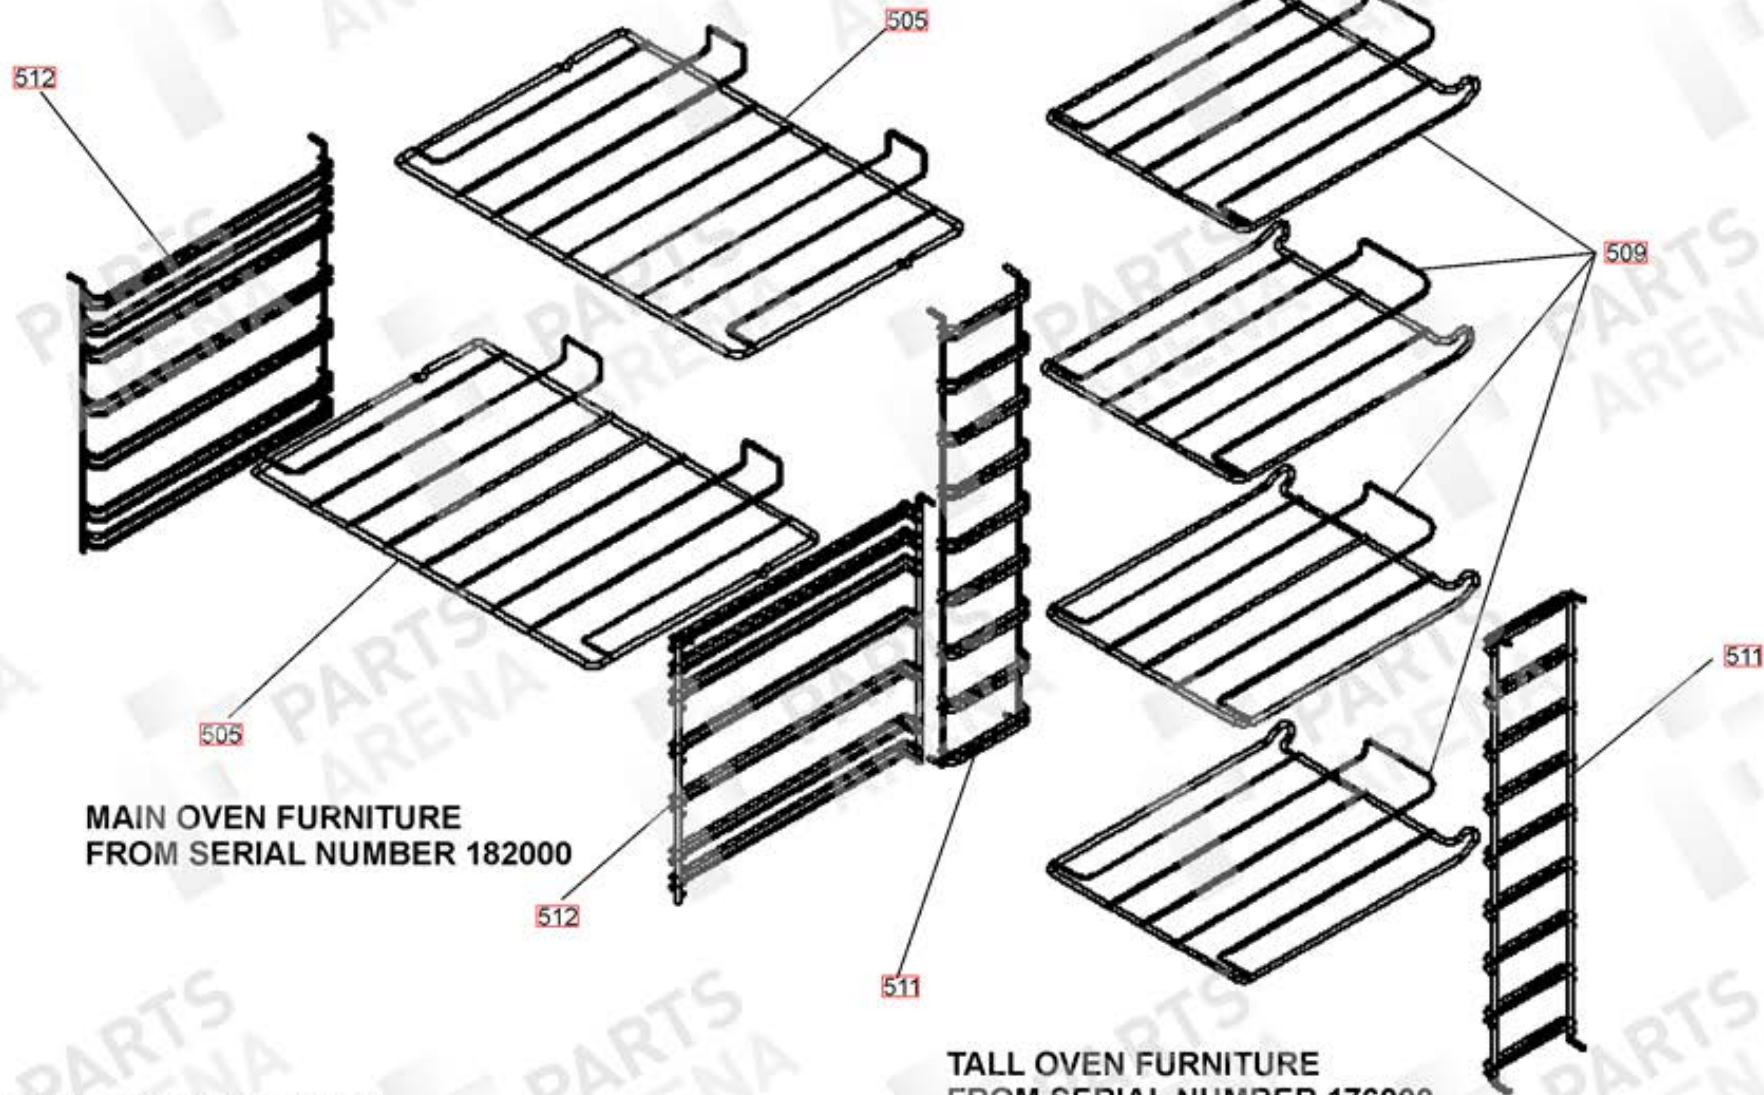

MAIN OVEN FURNITURE
FROM SERIAL NUMBER 182000

TALL OVEN FURNITURE
FROM SERIAL NUMBER 176000


OVEN FURNITURE 100

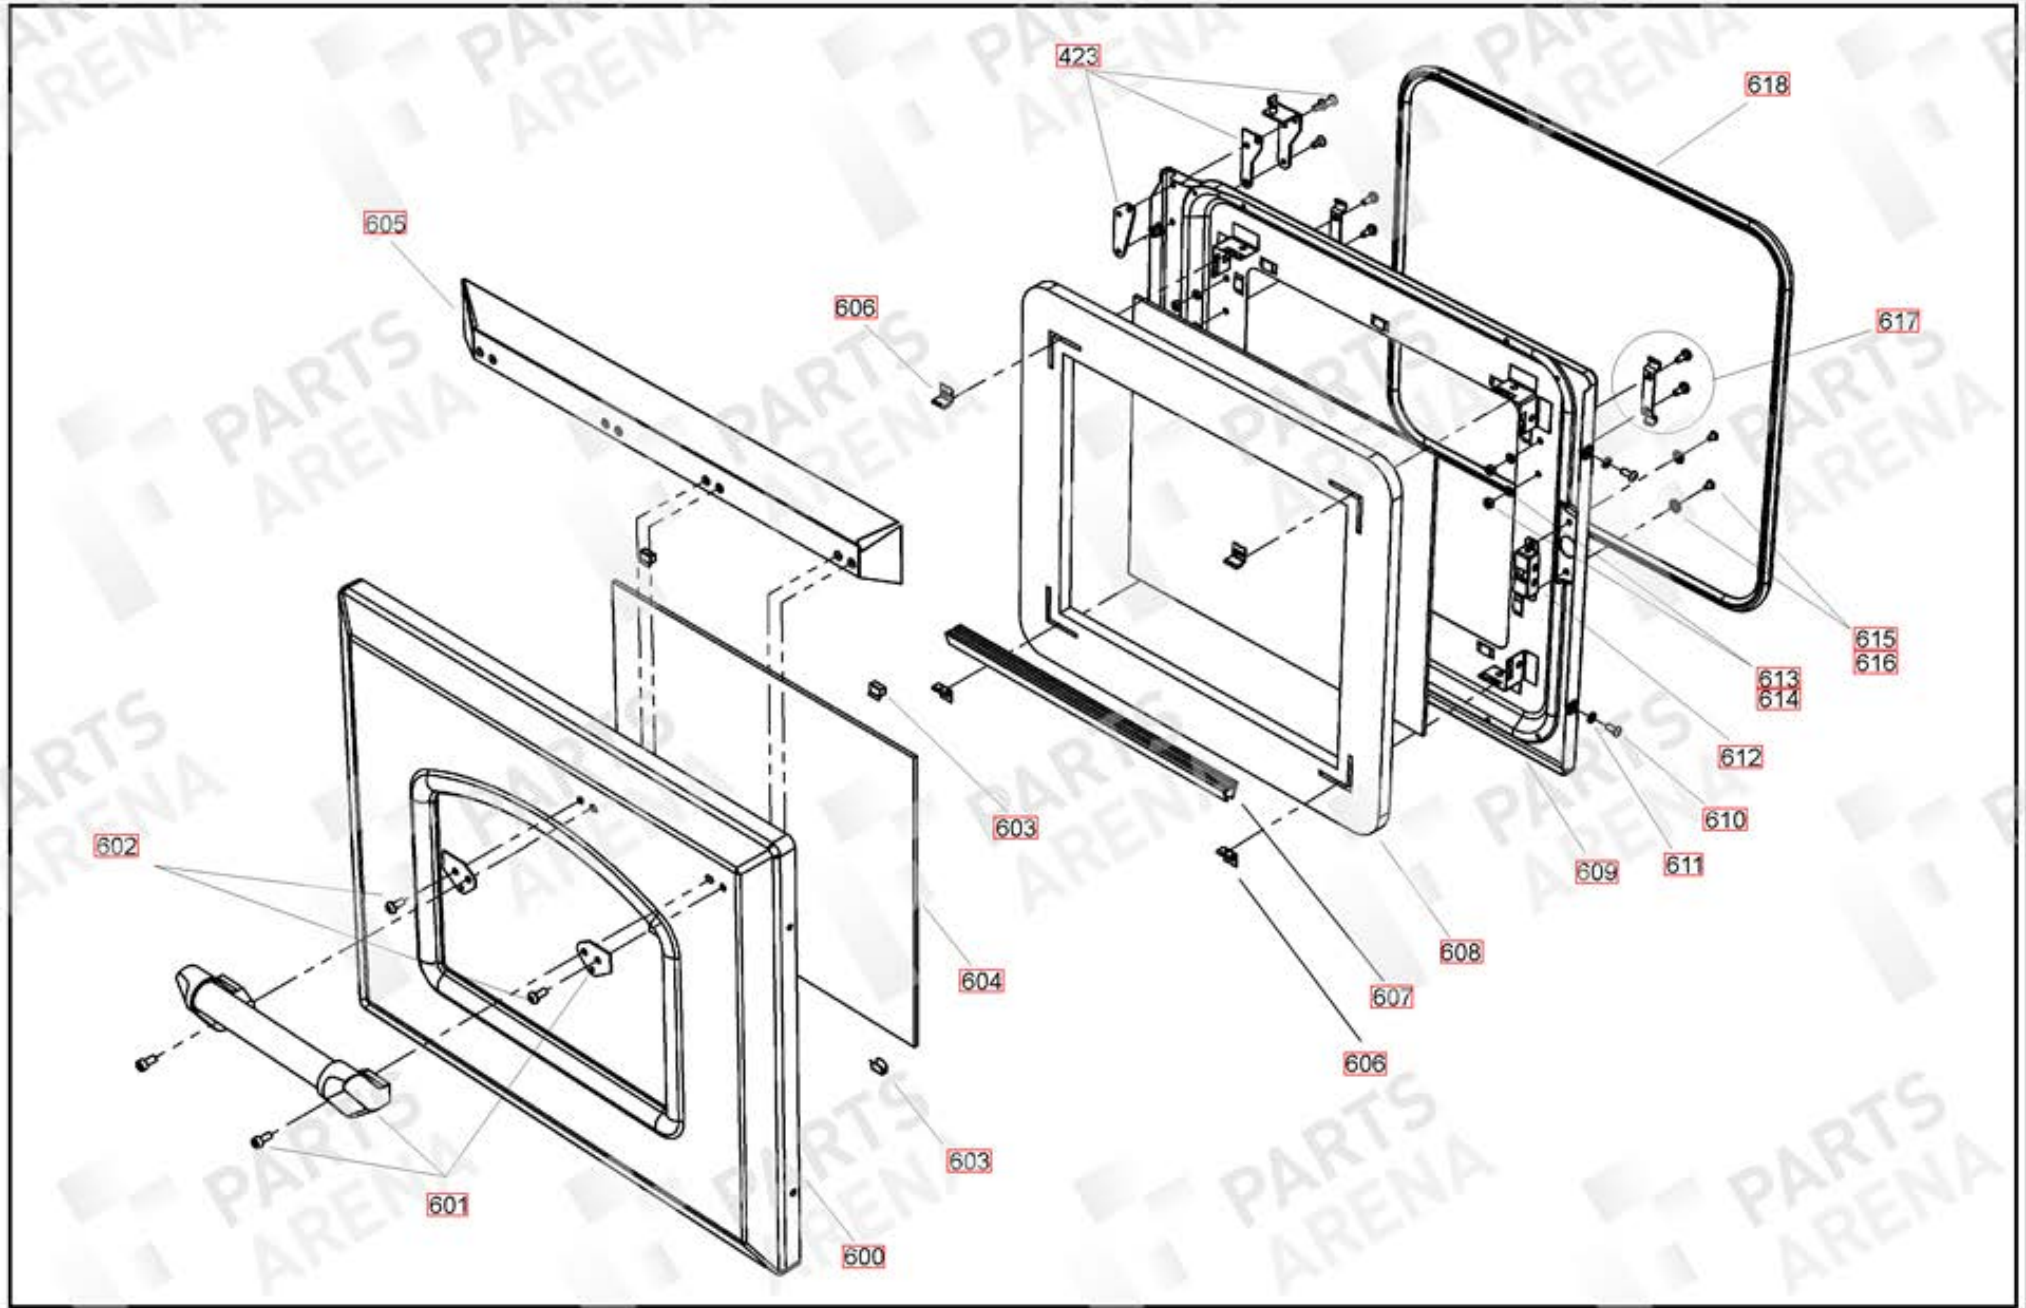



CLASSIC DELUXE 100 INDUCTION

DSL0474 P07

DATE 18.06.14 ISSUE STATUS 03

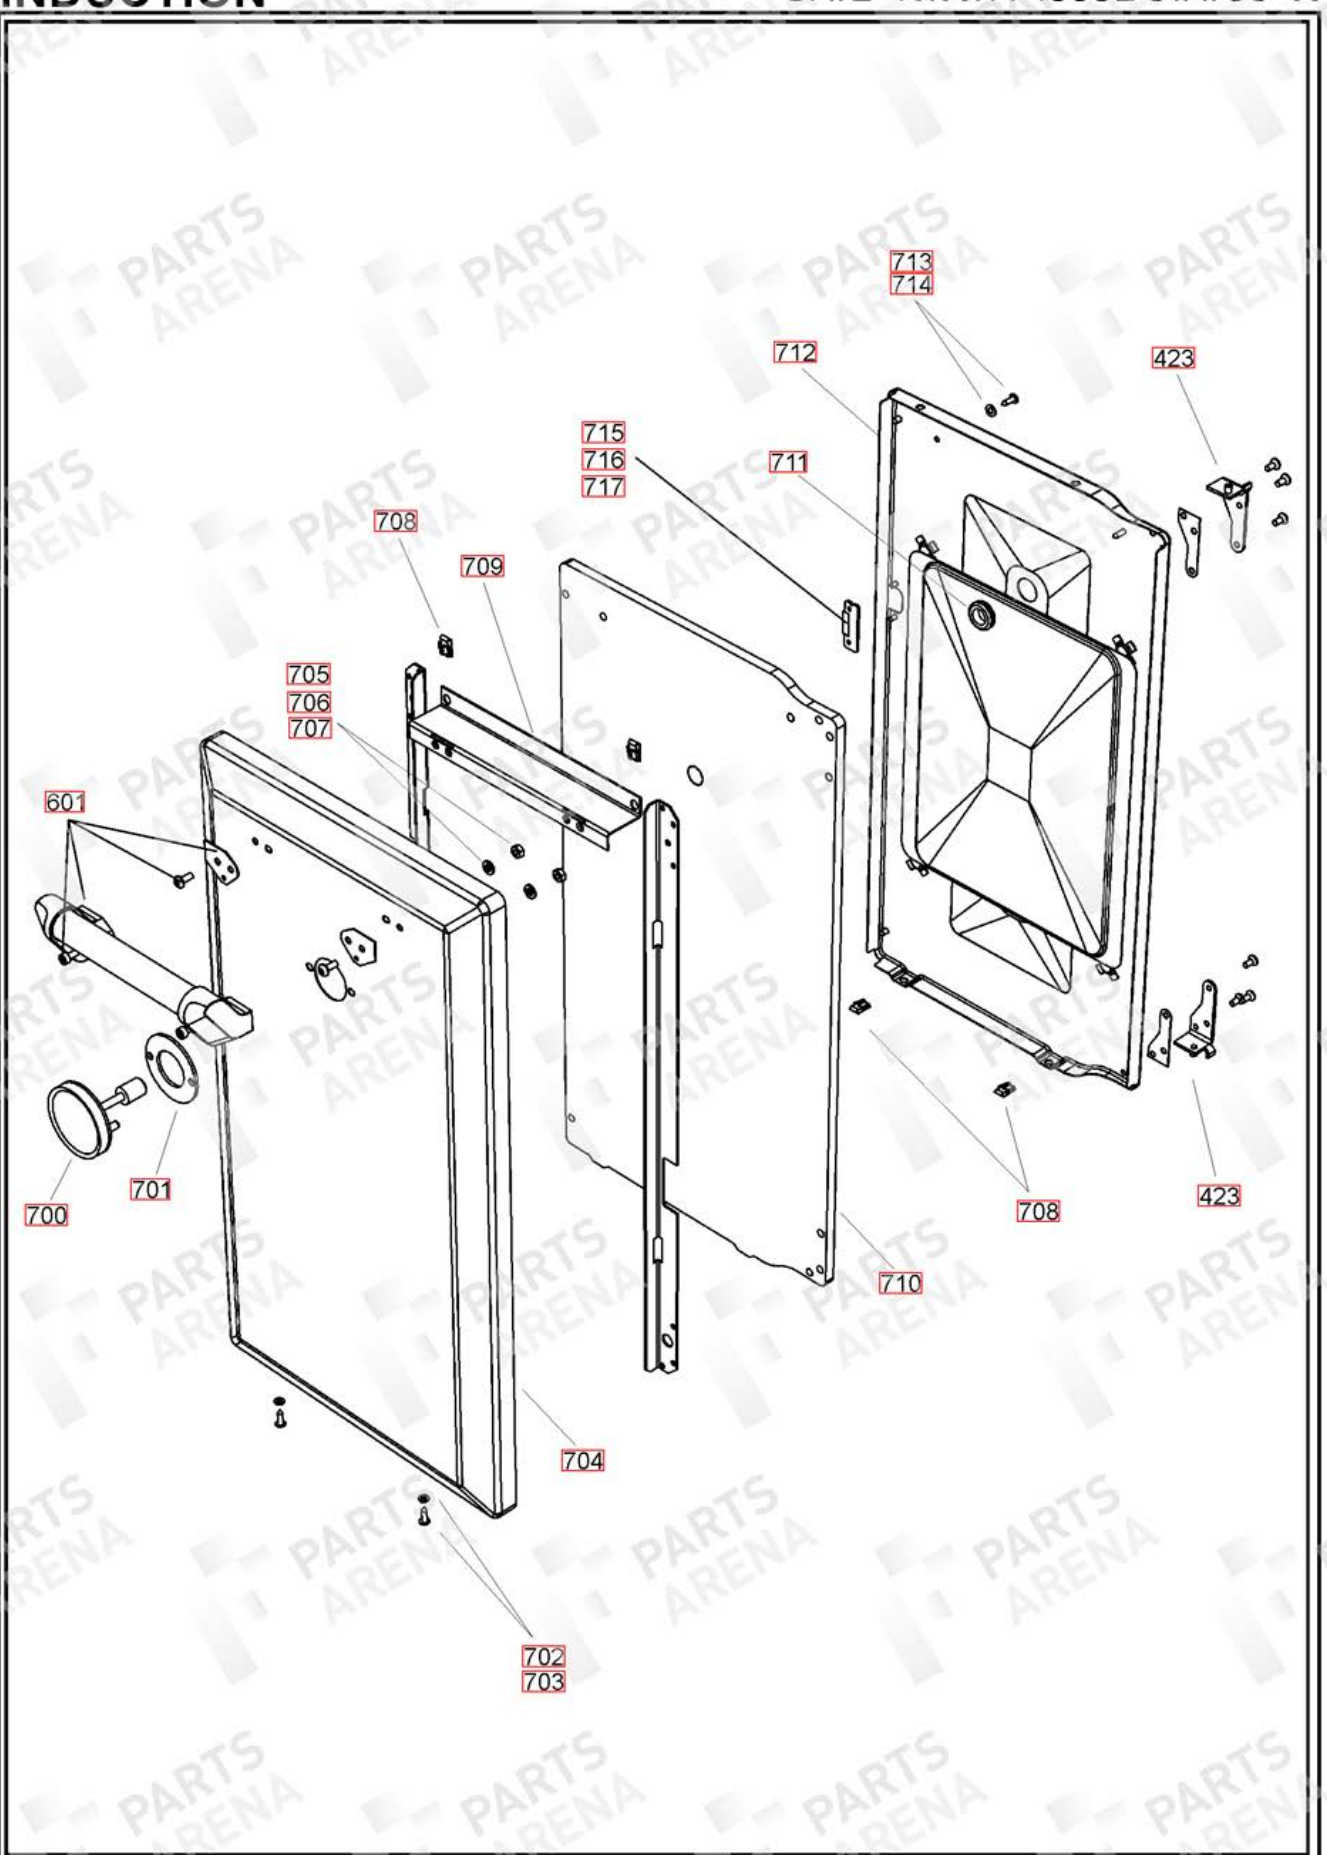

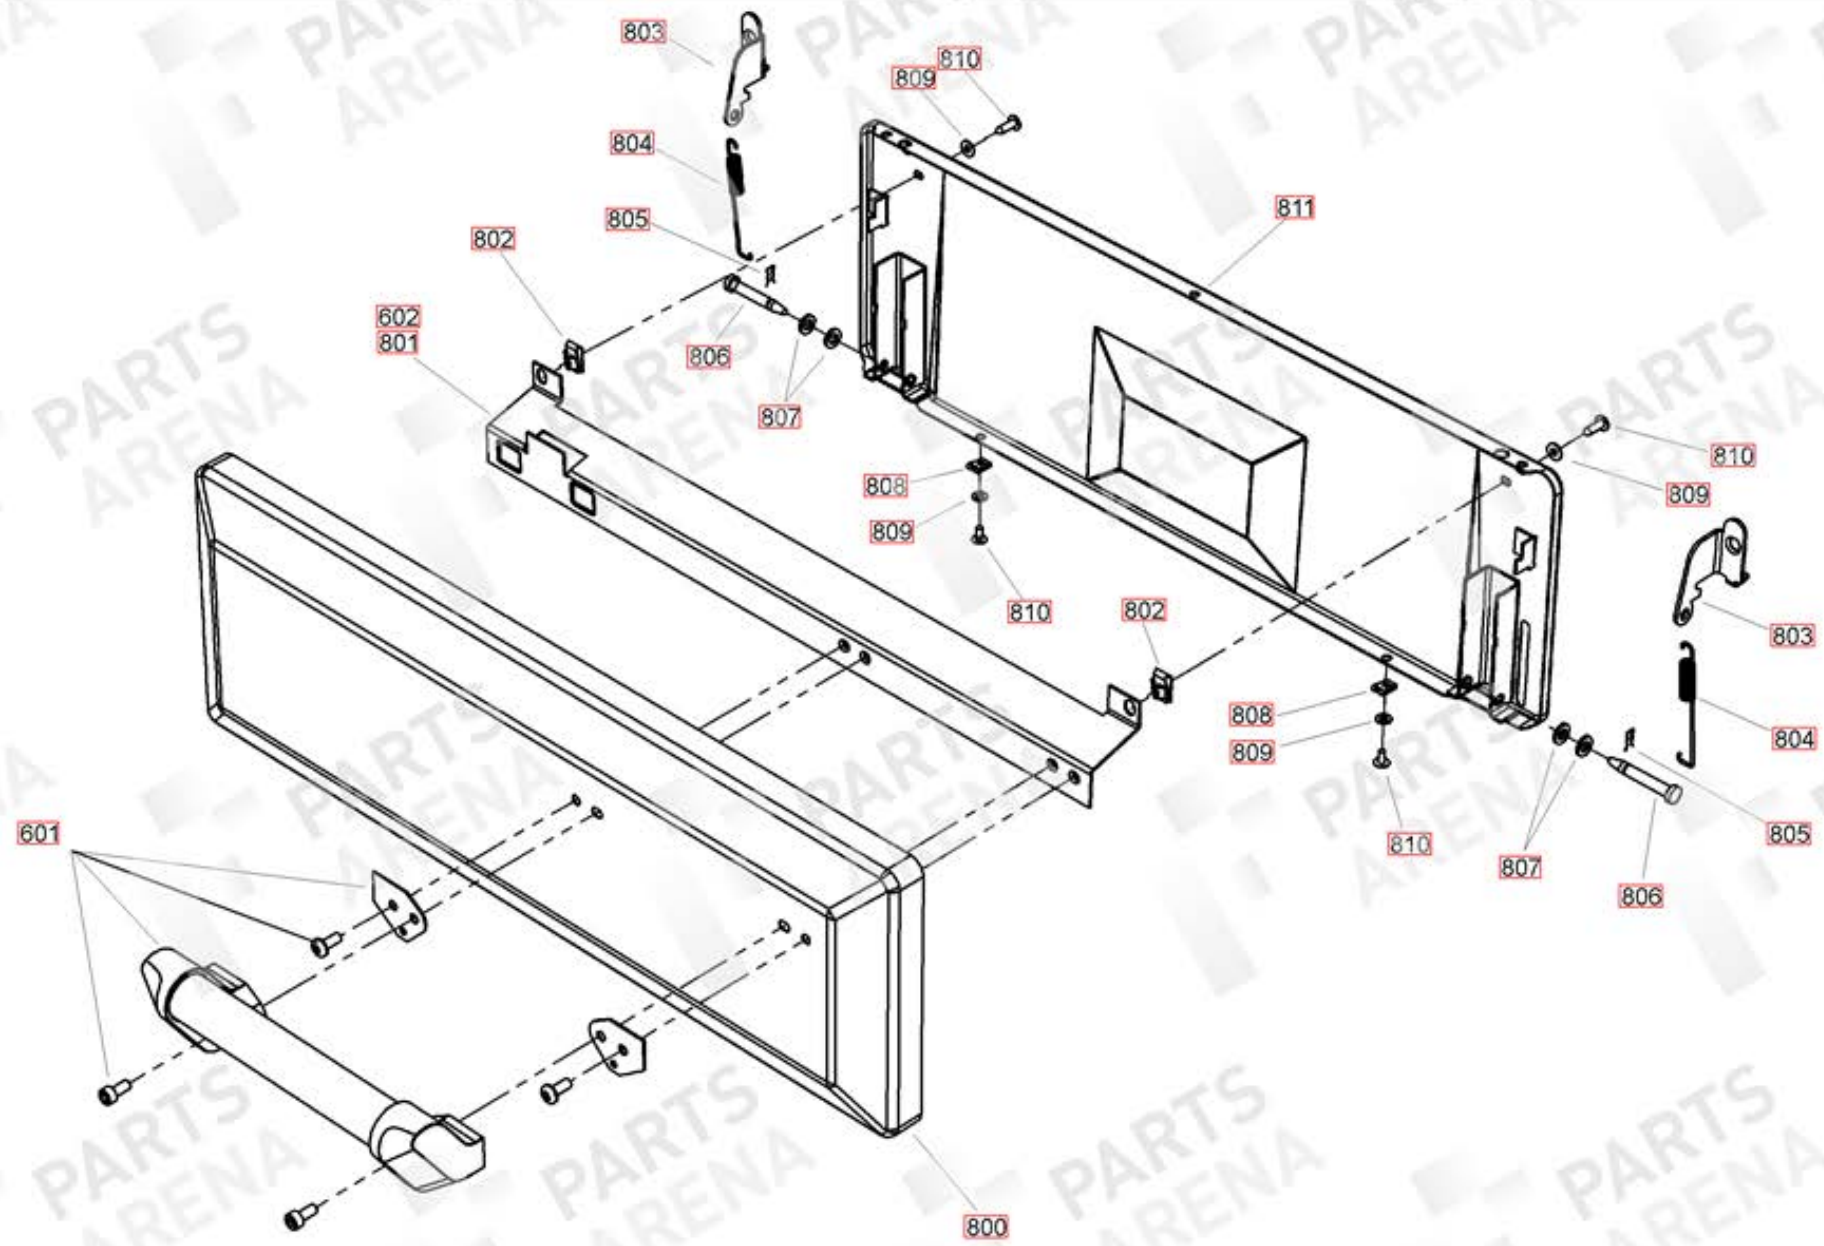

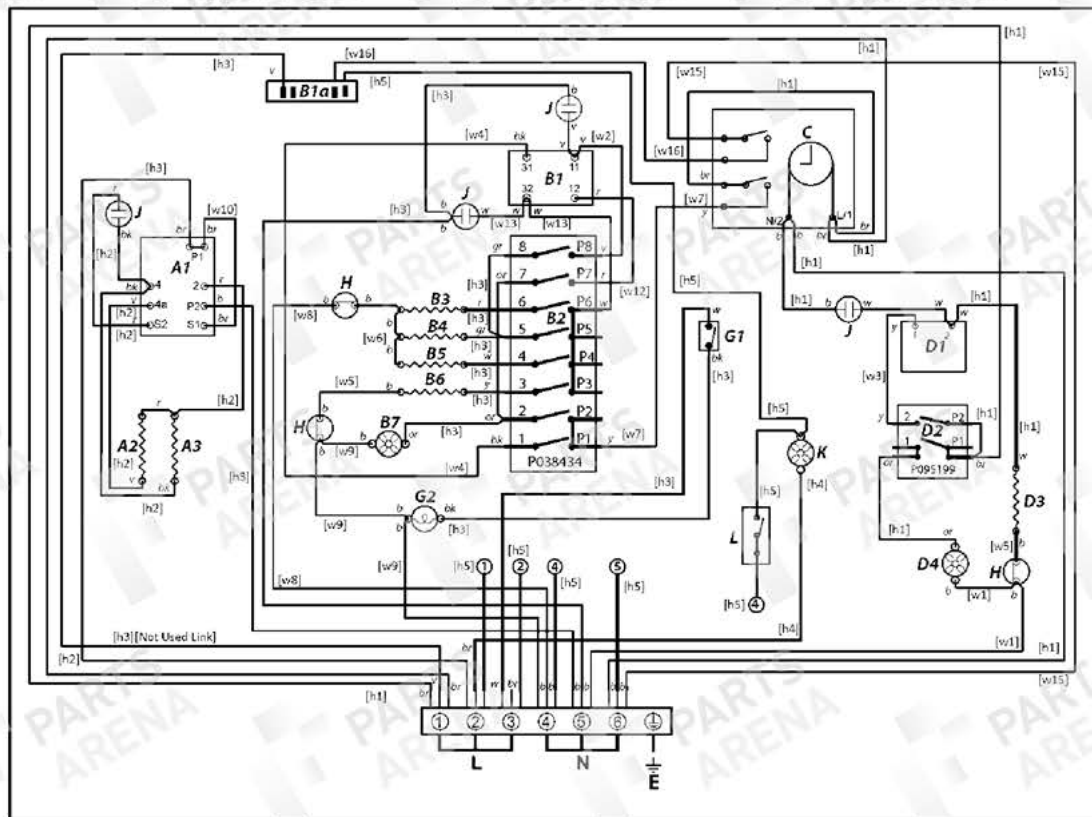

Key No	Ref Number	Part number	Quantity	Remarks
850	w1	P027733	1	Wire - RH OvenNeutral Link
851	w2	P033357	1	Wire - LH OVEN RAPID HEAT- NEON LINK
852	w3	P037863	1	Wire - RH OVEN FEED TO THERMOSTAT
870	w4	P038186	1	Wire - FEED LH OVEN SWITCH-RAPIDE HEAT STAT
853	h1	P038908	1	Harness Assembly - RH OVEN HARNESS
854	w5	P040066	2	Wire - OVEN OVERHEAT STAT LINKS L-RH
855	w6	P040694	1	Wire - BASE ELEMENT TOP ELEMENTS NEUTRAL
856	h2	P045282	1	Harness Assembly - Grill Element Energy Reg Link
857	h3	P048082	1	Harness Assembly - LH Oven MF Harass
858	w7	P048532	1	Wire - Clock to MF Oven Feed
859	w8	P042916	1	Wire - Terminal Block to Cut Out Top Elements LH Oven
860	h4	P050508	1	Wire - Cooling Fan Feed
861	w9	P050986	1	Wire - Neutral LH Oven Link
862	w10	P055344	1	Wire - Energy Reg Link Neon Feed Grill
863	w11	P055374	2	Wire (N1) - Grill Earth
864	w12	P040719	1	Wire - MF switch to Rapid Heat Thermostat
865	w13	P095555	1	Wire - LH Oven MF Neon Link
866	w14	P094943	3	Wire - Oven Thermostat Earth Links
867	h5	P051915	1	Harness Assembly - Mains terminal Block to Induction Unit Connector
868	w15	P051916	1	Wire - Neutral 2nd Clock Relay - Cooling Fan Control
869	w16	P051917	1	Wire - Neutral_Clock to LH Oven Switch
871	w17	P045284	1	Wire (N1) - Protective Earth LH Oven
872	w18	P052073	1	Wire (N1) - Hob Earth to Chassis

Code	Description
A1	Grill Control
A2	Grill Element Left Hand Side
A3	Grill Element Right Hand Side
B1	Left Hand MF Oven Thermostat
B1a	Left Hand MF OvenThermostat Switch
B2	Left hand MF Oven Function Control
B3	Left Hand MF Oven Base Element
B4	Left Hand MF Oven Top Element (Outer)
B5	Left Hand MF Oven Top Element (Inner)
B6	Left hand MF Oven Fan Element
B7	Left Hand MF Oven Fan

Code	Description
C	Clock
D1	Right Hand Fan Oven Thermostat
D2	Right Hand Fan Oven Control Switch
D3	Right Hand Fan Oven Element
D4	Right Hand Fan Oven Fan
G1	Oven Light Switch
G2	Oven Light
H	Thermal Cut Out
K	Cooling Fan
L	Induction Relay
J	Neon

Code	Colour
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
g/y	Green/Yellow
gr	Grey