




**GAS RAIL / TAPS / INJECTORS & PIPES**

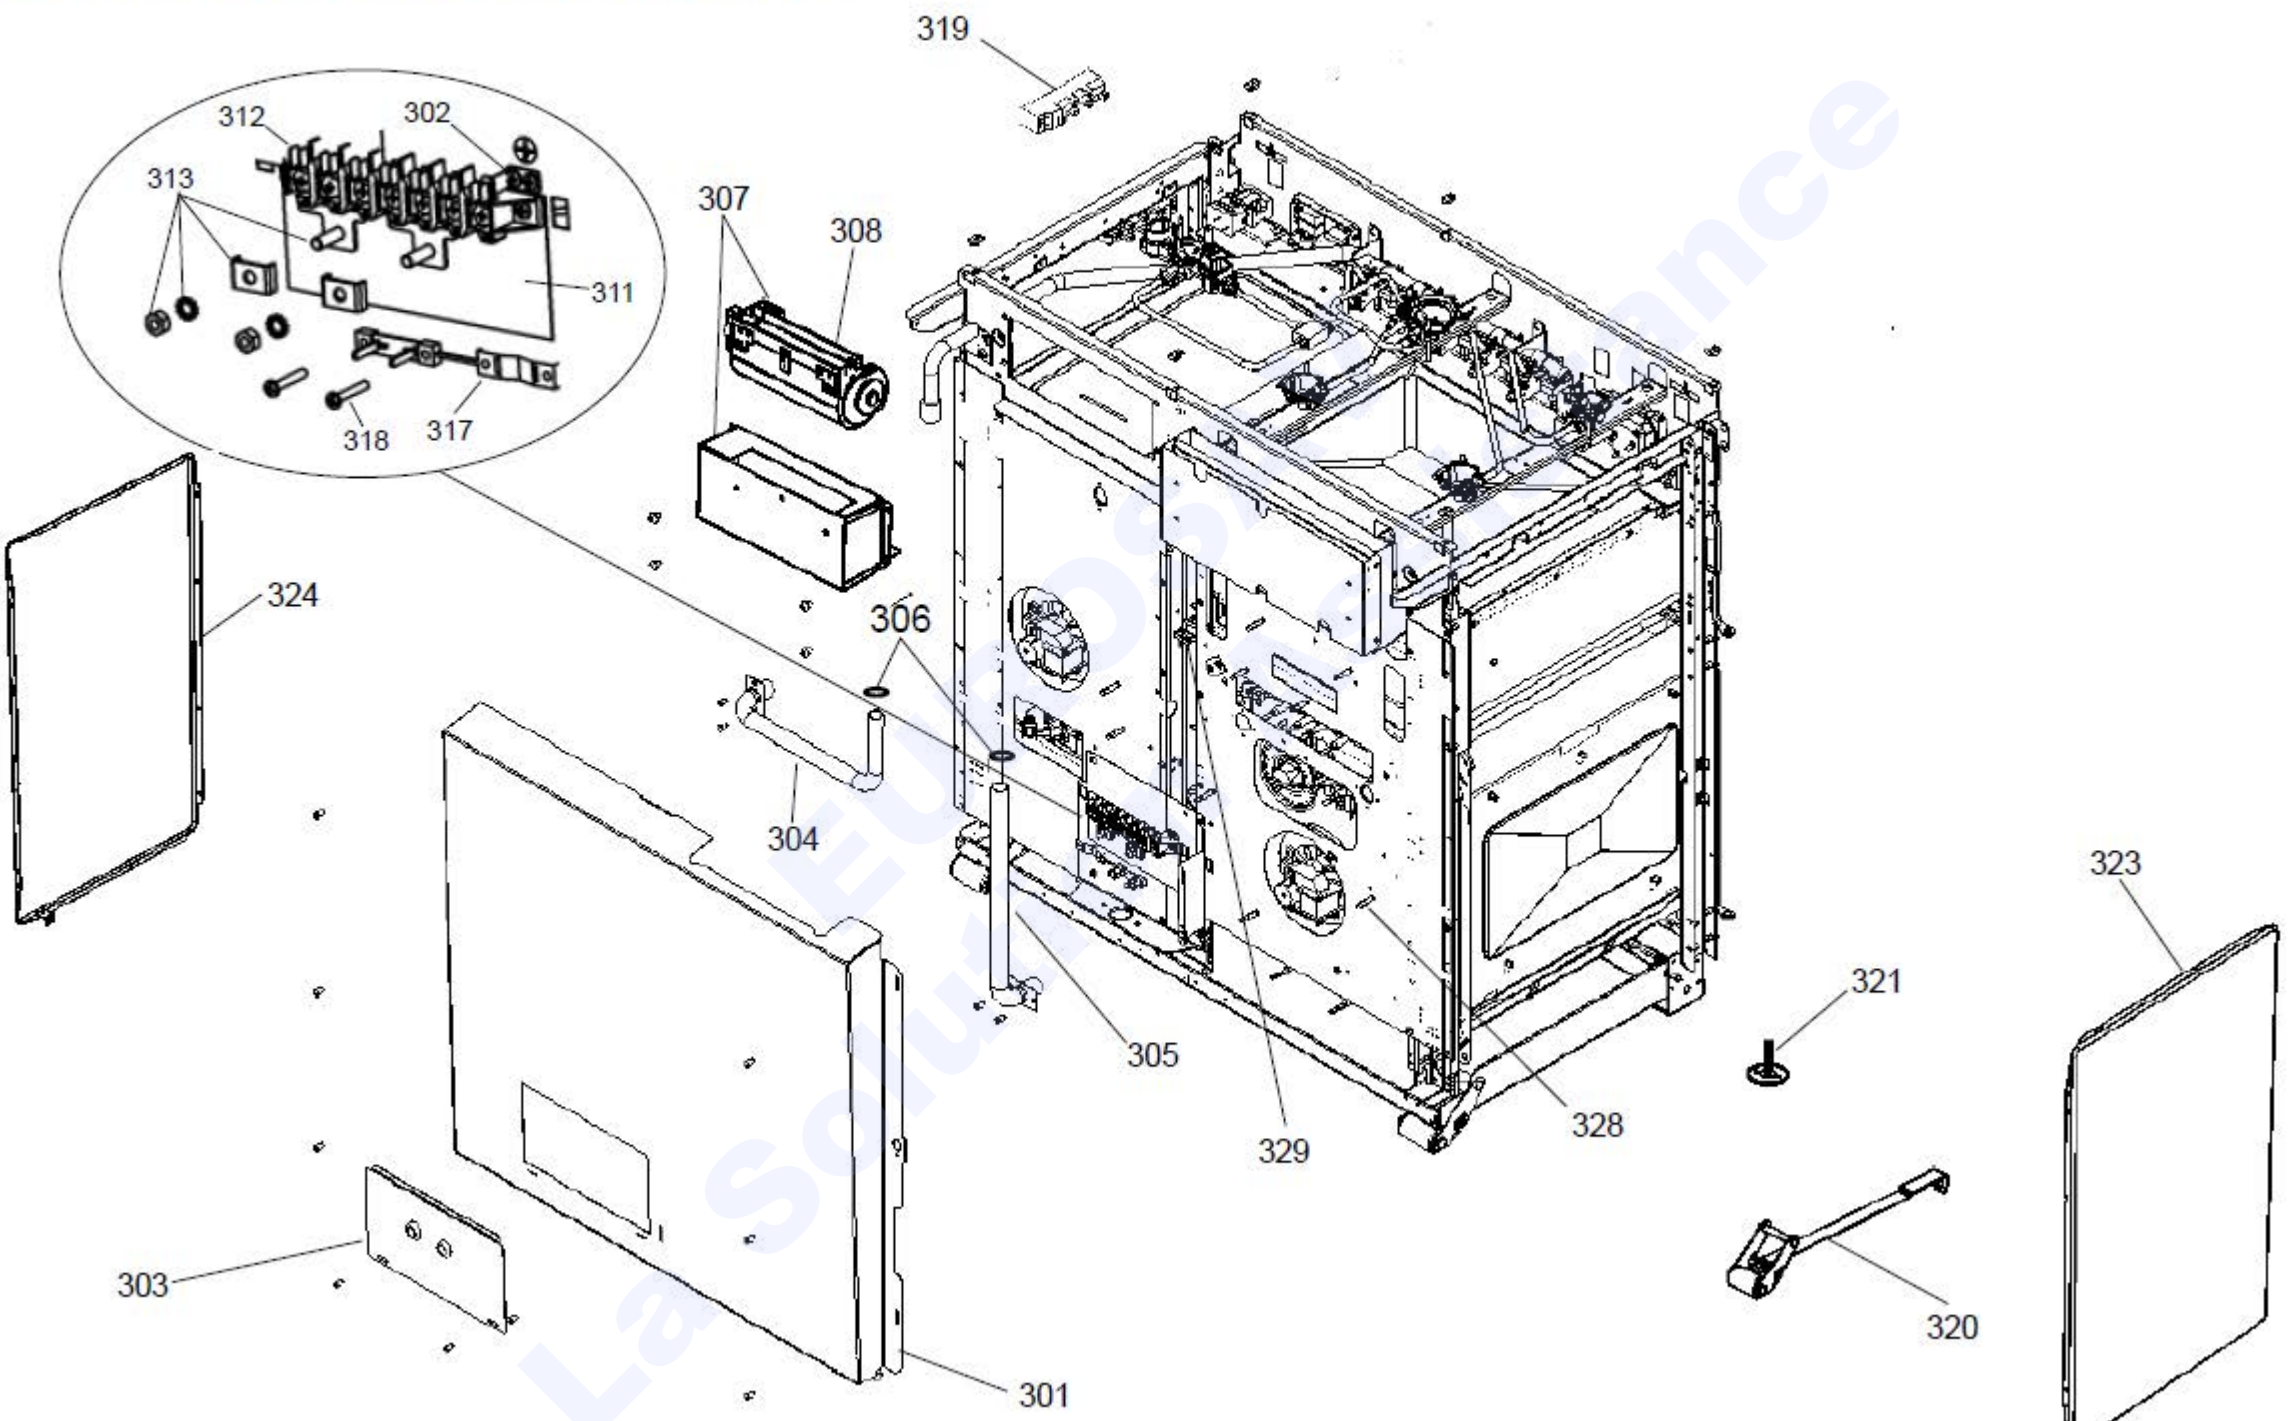


CHASSIS ASSEMBLY

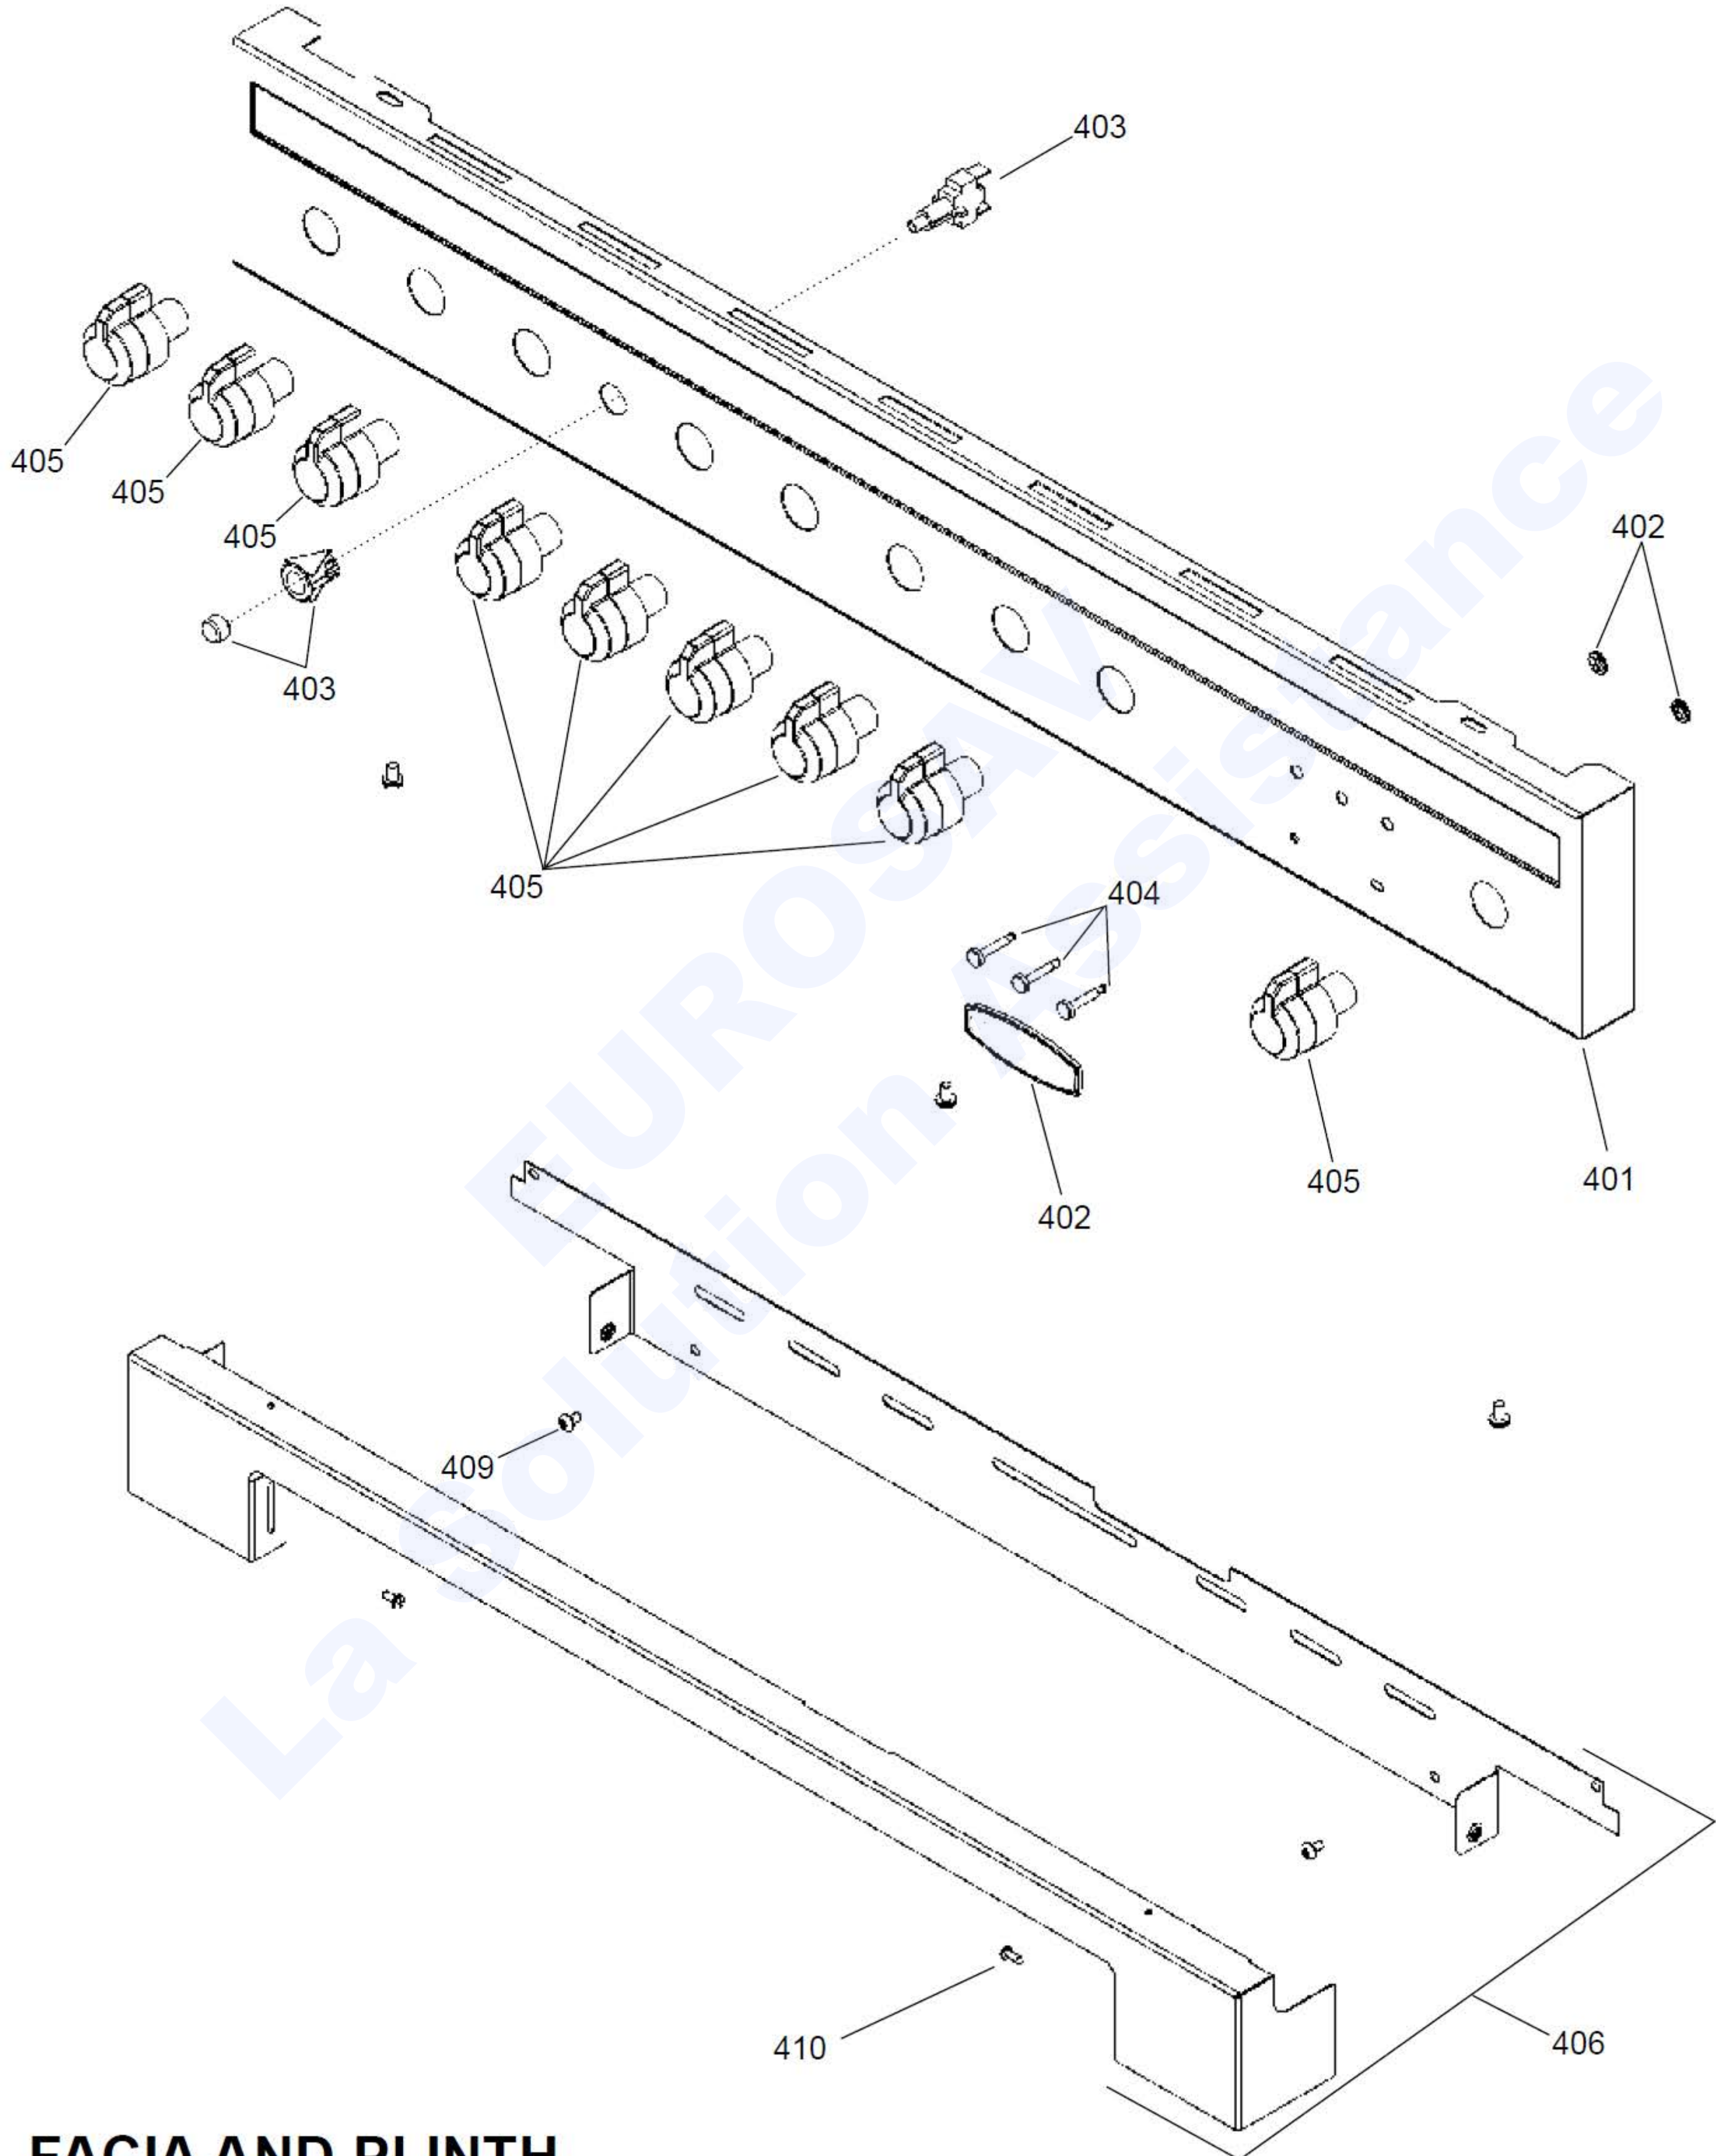


**FACIA AND PLINTH**

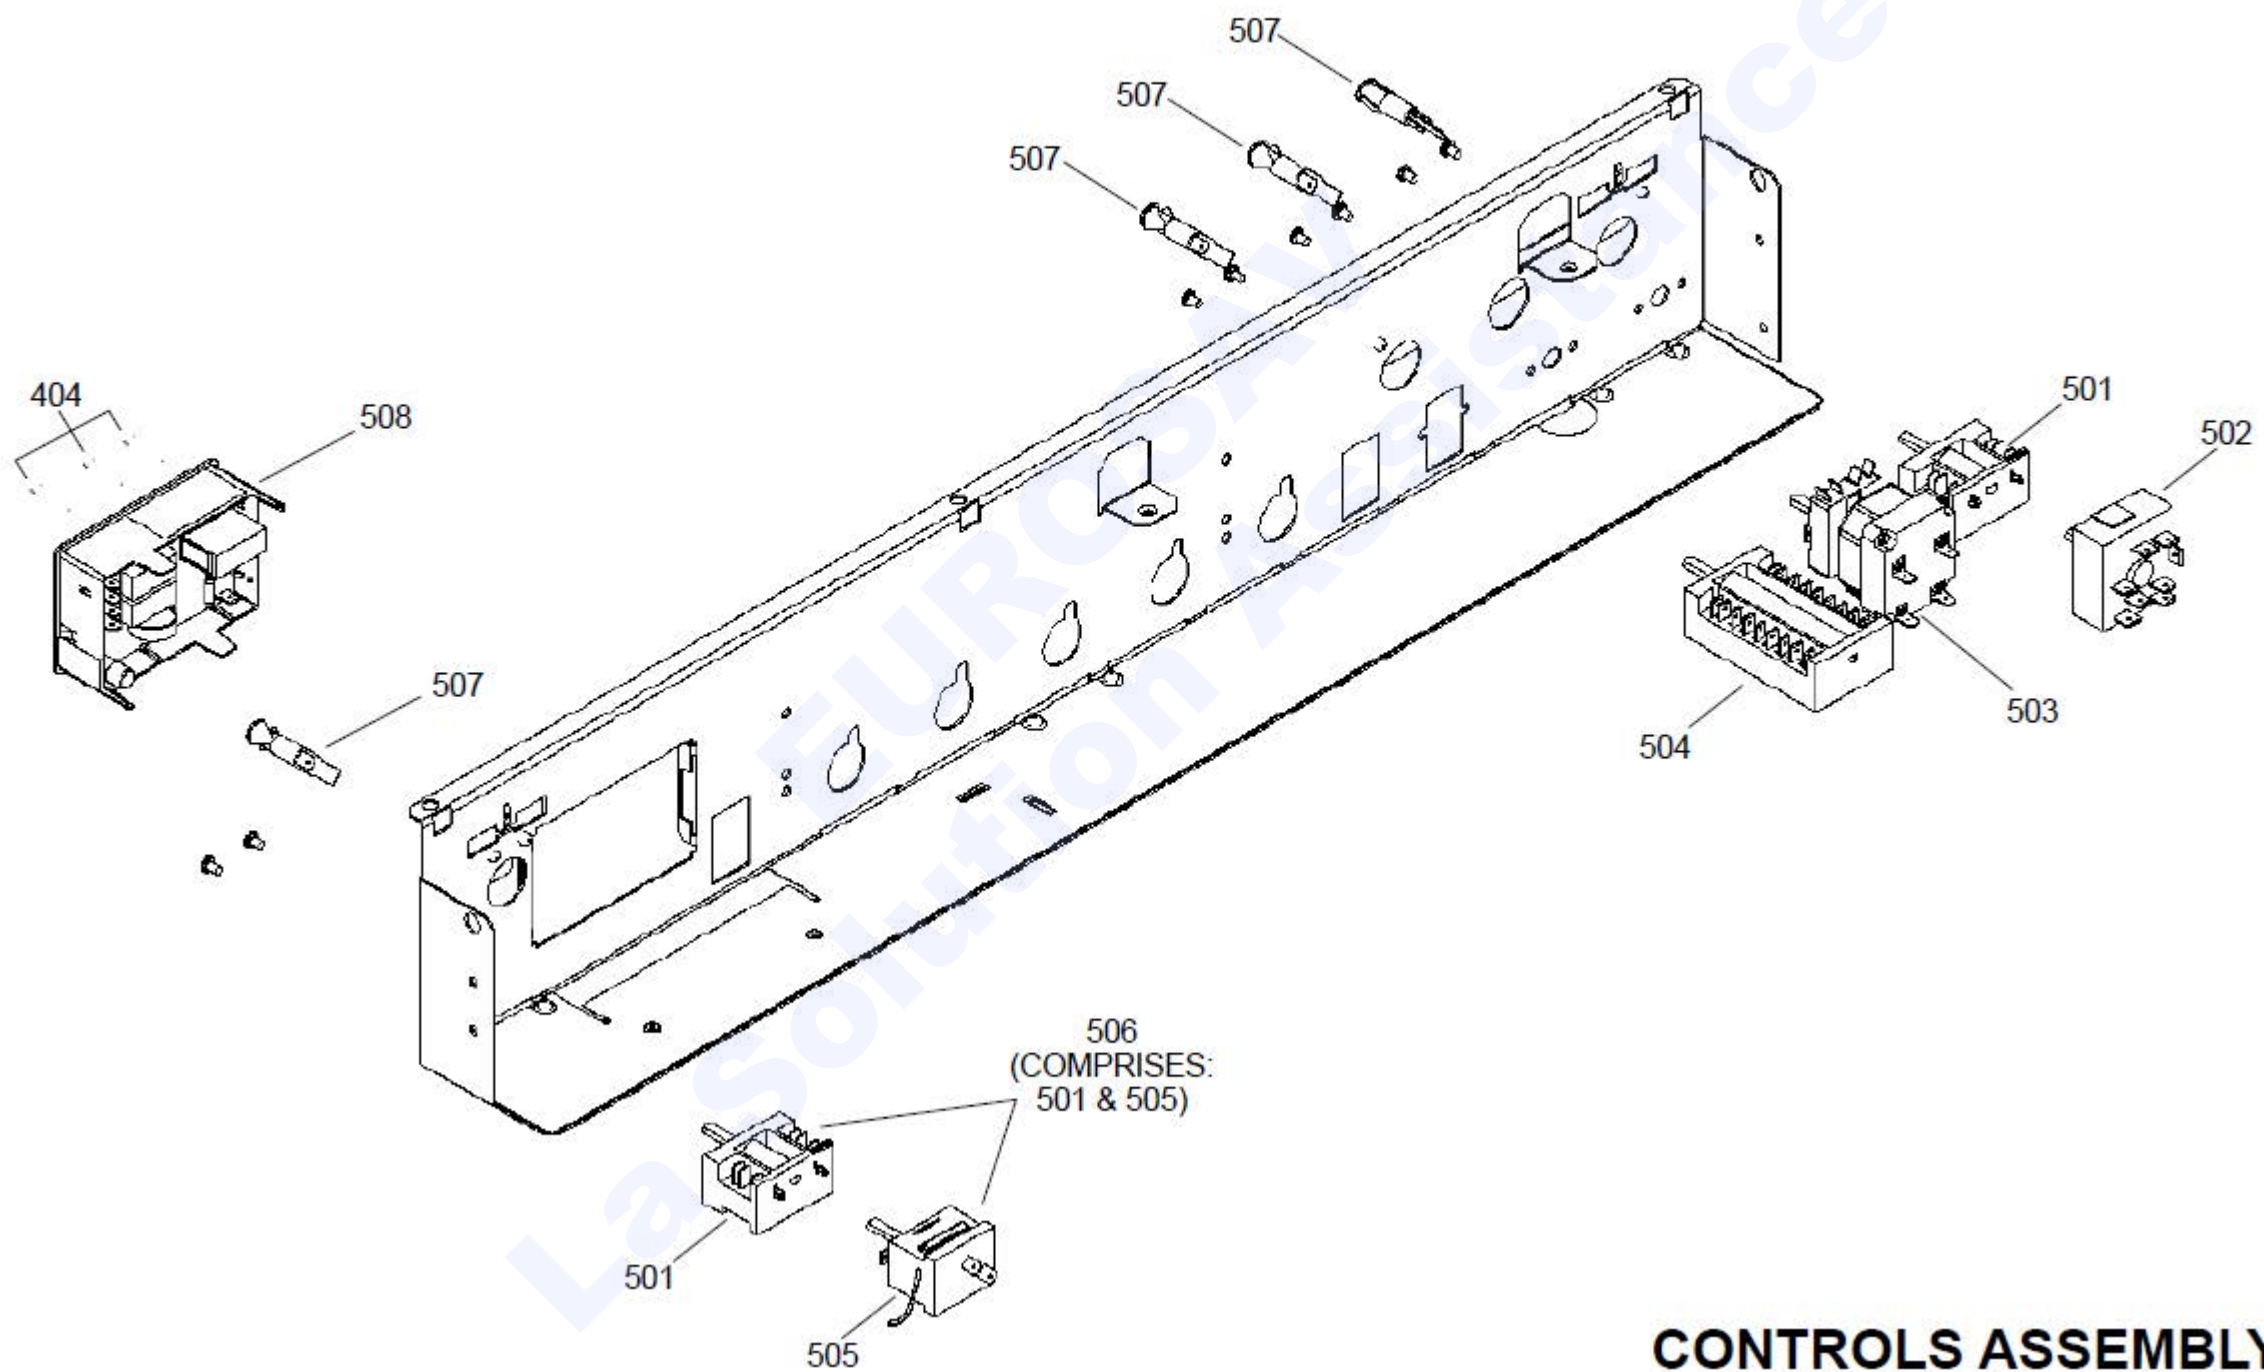

**CONTROLS ASSEMBLY**

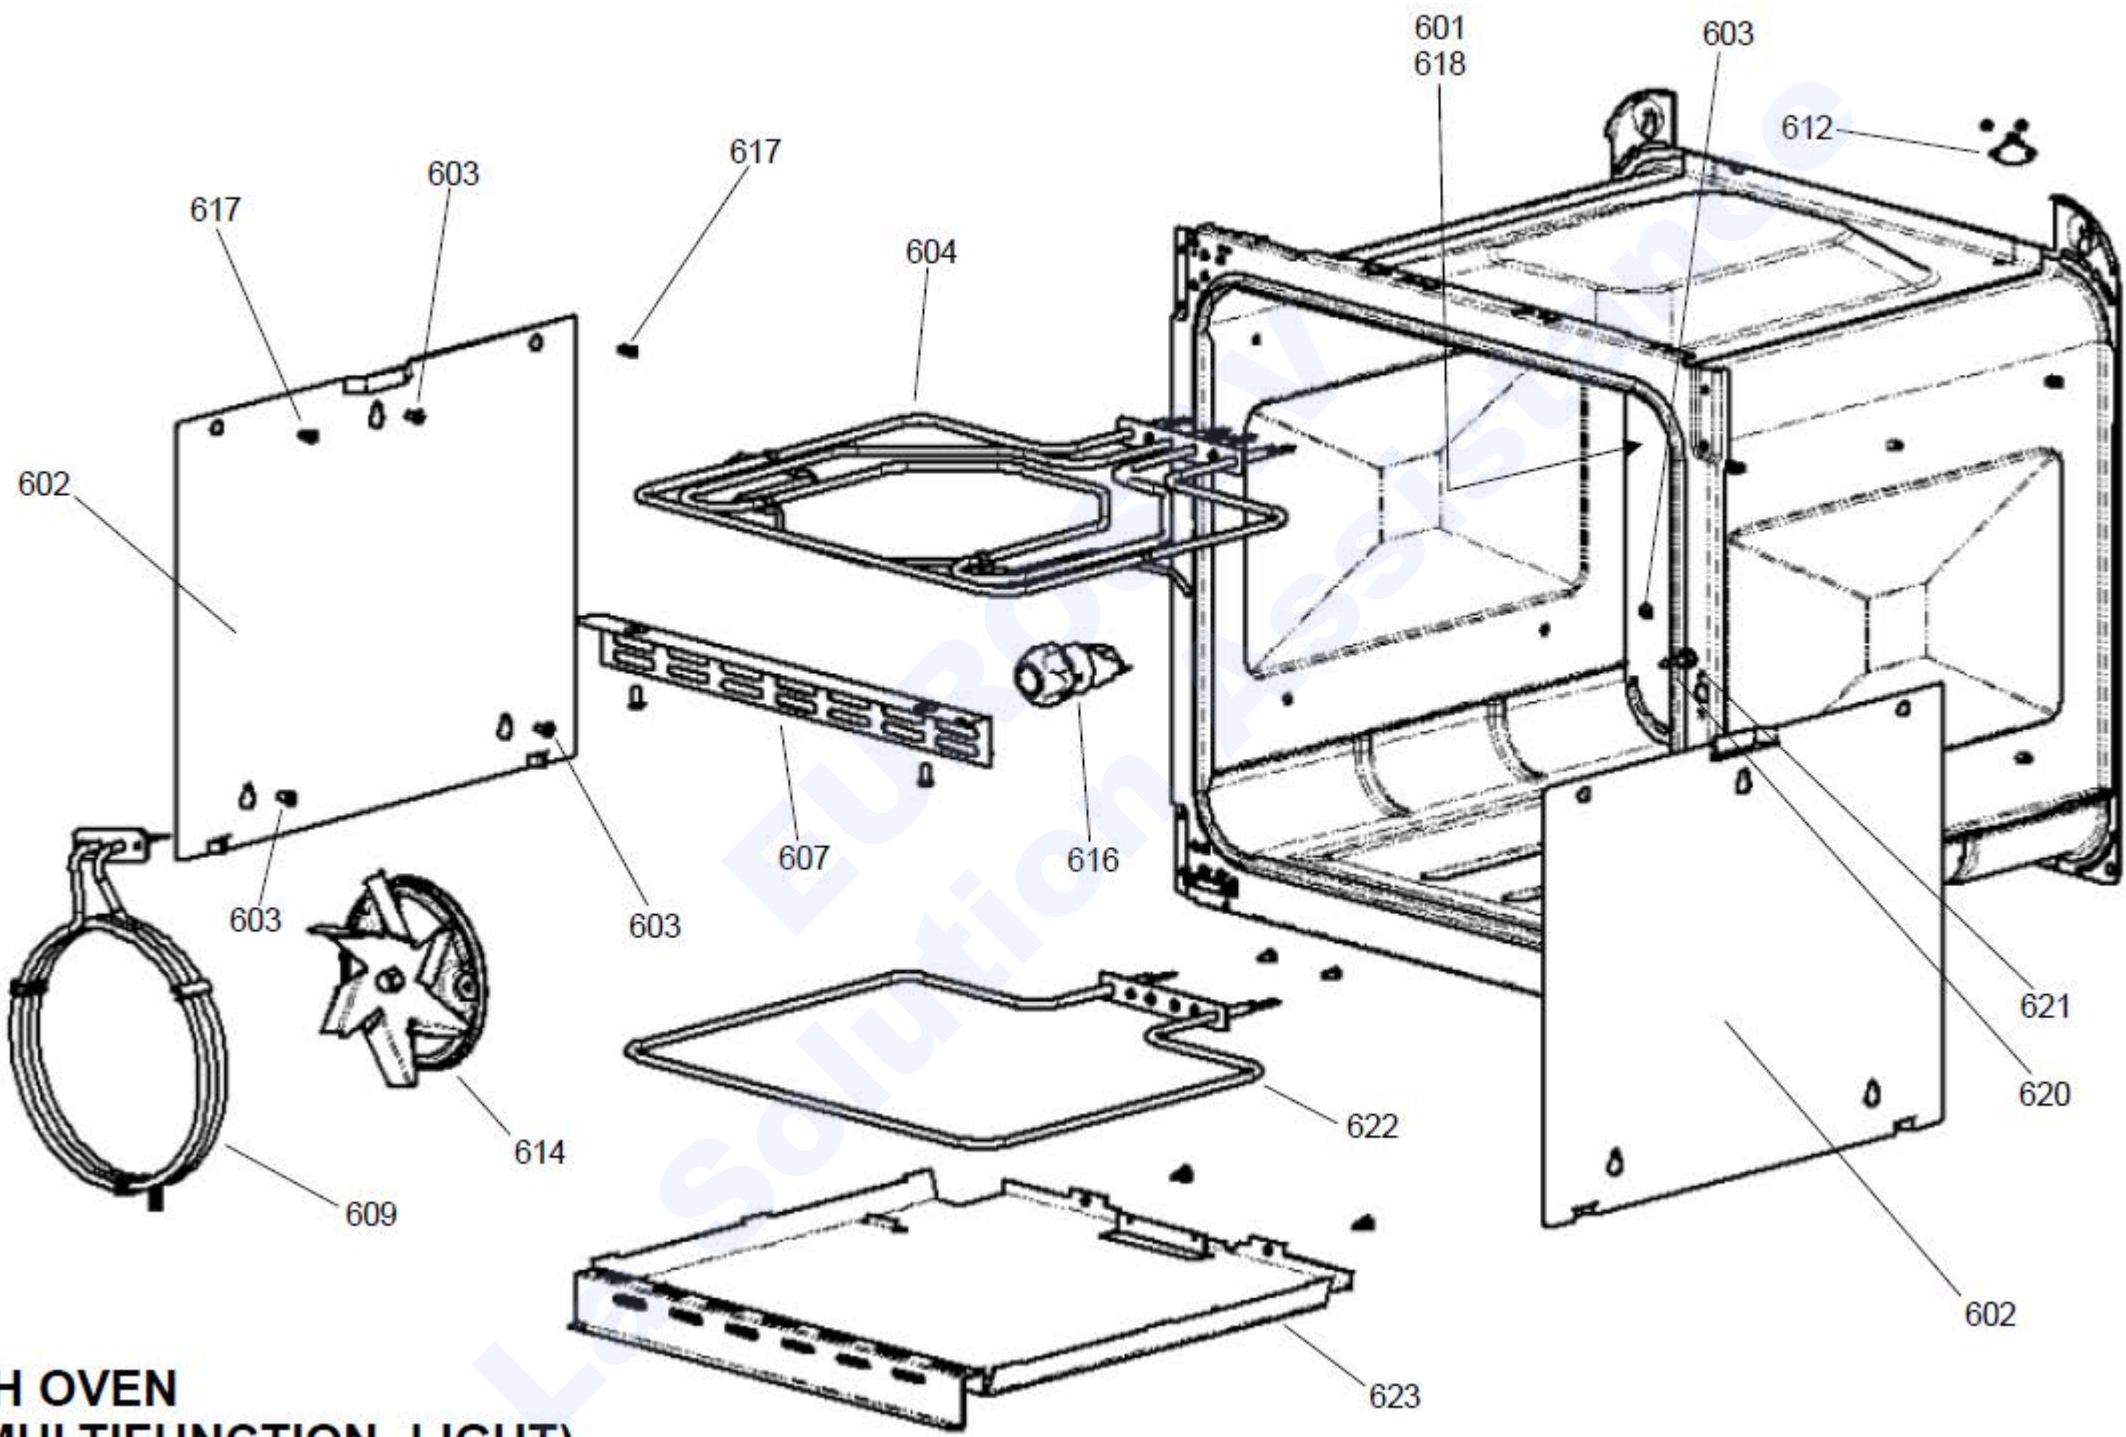


LH OVEN  
(MULTIFUNCTION- LIGHT)

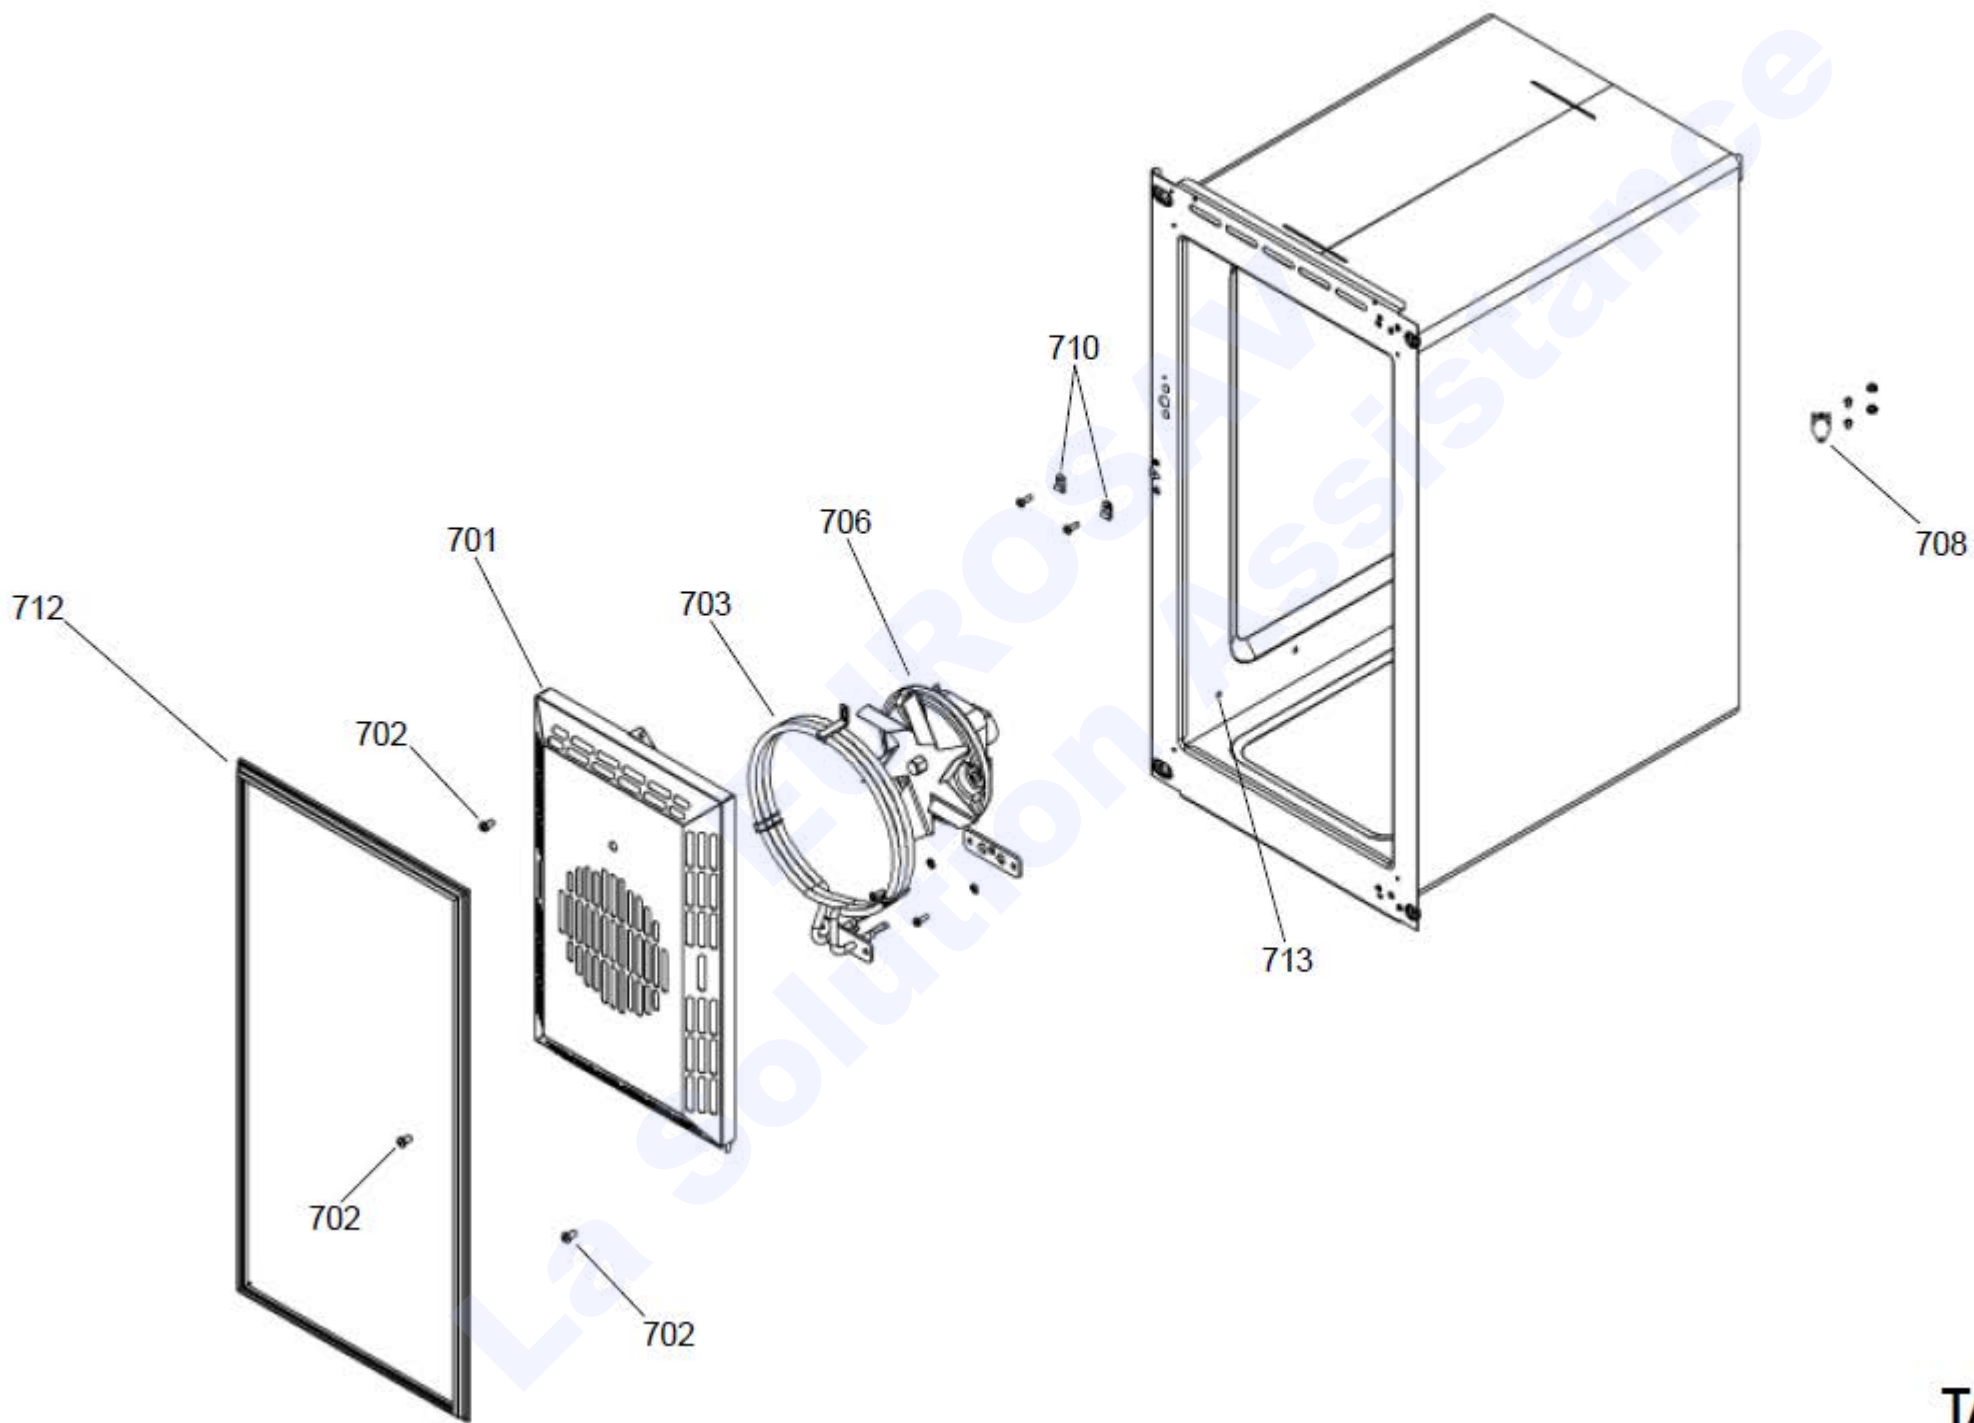


**TALL OVEN**




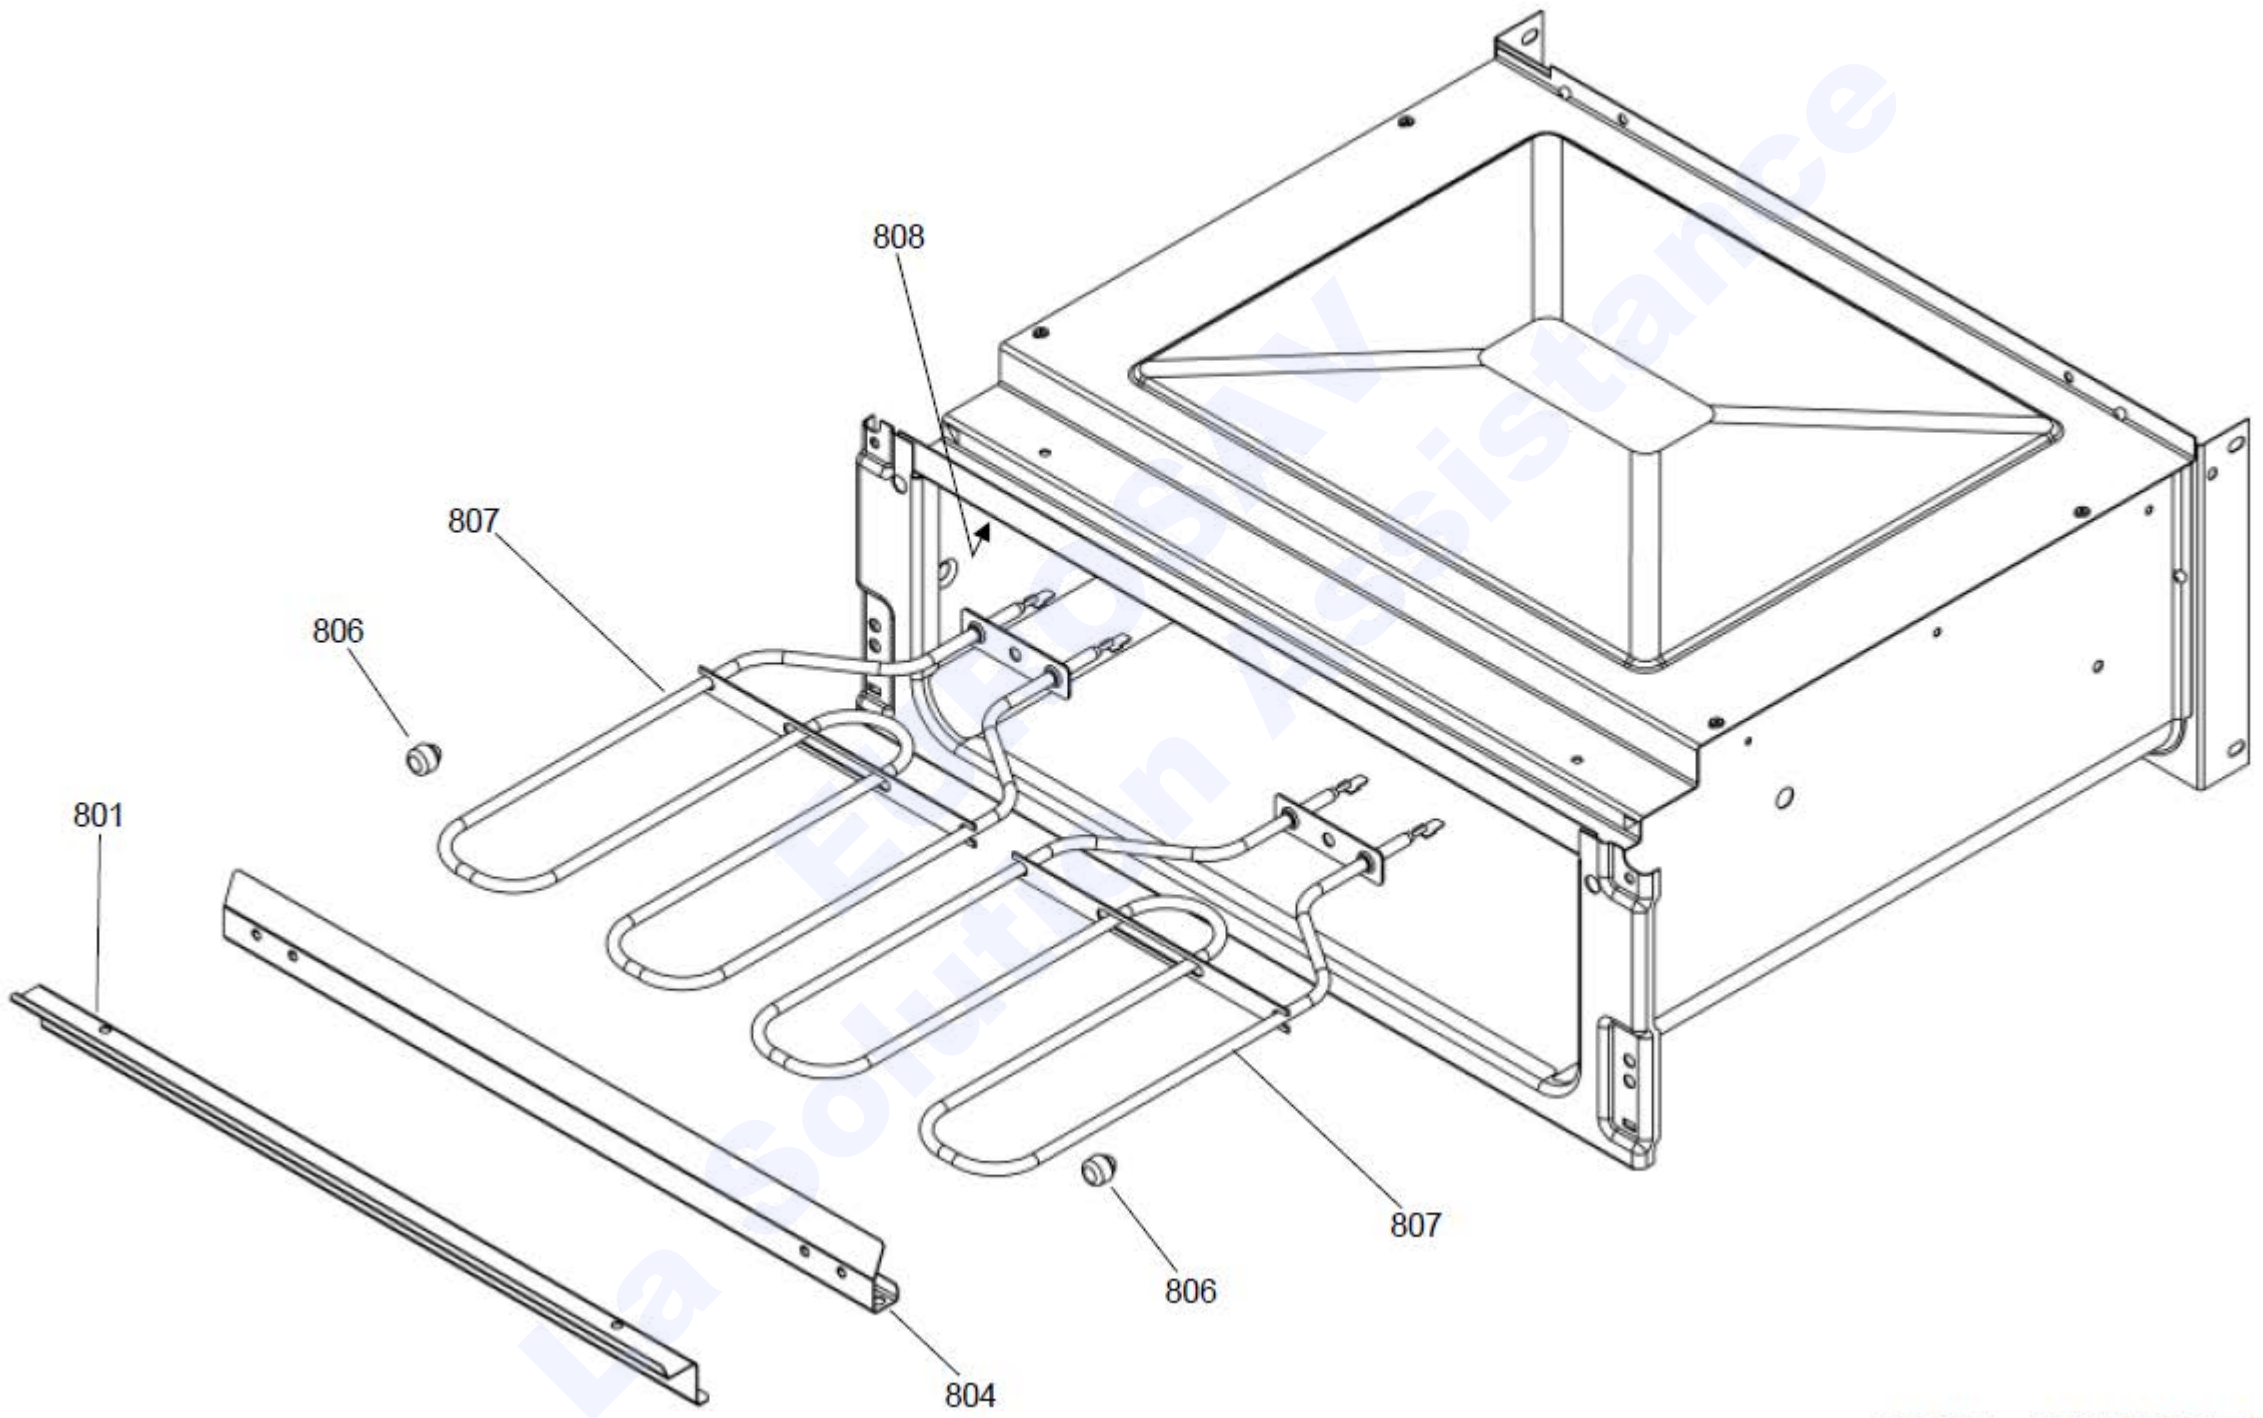



GRILL CHAMBER

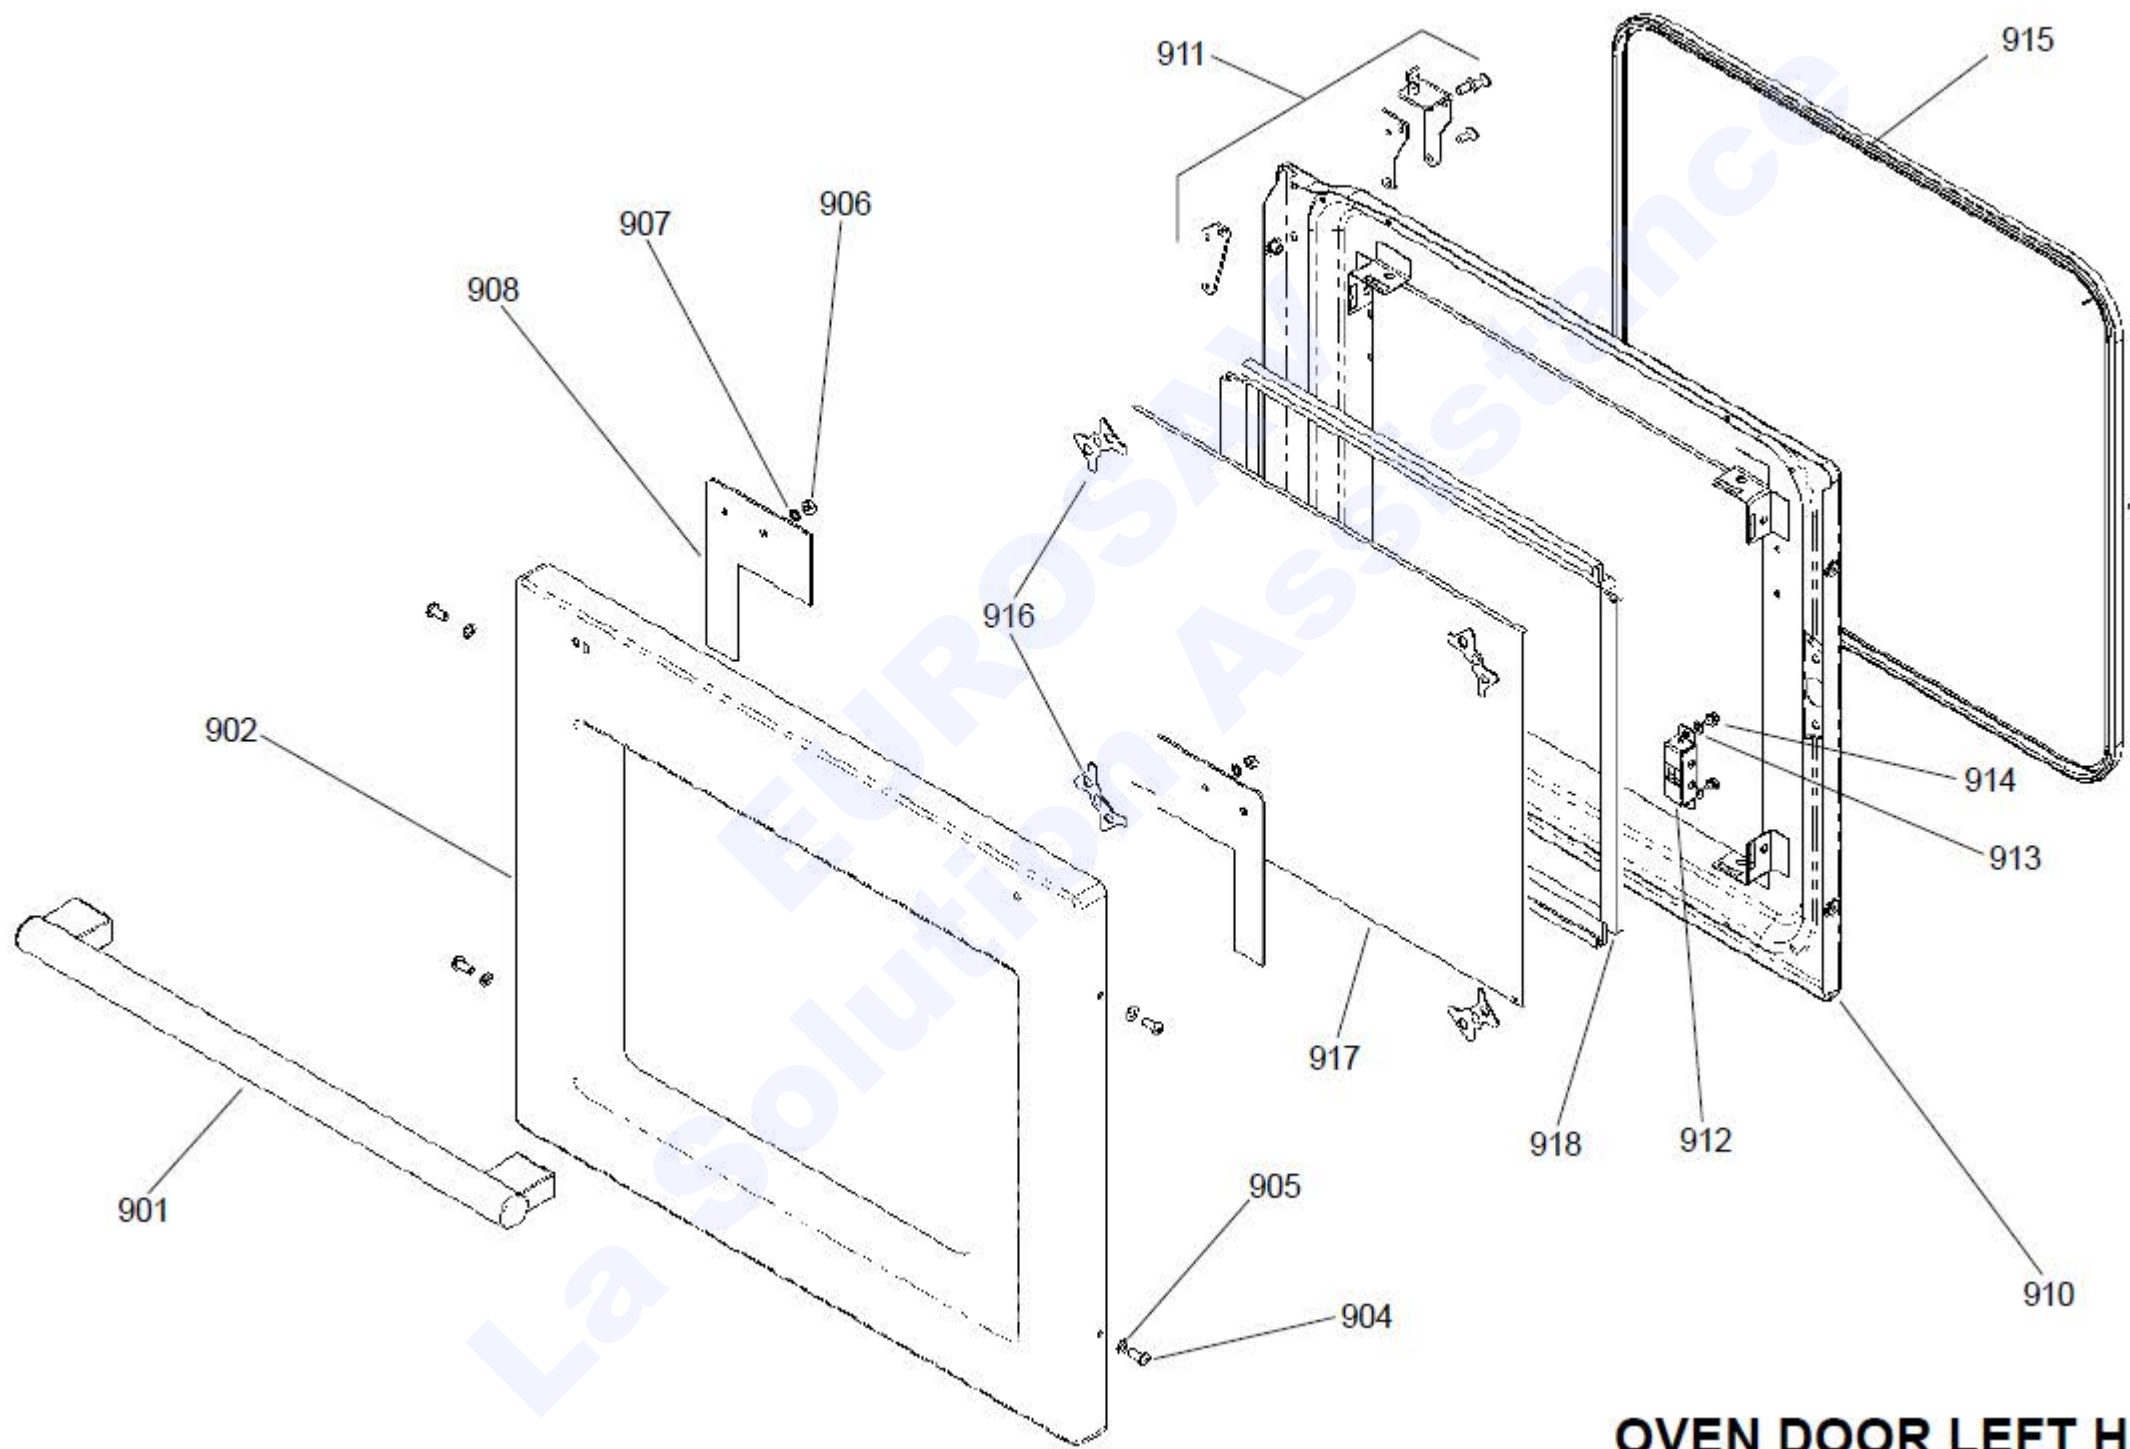


OVEN DOOR LEFT HAND

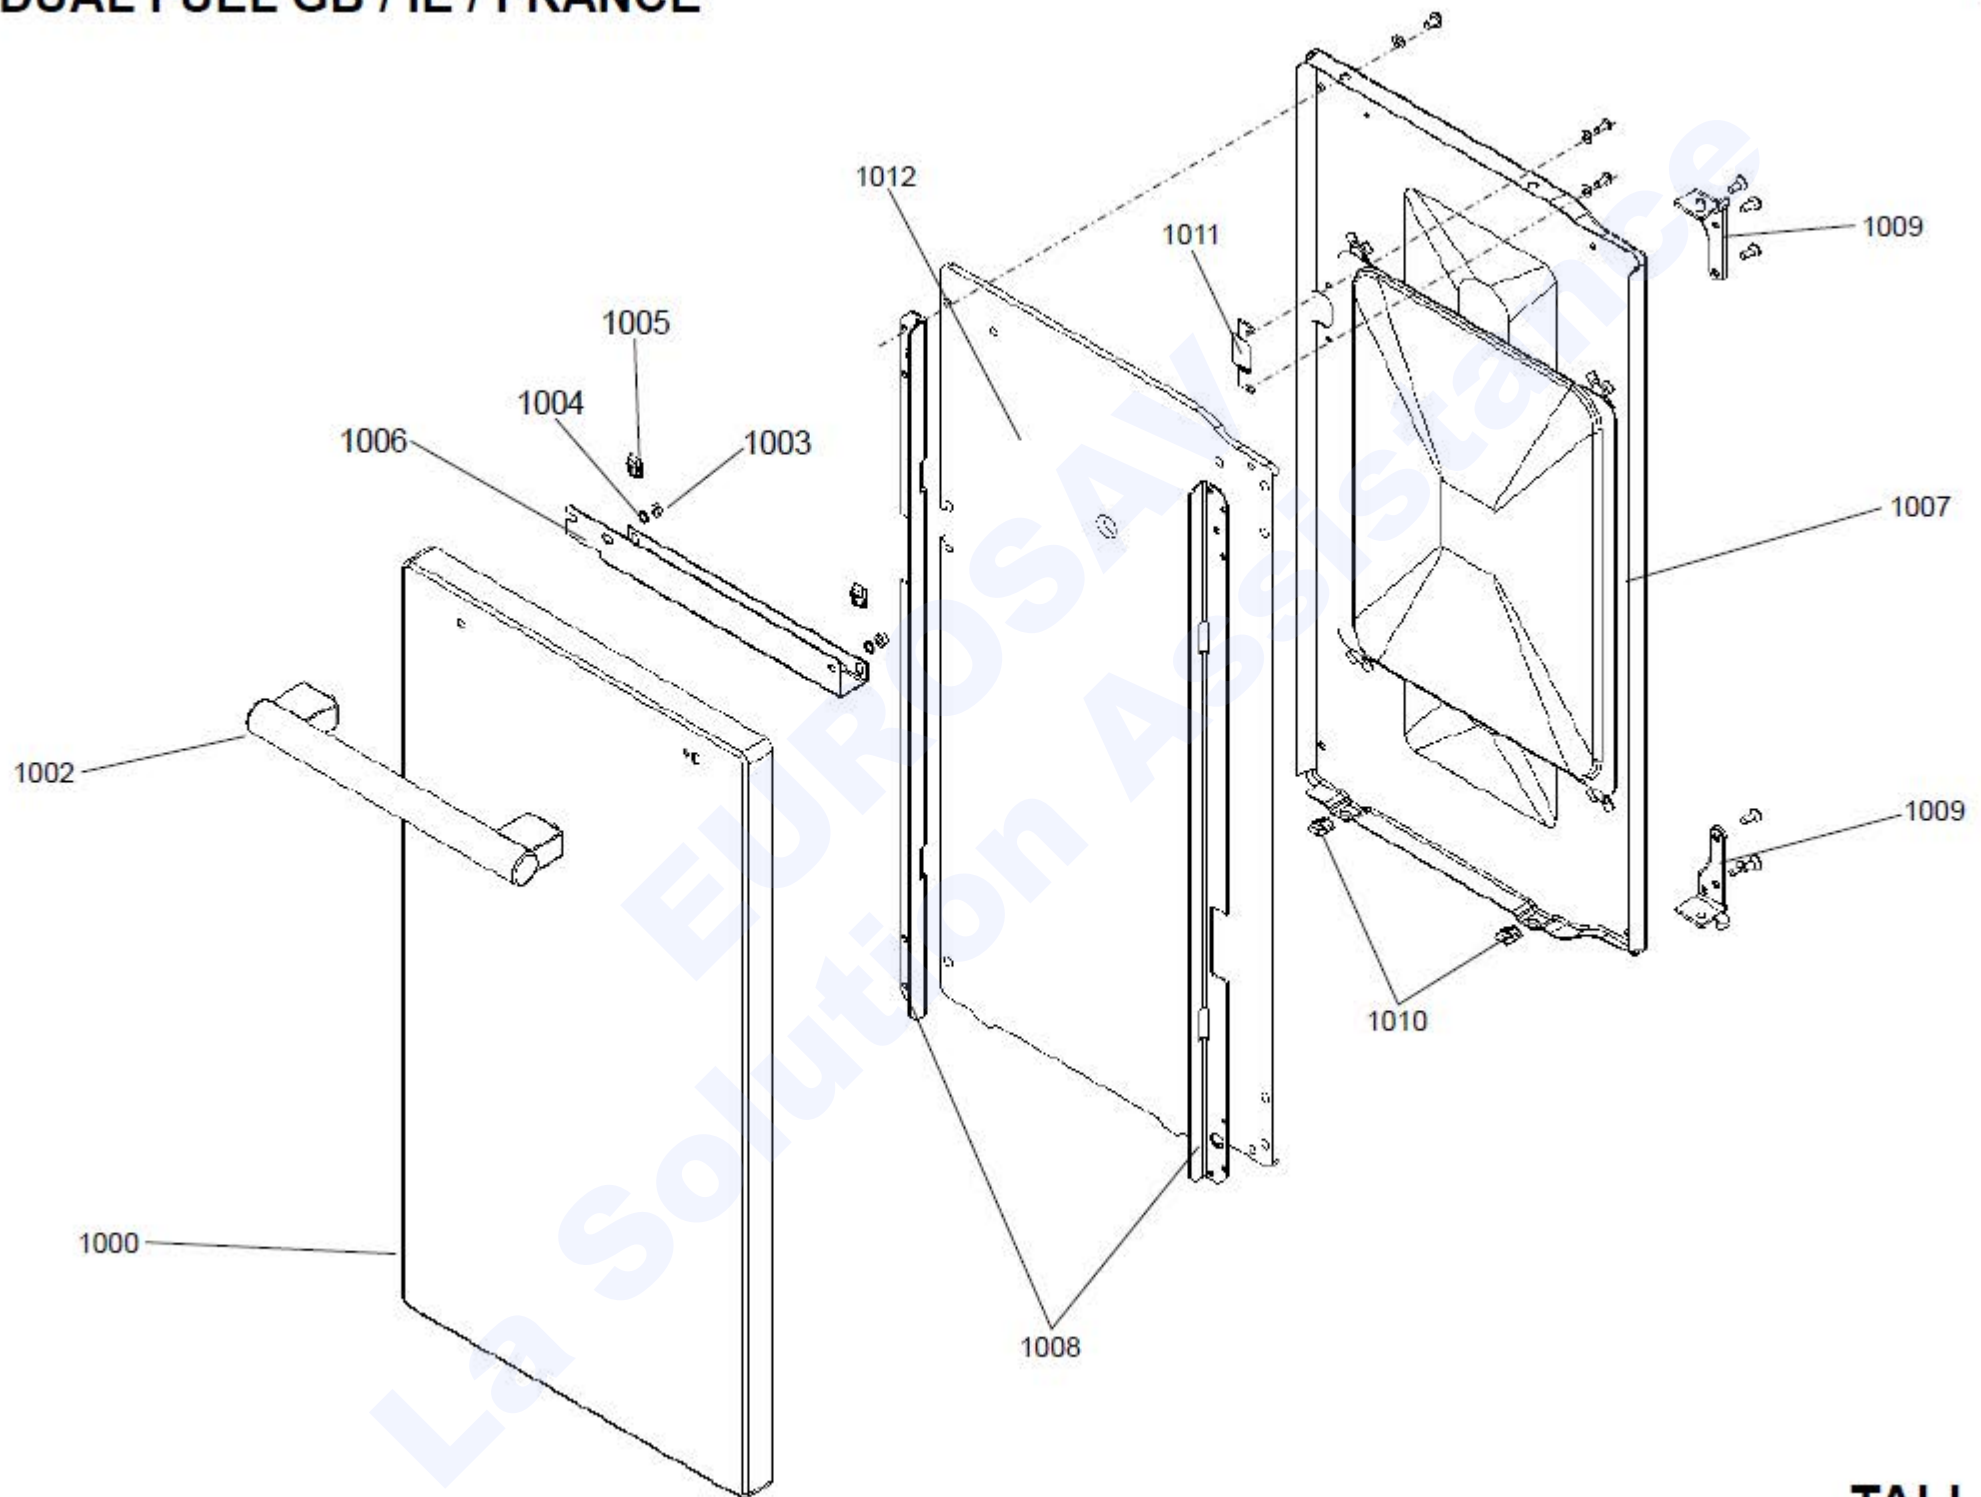

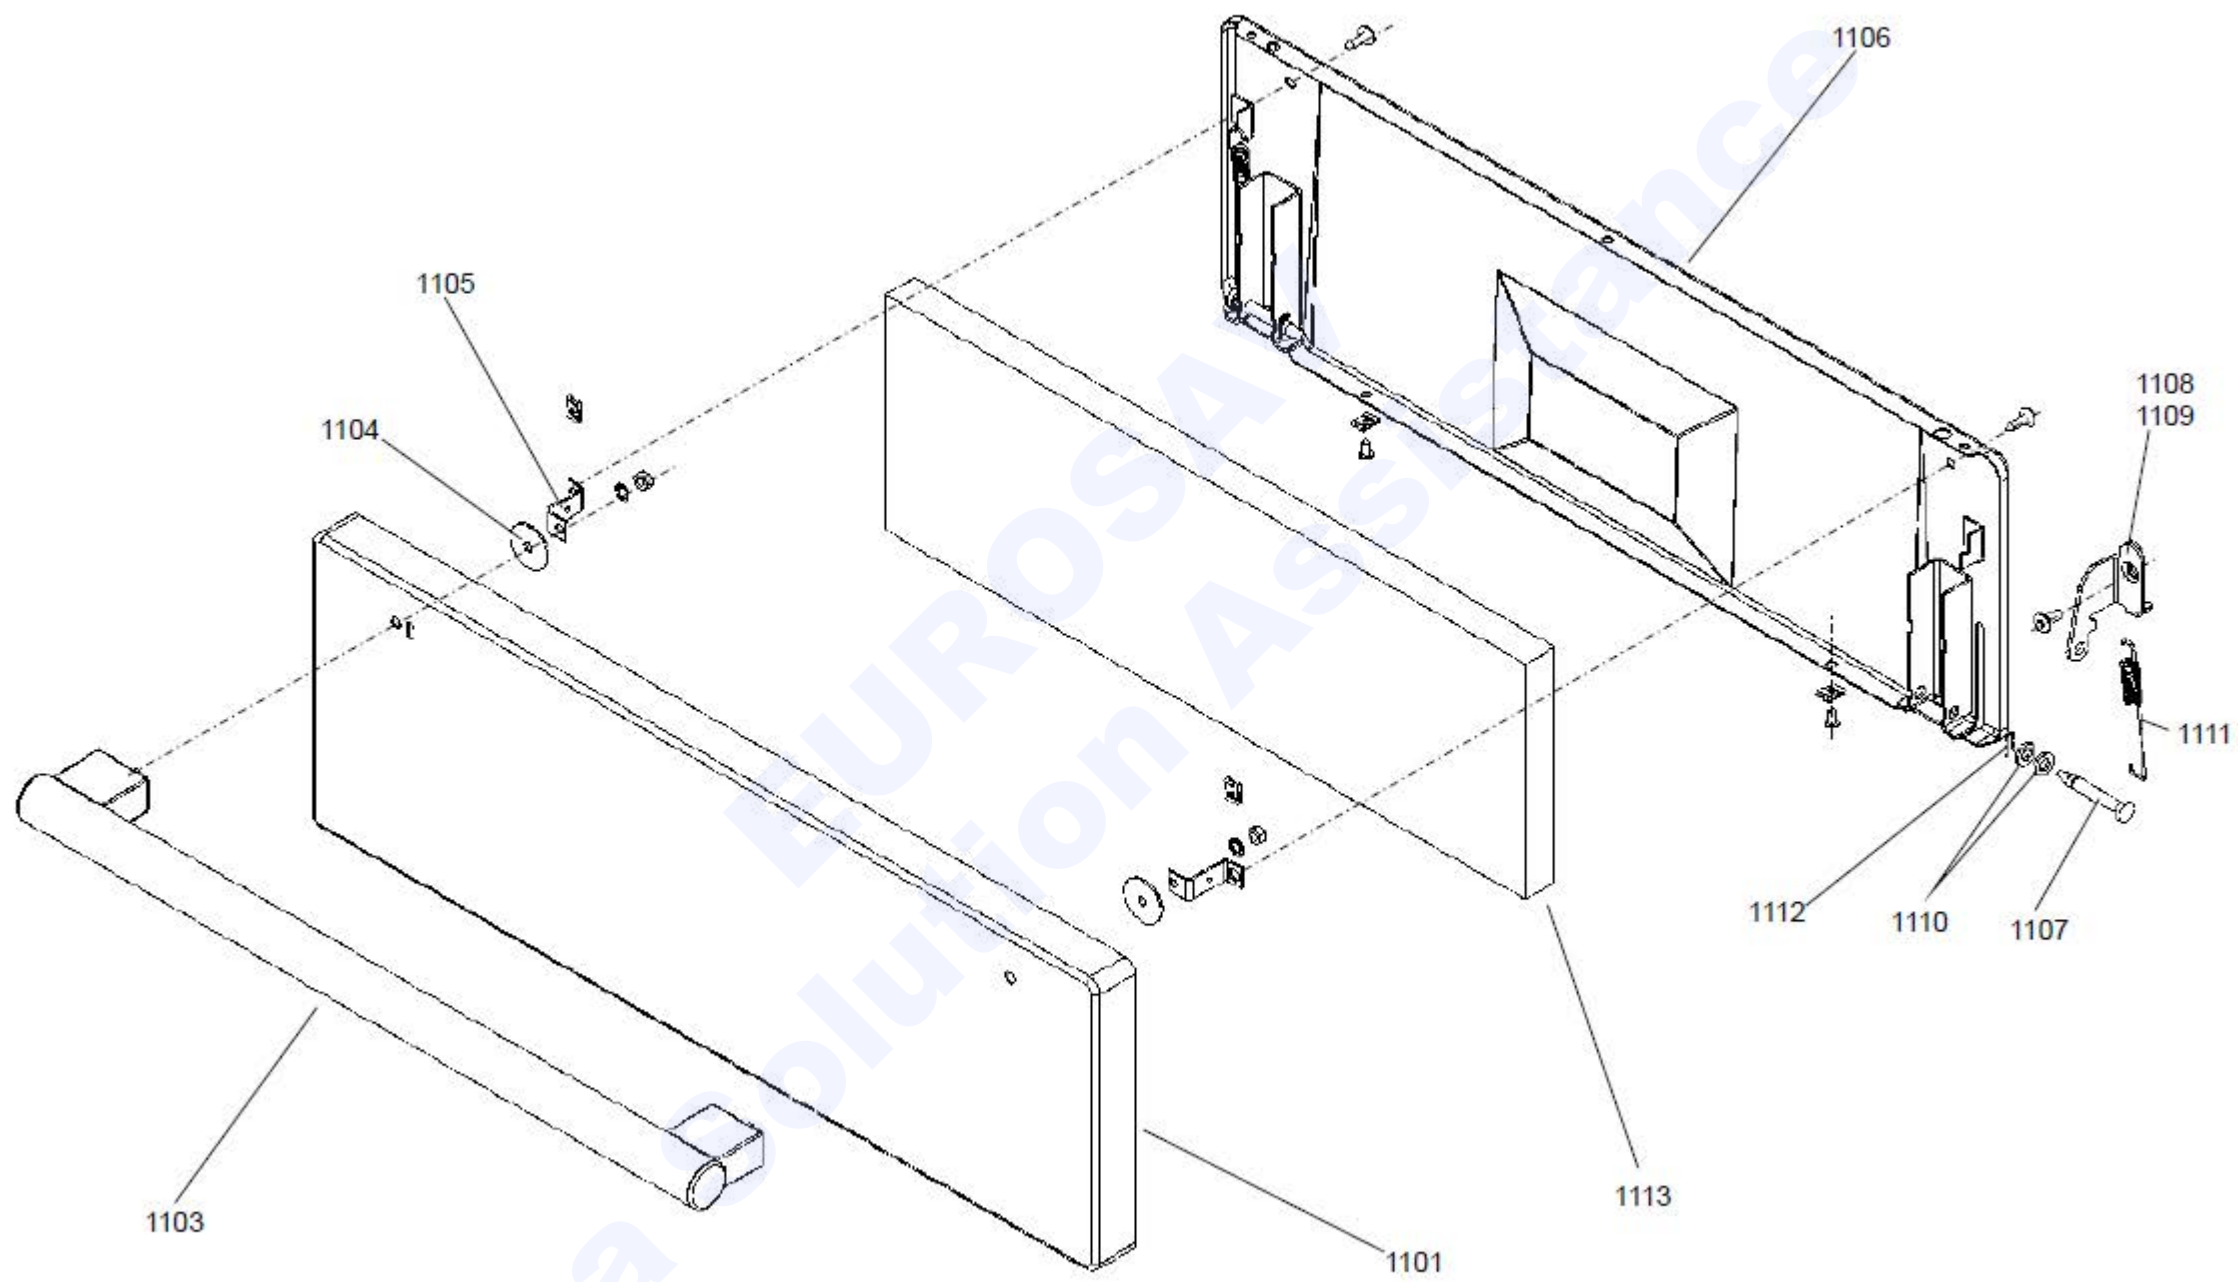


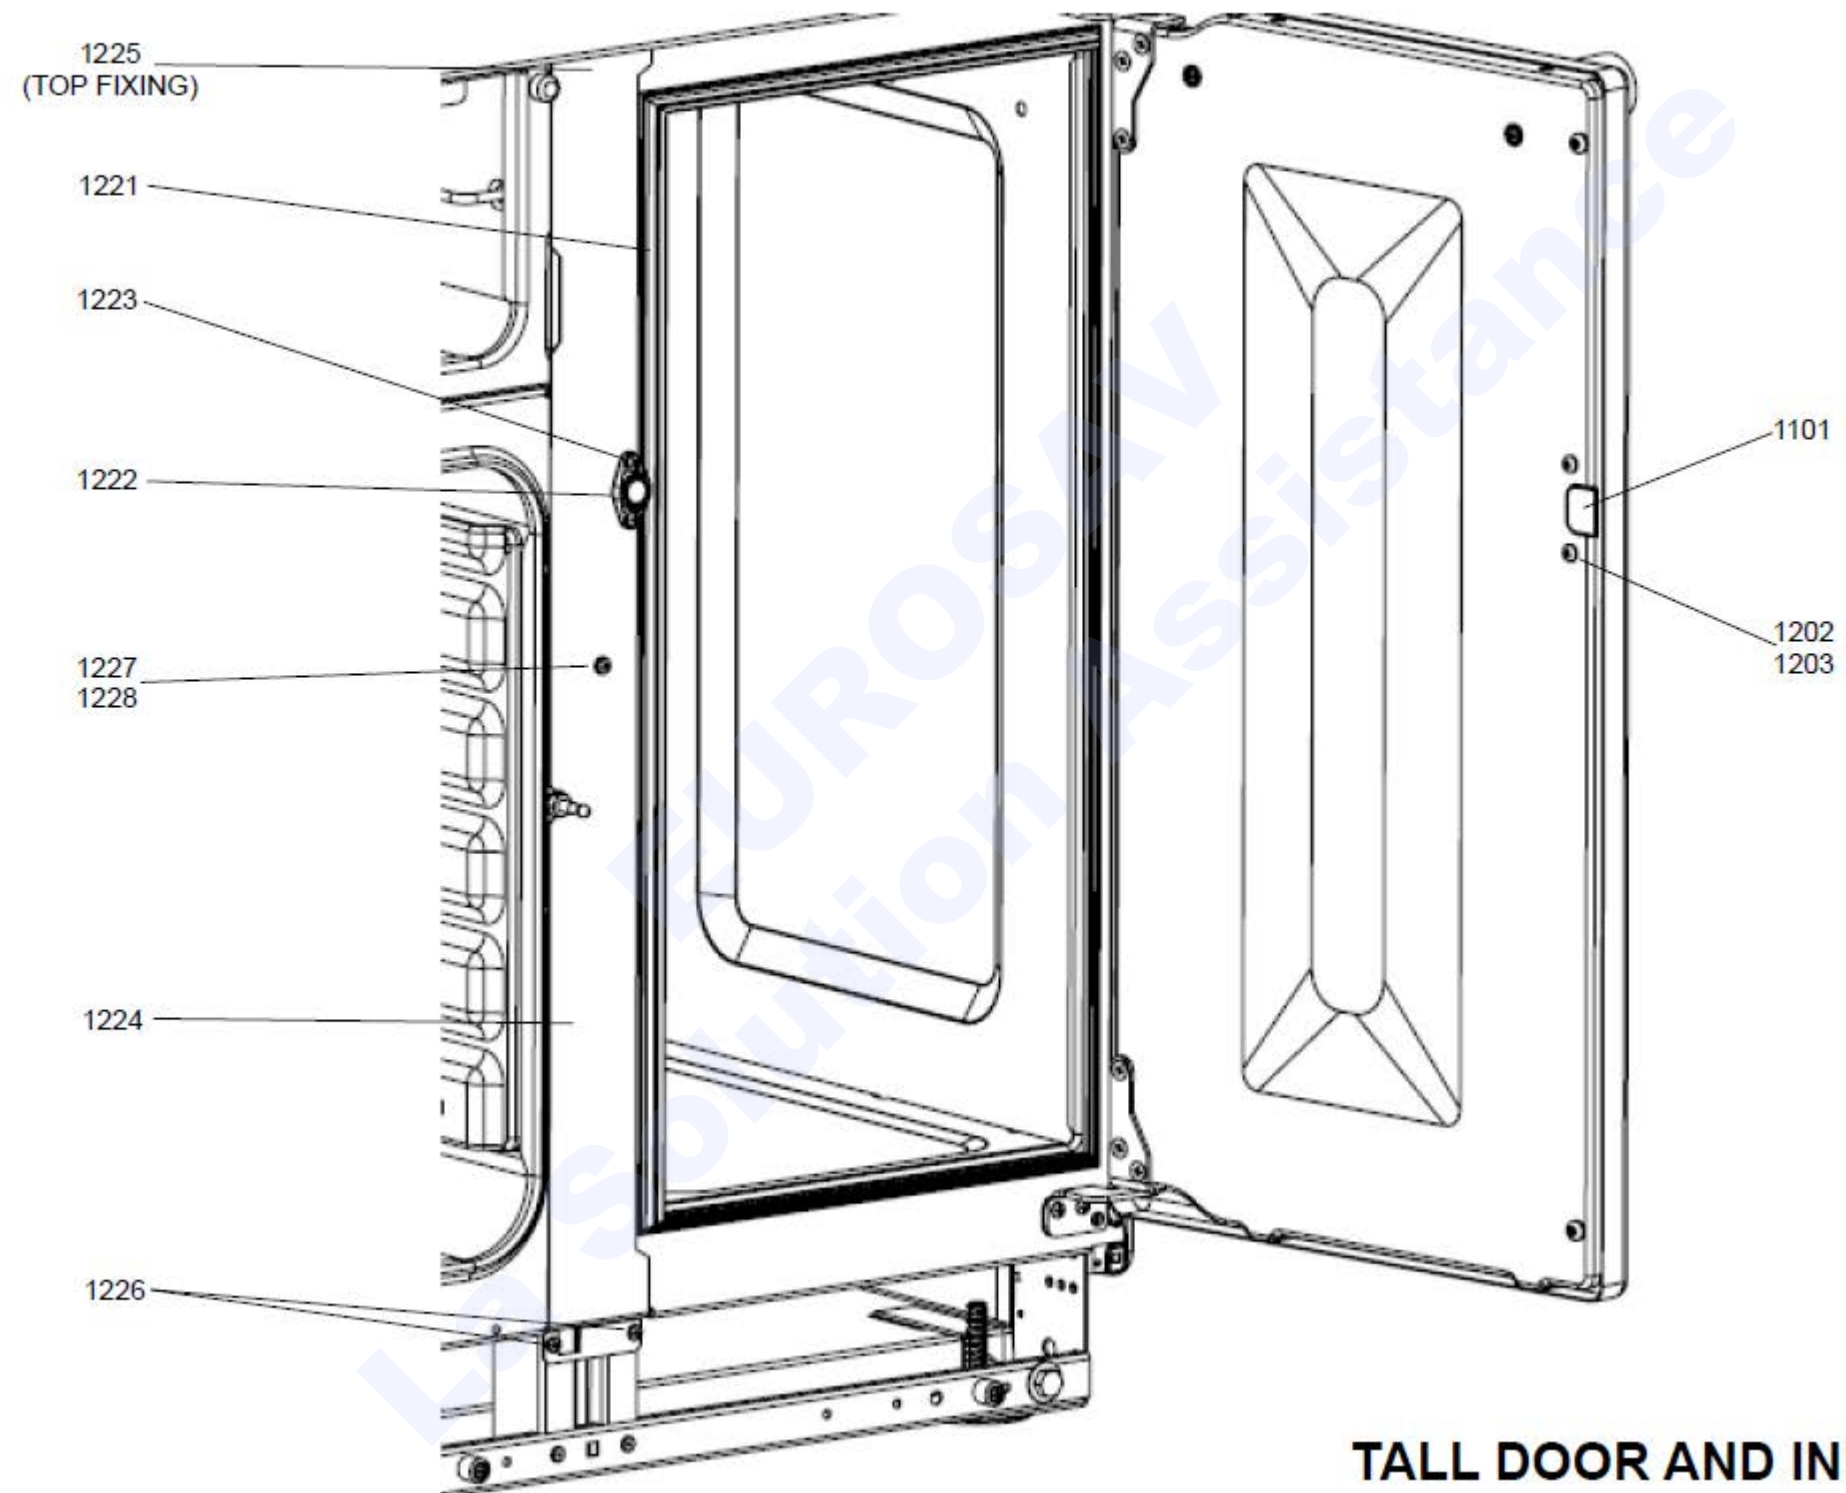

**TALL DOOR AND INFILL PLATE**

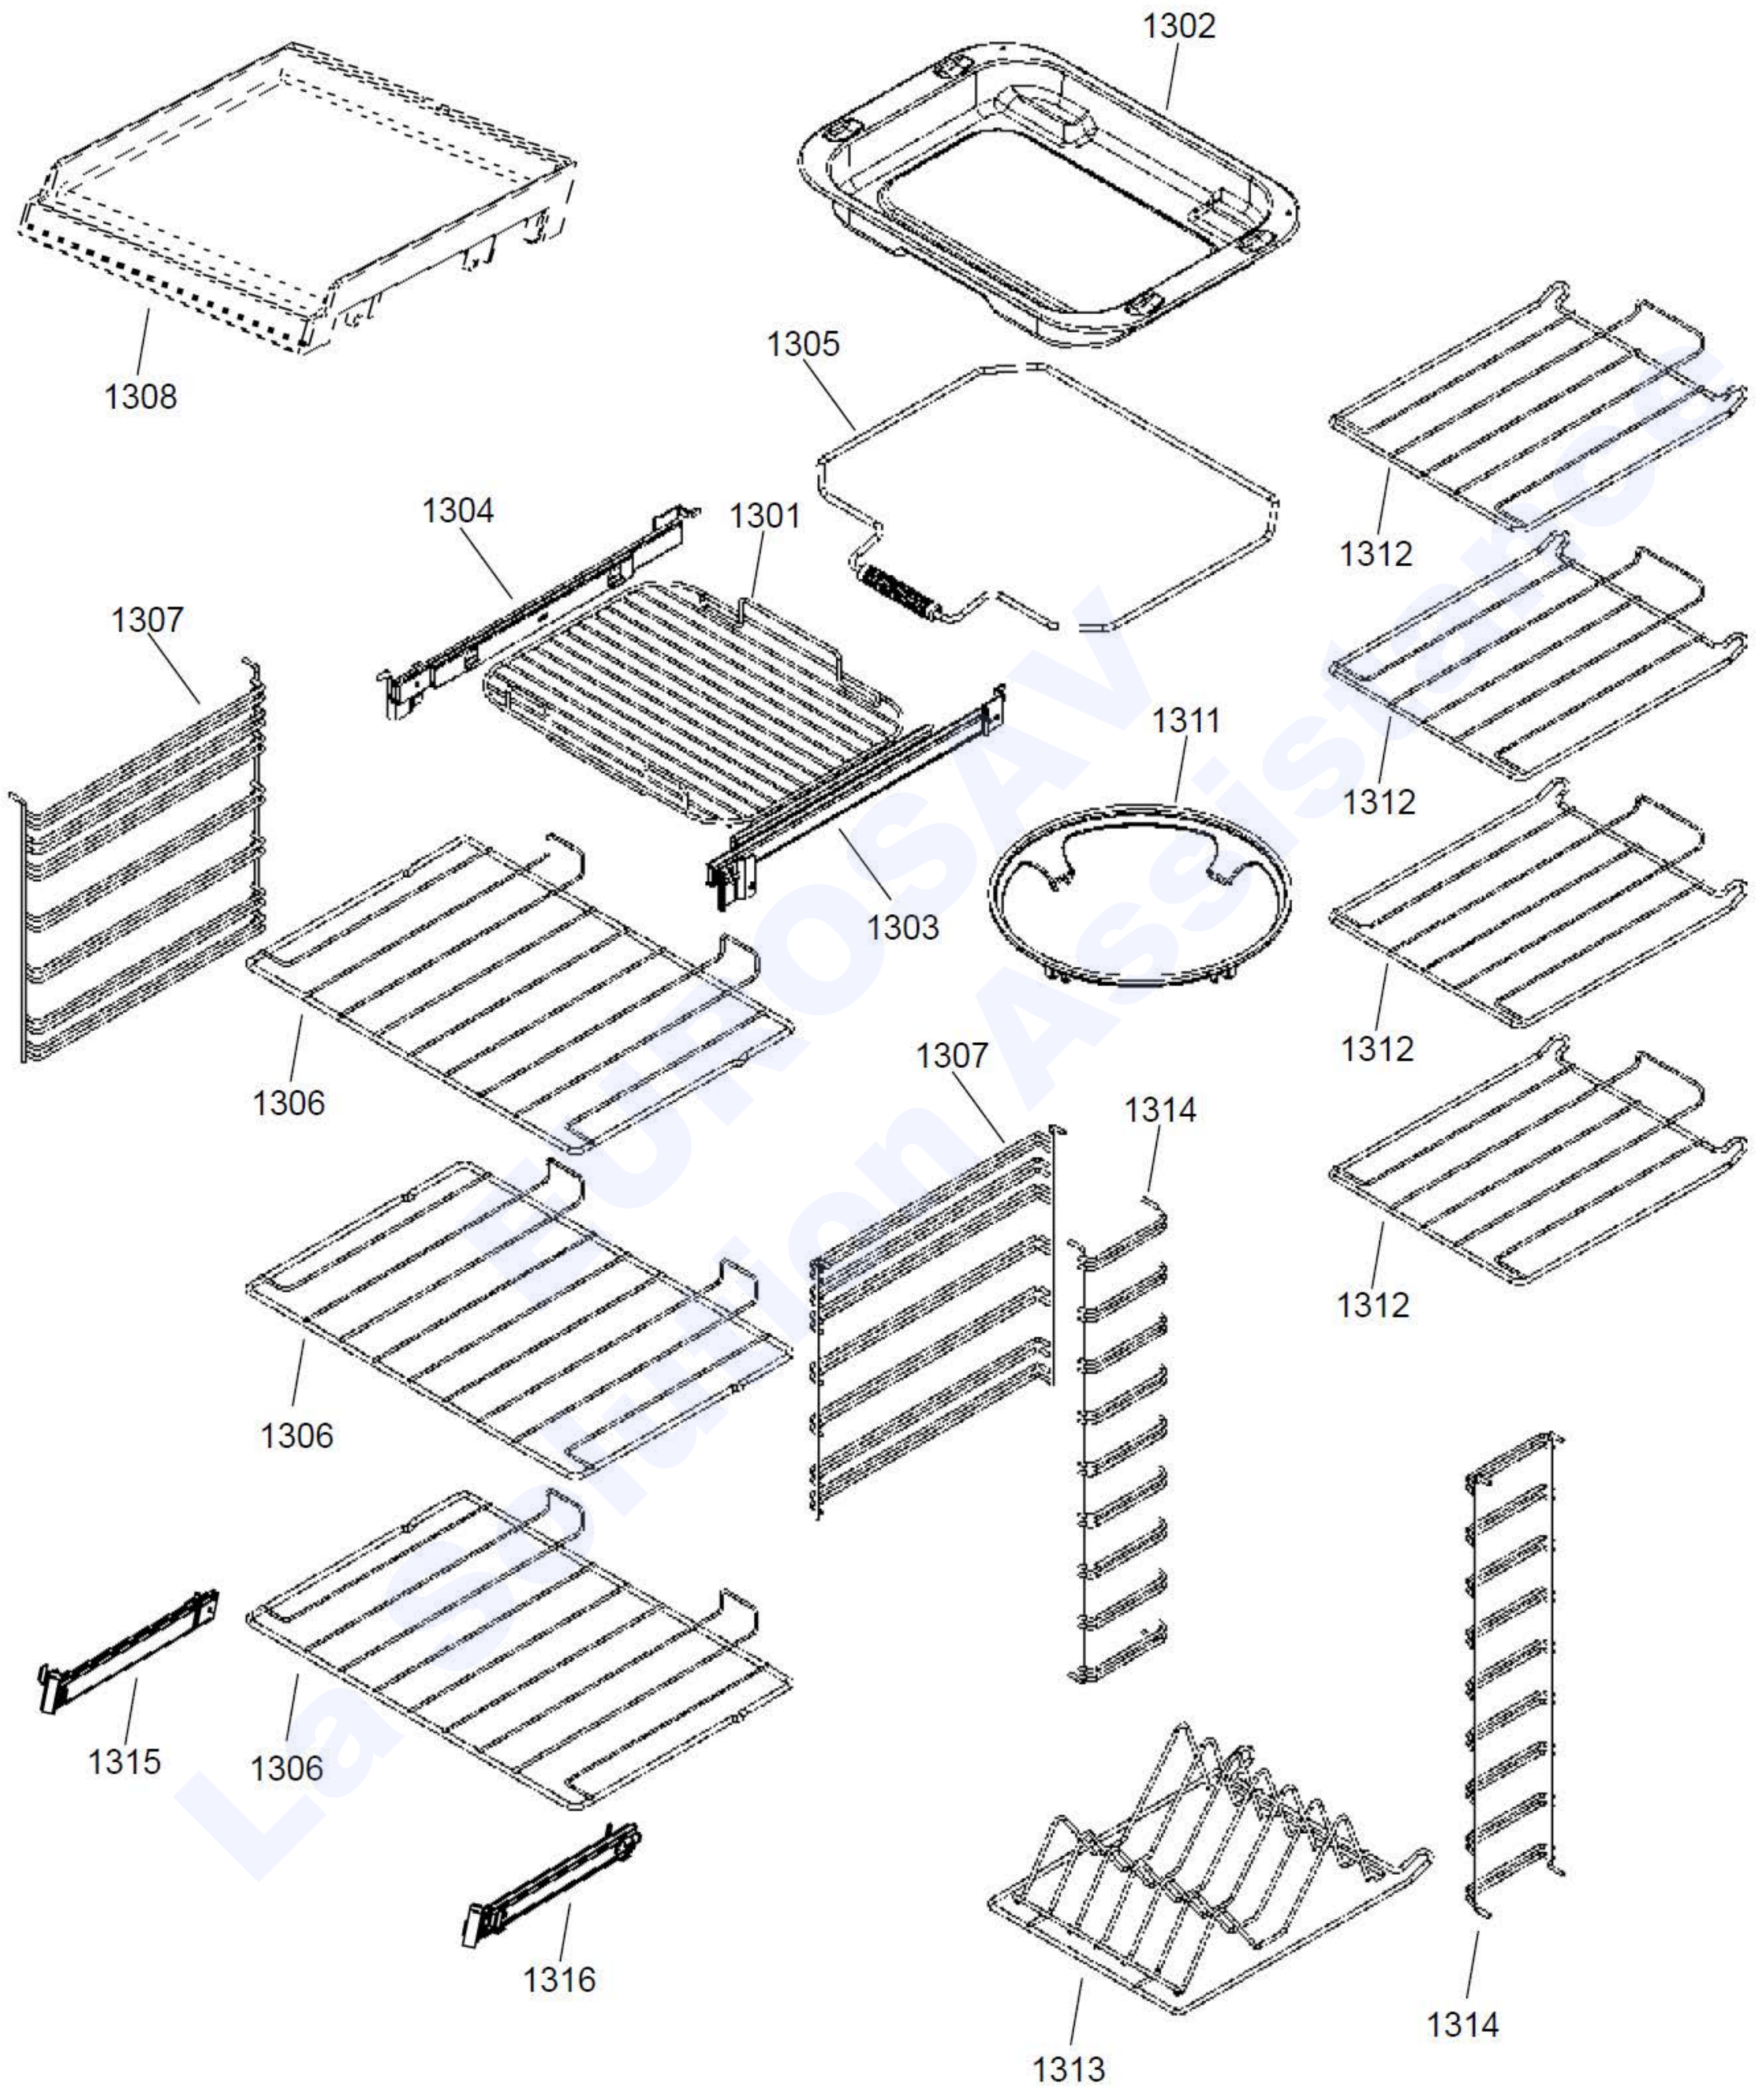

**ACCESSORIES**

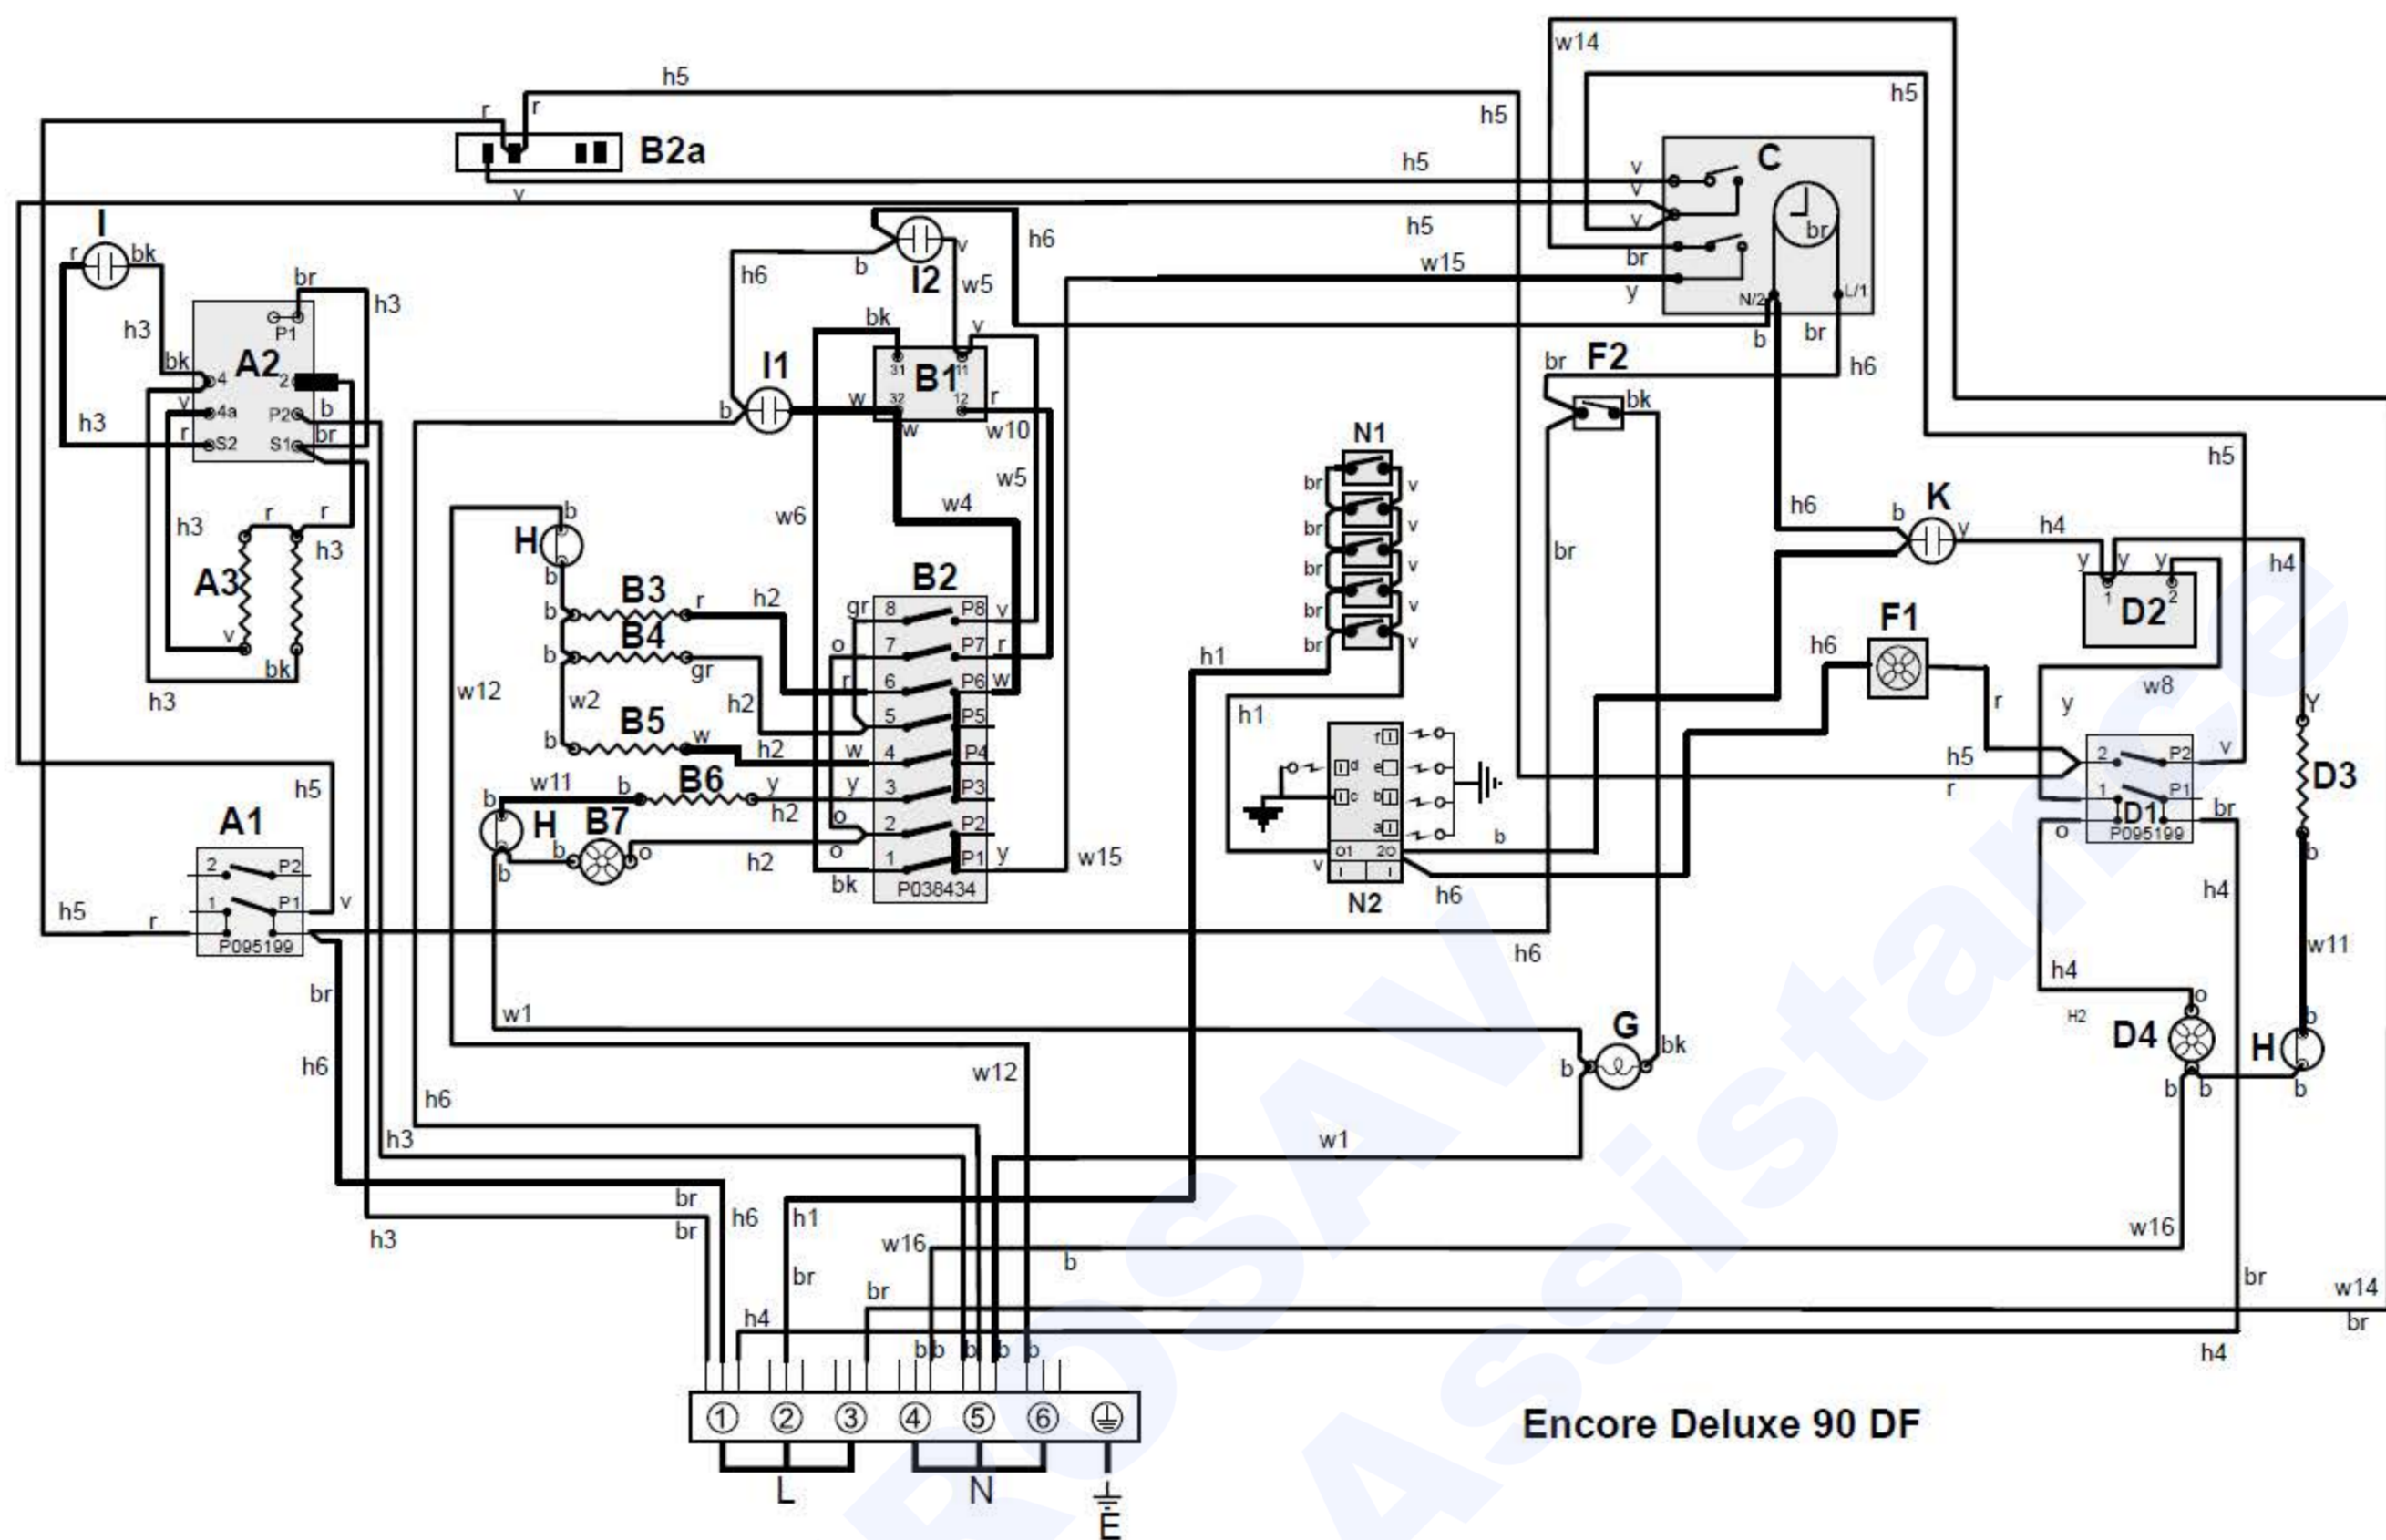

**Encore Deluxe 90 DF**

Ref N°	Part N°	Quantity	Description
w1	P043964	1	WIRE 3 LINK RETURN LH OVEN
w2	P040694	1	WIRE ASSEMBLY - NEUTRAL BLUE DAISY
w3	P055374	2	NI - WIRE ASSEMBLY EARTH
w4	P064455	1	WIRE ASSEMBLY
h1	P064817	1	HARNESS IGN
h2	P064444	1	HARNESS - MF OVEN RAPID HEAT
h3	P064445	1	HARNESS - GRILL
h4	P064454	1	FANNED OVEN HARNESS
w5	P064457	1	WIRE ASSY VIOLET
w6	P038186	1	LINK TRIPLE REG. / SWITCH
w7	P049242	1	NI - HT HARNESS
w8	P037863	1	WIRE ASSEMBLY
w9	P049241	1	NI - WIRE ASSEMBLY
w10	P094951	1	WIRE ASSEMBLY
w11	P040066	2	WIRE ASSY - NEUTRAL-LINK T'CUT OUTS
w12	A094947	1	WIRE ASSEMBLY - LH FAN NEUTRAL EL CUT OUT
w13	P094943	2	NI - WIRE ASSEMBLY - EARTH
h5	P064447	1	HARNESS - COOLING FAN
w14	P064448	1	BROWN LINK - TB TO TIMER RELAY
w15	P048632	1	YELLOW LINK TIMER LH OVEN SWITCH
h6	P065746	1	HARNESS AUX RAPID TALL
w16	P095443	1	WIRE ASSEMBLY NEUTRAL
w17	P033677	1	NI - WIRE ASSEMBLY - EARTH
w18	P027672	1	NI - WIRE ASSEMBLY - EARTH

Code	Description
A1	Grill Front Switch
A2	Grill Energy Regulator
A3	Grill Elements
B1	Multi Function Oven Thermostat
B2	Multi Function Oven Control
B2a	Multi Function Oven Thermostat Front Switch
B3	Left Hand Multi Function Oven Base Element
B4	Left Hand Multi Function Oven Top Element (Outer Pair)
B5	Left Hand Multi Function Oven Top Element (Inner Pair)
B6	Left Hand Multi Function Oven Fan Element
B7	Left Hand Multi Function Oven Fan

Code	Description
C	Clock / Timer
D1	Right Hand Fan Oven Thermostat
D2	Right Hand Fan Oven Control
D3	Right Hand Fan Oven Element
D4	Right Hand Fan Oven Fan
F1	Cooling Fan
F2	Oven Light Switch
G	Oven Light (S)
H	Thermal Cut Out
I	Grill Neon
I1	Multi Function Neon
I1	Rapid Heat Neon
K	Right Hand Oven Neon
N1	Ignition Switches
N2	Ignition Spark Generator

Code	Colour
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
g/y	Green/yellow
gr	Grey