


OVEN PARTS
UP TO SERIAL NUMBER 166999


ALL MODELS


DATE 28.11.11

DSL0489 P06


ISSUE STATUS 01

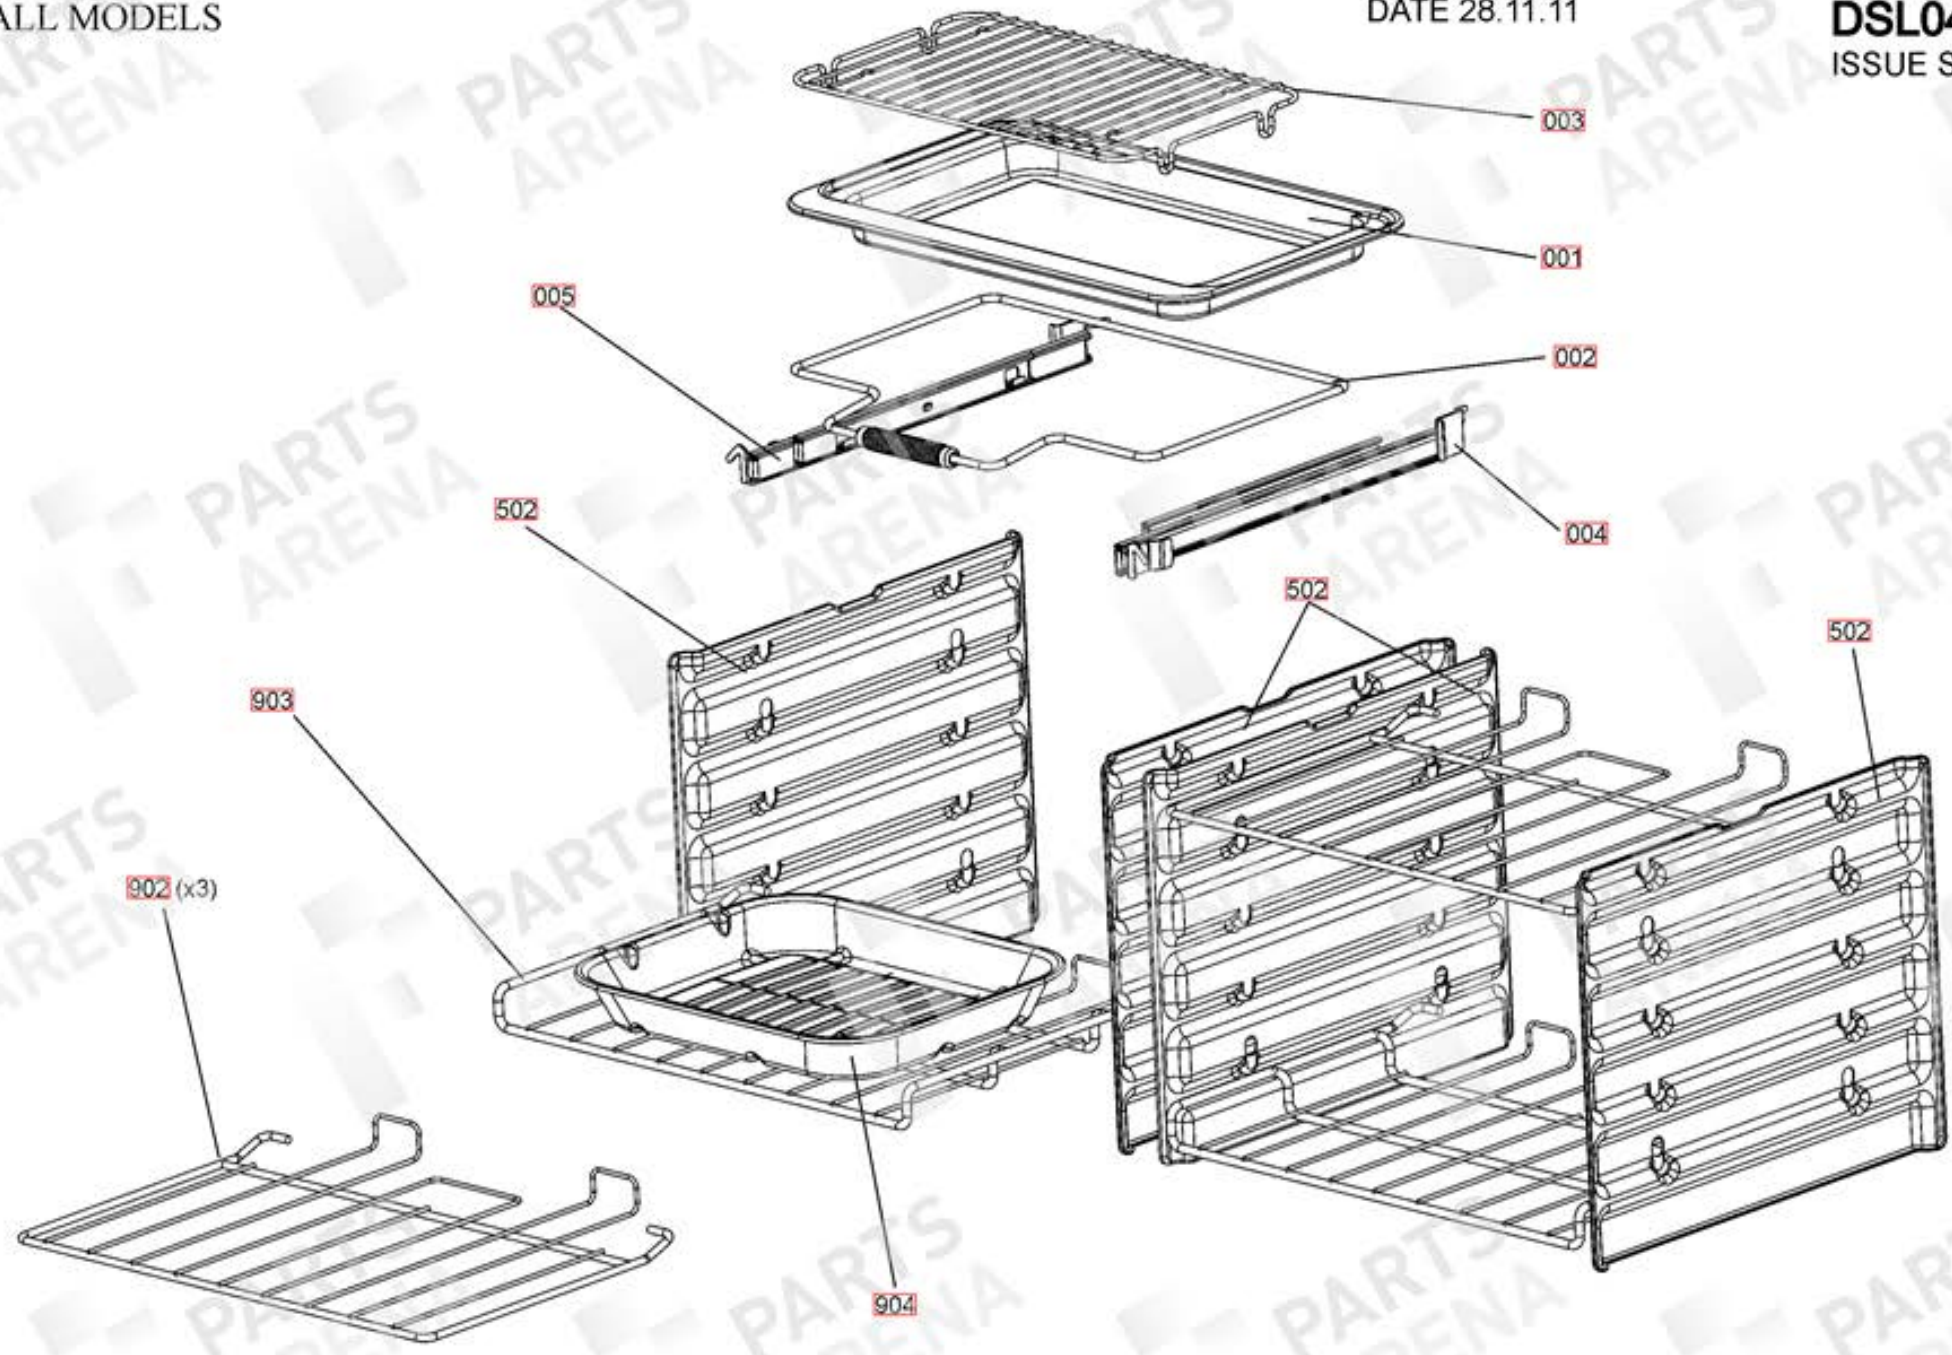

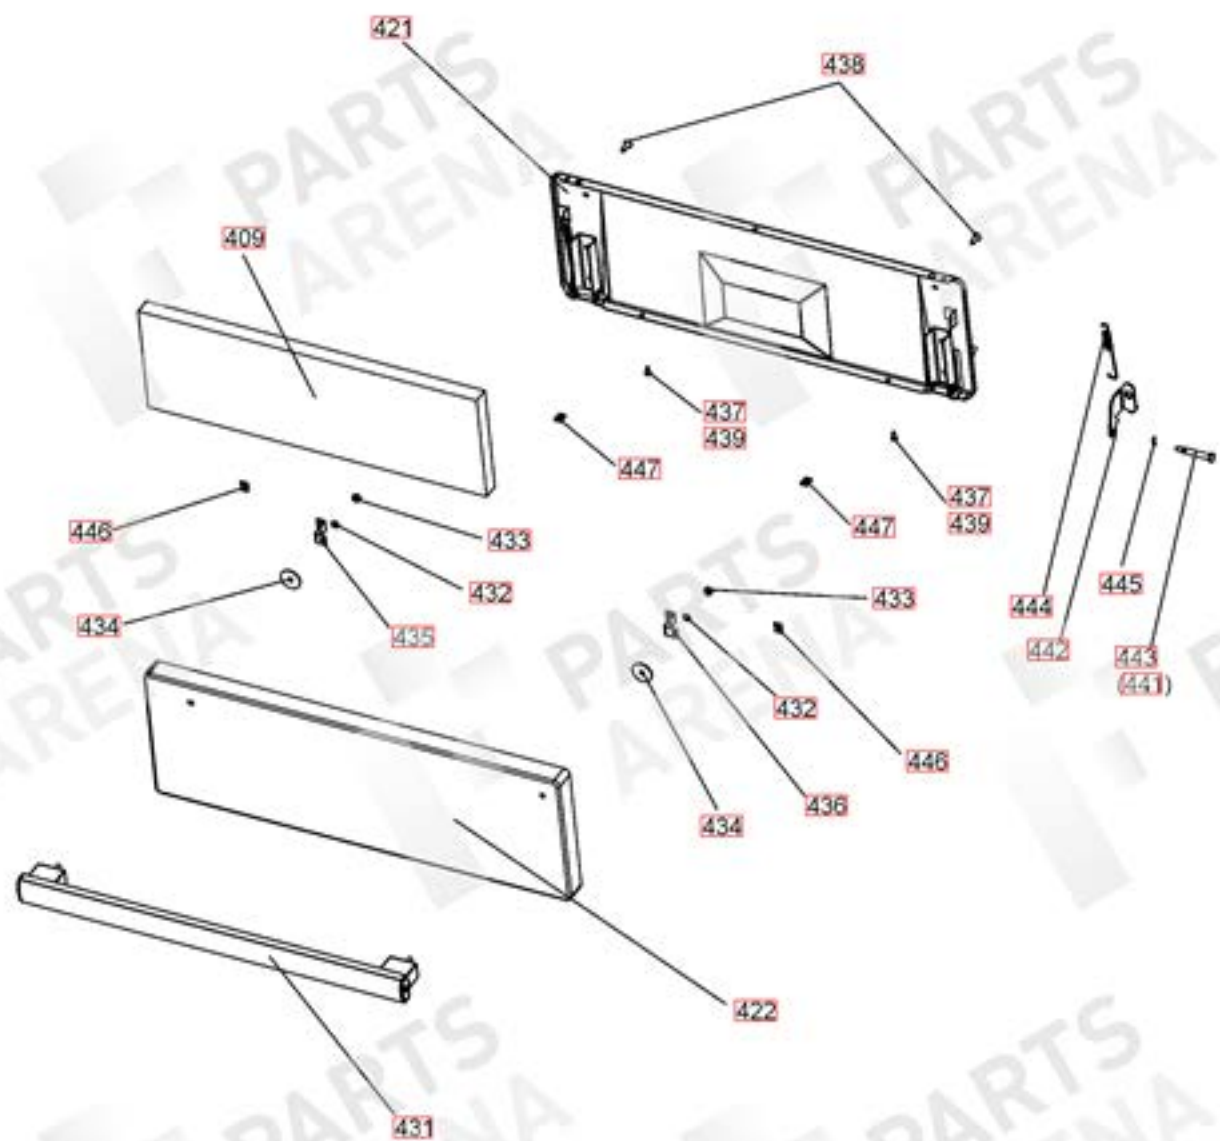


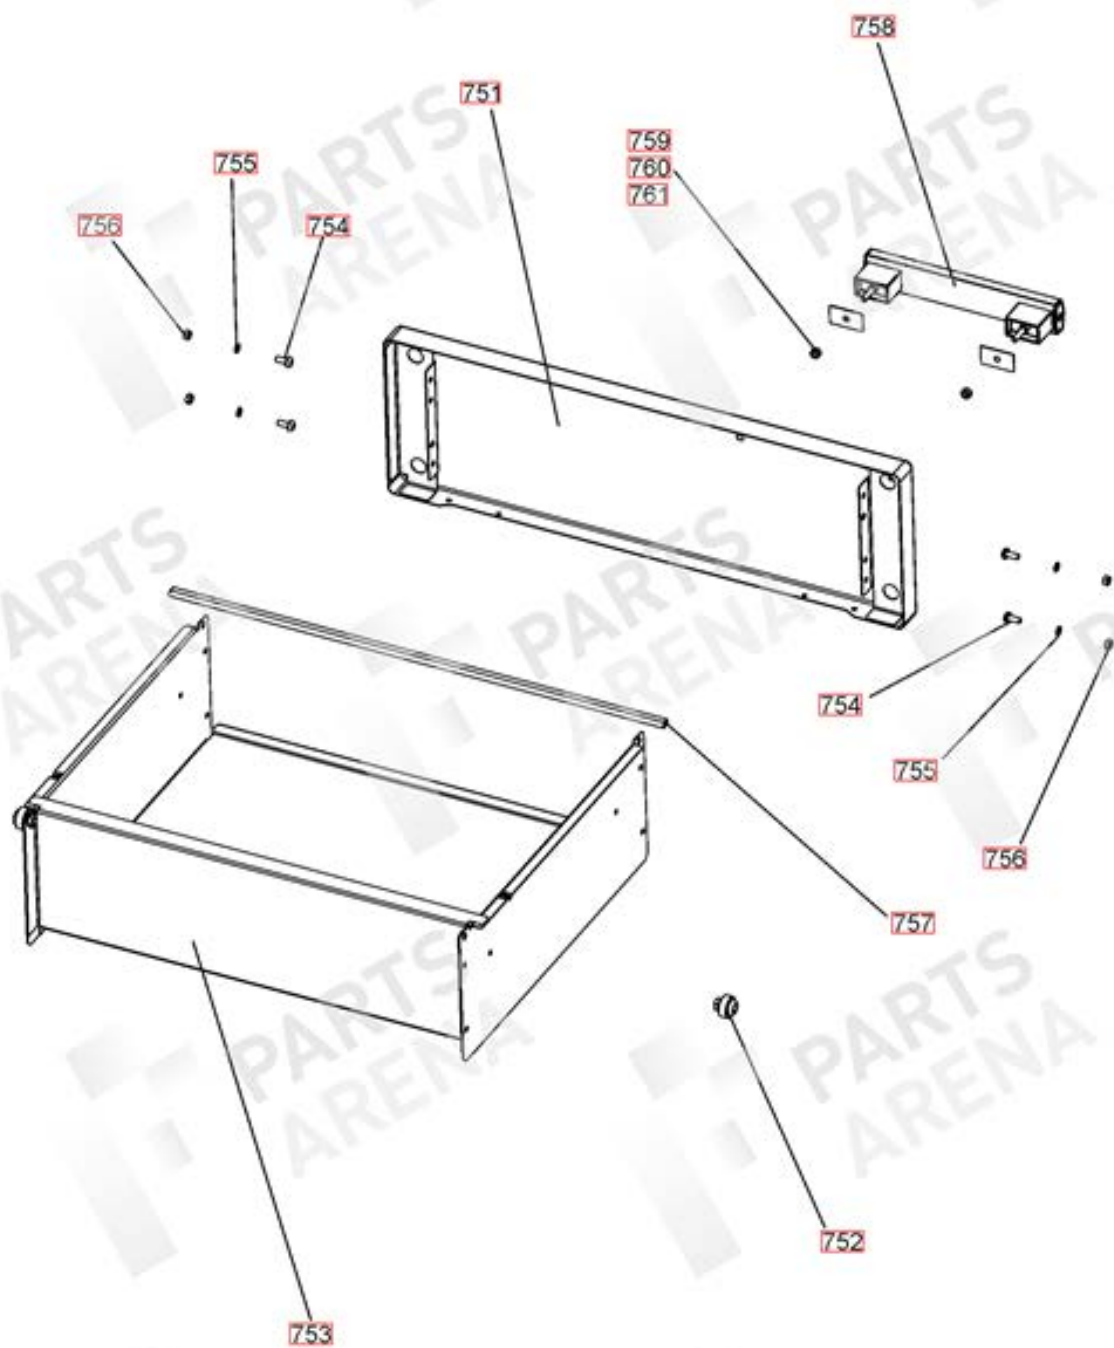


LH DOOR

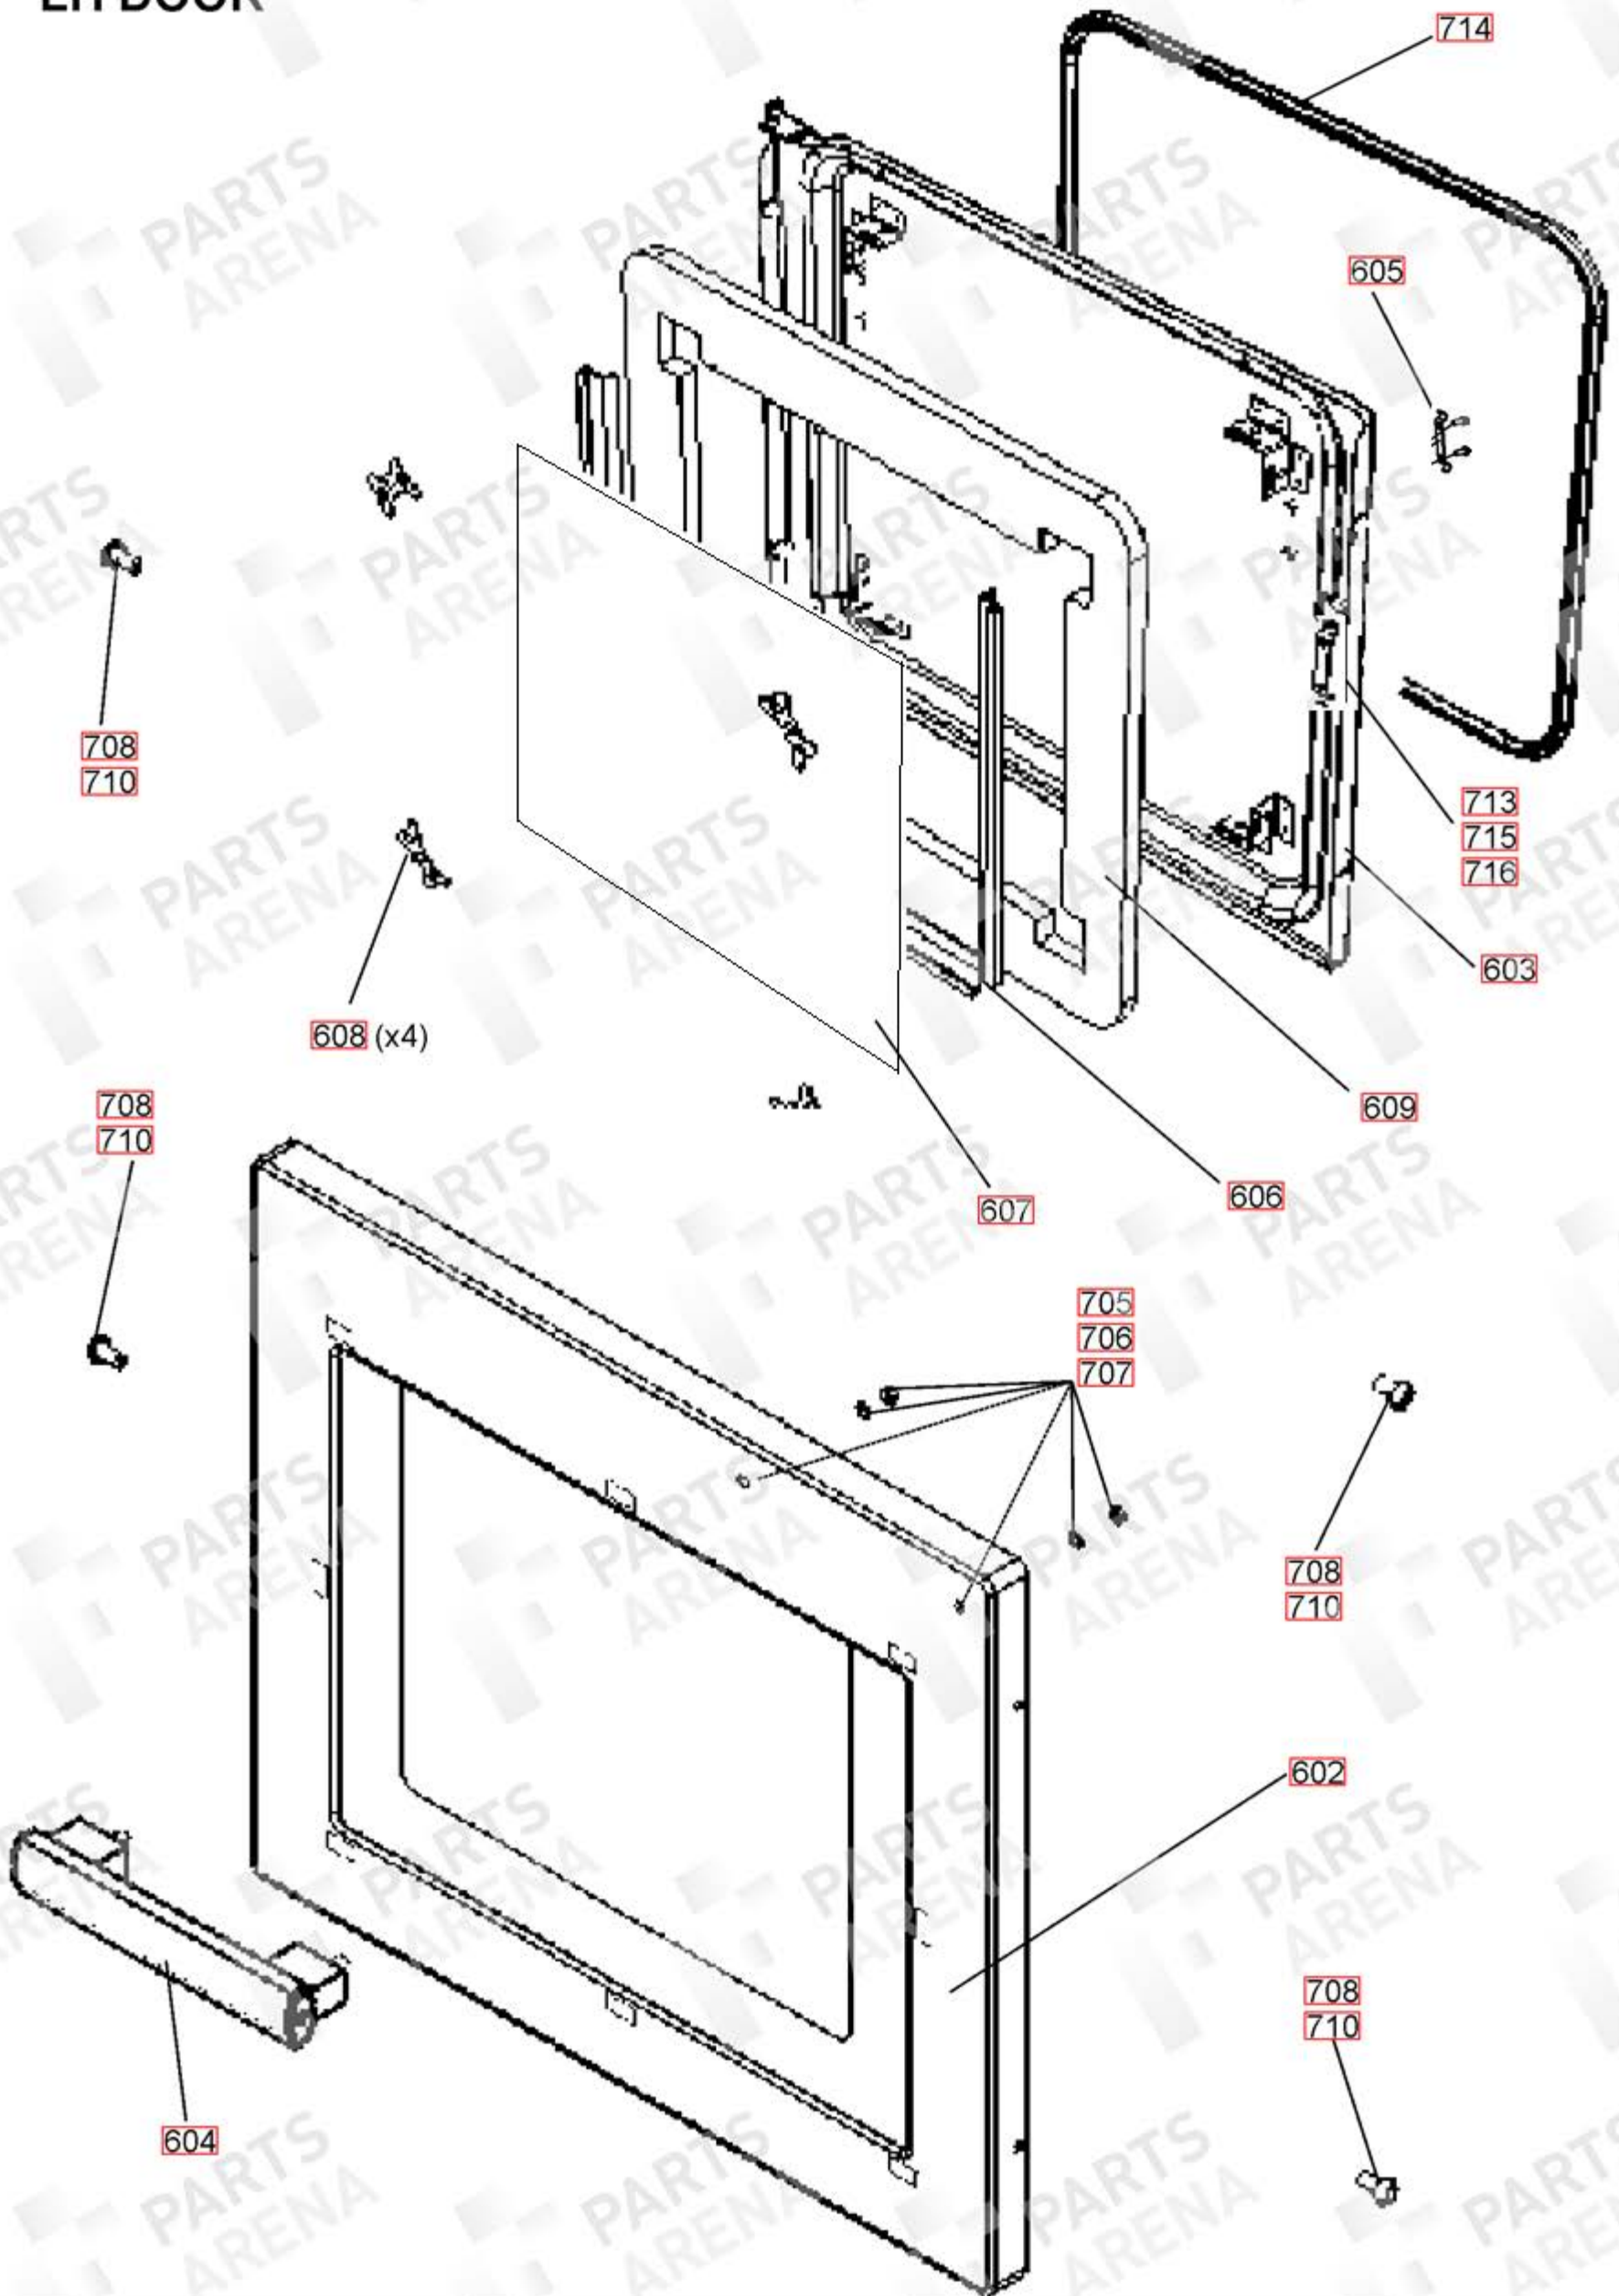

R H DOOR

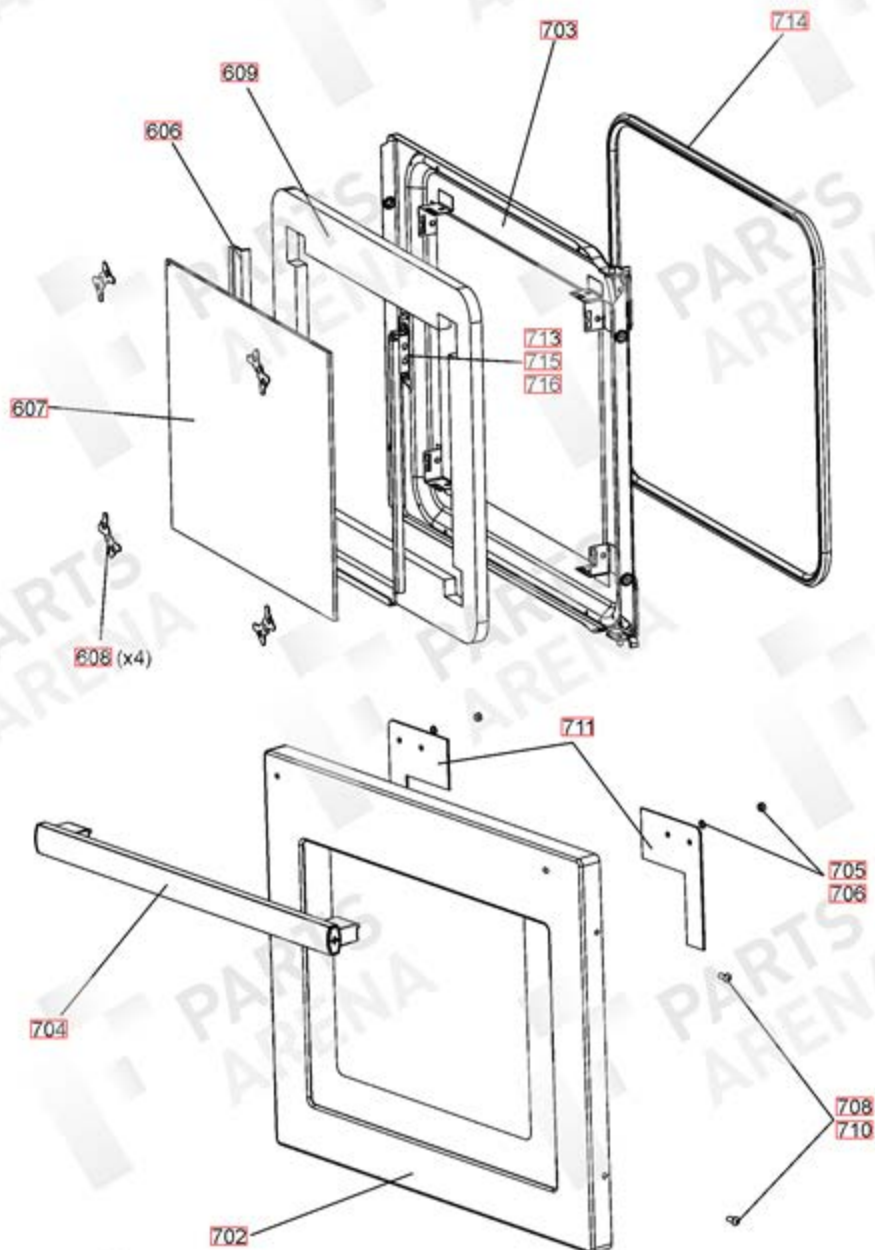

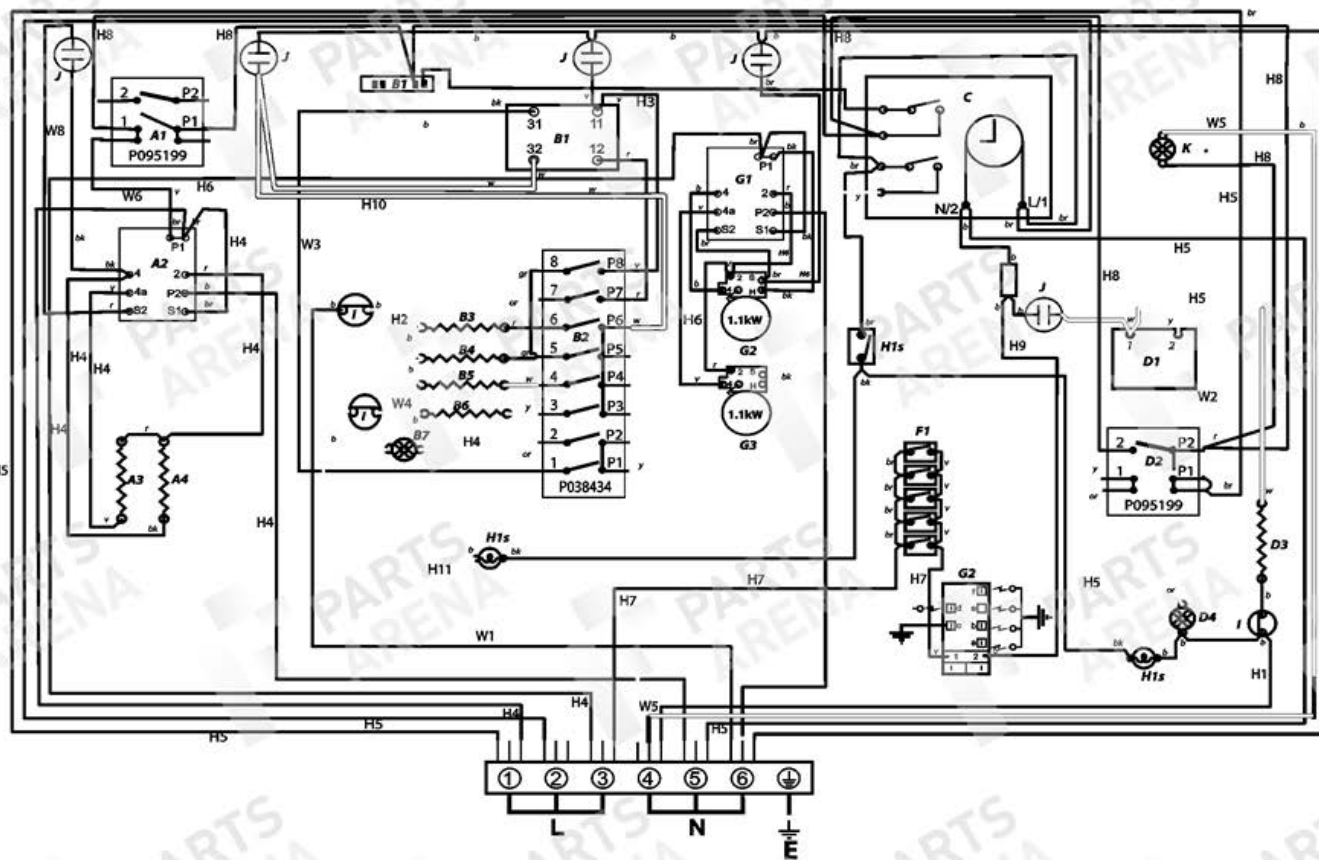

Key No.	Ref No.	Part No.	Quantity	Remarks
822	H1	P025995-05	1	RH Neutral links
824	Ni	P026793-01	1	Wire Assy LH Earth link
821	W1	P033073-02	1	Cut-out Neutral link
833	H2	P050986-01	1	Multifunction Neutral links
813	H3	P033367-02	1	Violet wire assy
820	W2	P037863-01	1	Wire Assy
811	H4	P038592-03	1	LH Harness
812	H5	P038593-02	1	RH Harness
815	H6	P038594-01	1	Griddle Harness
818	W3	P038597-02	1	Wire M/F SW-T'Stat Black Link
826	W4	P040066-03	2	Oven LVD Neutral Links
816	H11	P040694-01	1	Neutral wire daisy chain
834	W8	P040719-01	1	Grill to neon feed.
819	Ni	P049241-01	1	Spark Gen Earth
826	Ni	P049242-01	1	HT Harness
828	H7	P049254-02	1	Ignition Harness
832	H8	P052810-01	1	Cooling Harness
835	W5	P052815-02	1	Cooling Fan Neutral
831	W6	A052828-01	1	Cooling Supply link
827	Ni	P055374-02	2	Grill Earth
823	Ni	P094943-01	2	RH Stat earth, Hob earth
830	H9	P094945-04	1	Spark gen neutral
817	W7	P094951-02	1	Wire assy
825	Ni	P095450-04	1	RH Earth Link
814	H10	P095565-04	1	Wire Assy

Code	Colour
b	Blue
br	Brown
bk	Black
or	Orange
r	Red
v	Violet
w	White
y	Yellow
g/y	Green/Yellow
gr	Grey

Hi	= Not Illustrated
W	= Single Wire
H	= Multi wires

Code	Component
A1	Grill front Switch
A2	Grill Control
A3	LH grill element
A4	RH grill element
B1	LH oven stat
B1a	LH stat switch
B2	LH M/F oven switch
B3	LH oven base element
B4	LH oven top element
B5	LH oven browning elem't
B6	LH fan element
B7	LH oven fan
C	Clock/timer
D1	RH oven stat
D2	RH oven control switch
D3	RH oven fan element
D4	RH oven fan
F1	Ignition switch
G1	Ceramic Hob Control
G2/3	Ceramic Elements
H1s	Light switch
H2s	Oven light
I	Thermal cut-out
J	Neon
K	Cooling fan