

NO Frost

°C



-16

-18

-20

-22

-24




SET

CODES ERREURS	
Codes erreurs (Voyants)	SIGNIFICATION
 / -16	Défaut sonde congélateur
 / - 20	Défaut sonde dégivrage
 / - 24	Défaut sonde ambiant
 	Défaut communication

Valeurs sonde de température							
T(°C)	R(kΩ)	T(°C)	R(kΩ)	T(°C)	R(kΩ)	T(°C)	R(kΩ)
-30	33.81	-20	18.9	0	6.495	5	5.06
-28	30.01	-18	16.9	1	6.175	6	4.818
-26	26.68	-16	15.12	2	5.873	8	4.372
-24	23.76	-10	10.92	3	5.587	10	3.972
-22	21.18	-5	8.392	4	5.315	15	3.141

La solution assistance

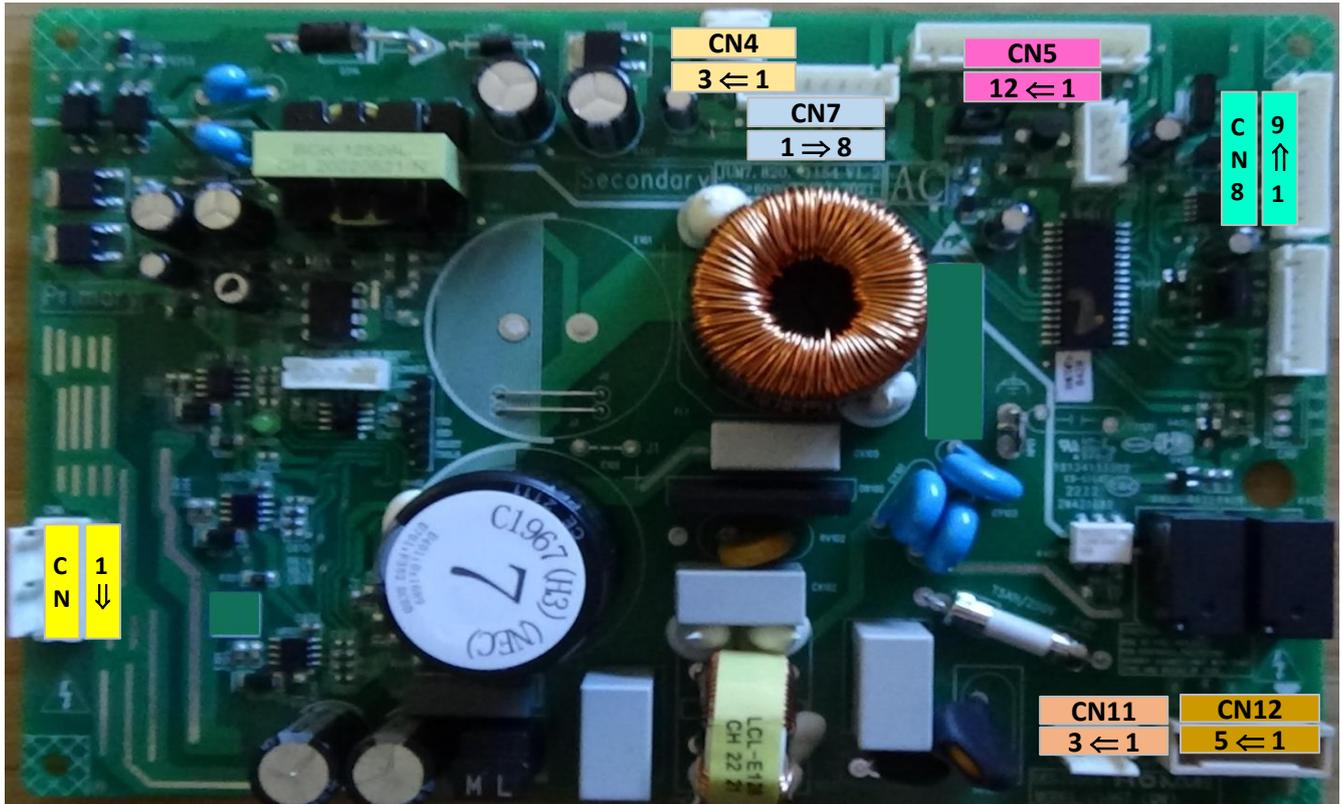

CN4	1	+12V	Afficheur	CN8	1	GND	Ventilateur
	2	R/S			2	FB	
	3	GND			3	FAN	
CN7	1	-	-	4	-	-	
	2	-	-	5	-	-	
	3	-	-	6	-	-	
	4	-	-	7	-	-	
	5	LD	Sonde congélateur	8	-	-	
CN5	6	LDZF	Sonde évaporateur	9	-	-	
	7	-	-	1	N	Neutre	
CN5	8	-	-	2	-	-	
	1	-	-	3	Hsjrq	Résistance dégivrage	
	2	-	-	4	Fnljrq	-	
	3	-	-	5	Jsjq	-	
	4	-	-	1	W	Compresseur	
	5	LED	Éclairage	2	-	-	
	6	-	-	3	V	Compresseur	
	7	-	-	4	-	-	
	8	-	-	5	U	Compresseur	
	9	-	-	1	L	Phase	
	10	-	-	2	-	-	
	11	Door A	Interrupteur de porte	3	N	Neutre	
12	-	-					