




Liste codes erreurs



CODES ERREUR	DESCRIPTION	VÉRIFICATION
E1	Température haute	Sonde de température, platine de commande
E3	Défaut sonde de température	Sonde de température ouvert
E4	Défaut sonde de température	Sonde de température coupé

VALEURS SONDÉS TEMPERATURES									
T (°C)	R (kΩ)	T (°C)	R (kΩ)	T (°C)	R (kΩ)	T (°C)	R (kΩ)	T (°C)	R (kΩ)
10	9.6774	30	3.8990	50	1.7437	70	0.8474	90	0.4432
15	7.6313	35	3.1613	55	1.4453	75	0.7158	95	0.3812
20	6.0571	40	2.5782	60	1.2040	80	0.6071	100	0.3289
25	4.8385	45	2.1146	65	1.0078	85	0.5171		

La solution assistance

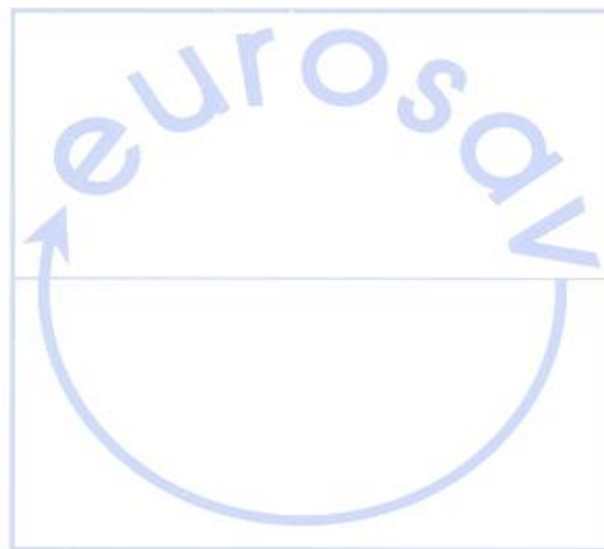

La solution assistance